masku

GENERAL DYNAMICS/CONVAIR

Feb. 28/62

INSTRUCTION COVER SHEET

TO:

All Holders of

ILLUSTRATED PARTS CATALOG

Model 22-2

DAL

CS-59-060


SUBJECT:

COMPLETE REPLACEMENT - CHAPTER 93

Dated Feb. 10/62

61

Remove and destroy all pages now in your manual for Chapter 93. Insert the attached pages to replace those pages just removed.



INSTRUCTION COVER SHEET

TO:

All Holders of

ILLUSTRATED PARTS CATALOG

Model 22-2

DAL

CS-59-060

SUBJECT:


REVISED PAGES - CHAPTER 93

Revision 2 dated June 12/64

3/1

The attached pages provide replacement, revised or new pages to your present chapter.

The List of Effective Pages reflects current pages this chapter should contain.



INSTRUCTION COVER SHEET

TO:

All Holders of

ILLUSTRATED PARTS CATALOG

Model 22-2

DAL

CS-59-060

SUBJECT:


REVISED PAGES - CHAPTER 93

Revision No. 3 Dated Oct. 23/64

3

The attached pages provide replacement, revised or new pages to your present chapter.

The List of Effective Pages reflects current pages this chapter should contain.






LIST OF EFFECTIVE PAGES

Chapter 93 <u>ELECTRONIC HARNESSES</u>

CHAPTER	PAGE	DATE	CODE	CHAPTER	PAGE	DATE	CODE
*V-93	i BLANK 1	Oct. 23/64 Feb. 6/61	C-3	93 - 3 93-3 93-3	2 3 4	Feb. 10/62 Feb. 10/62	C-l C-l NA
93-0 *93-0 *93-0 93-0	2 3 4 5 BLANK	Feb. 10/62 Oct. 23/64 Oct. 23/64 Feb. 10/62	A-1 C-3 C-3 C-1	93-3 93-3 93-3 93-3	BLANK 6 7 8 9	Feb. 6/61 Feb. 10/62 Feb. 6/61 Feb. 10/62	C C-1 C C-1
93-1 93-1 93-1 93-1 93-1	1 2 3 4 5 6 BLANK	Feb. 6/61 Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62	A C-1 C-1 A-1 C-1 NA	93-4 93-4 93-4 93-4 93-4 93-4	BLANK 1 2 3 4 5	Feb. 6/61 Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62	A C-1 C-1 C-1 C-1
93-1 93-1 93-1	8 9 10	Feb. 6/61 Feb. 10/62	C C-l NA	93-4 93-4	7 8 BLANK	Feb. 10/62 Feb. 10/62	C-1 C-1
93-1 93-1 93-1	11 12 13	Feb. 6/61 Feb. 10/62	NA A C-1	93-4 93-4	10 11 BLANK	Feb. 10/62 Feb. 10/62	C-1 C-1
93-1 93-1 93-1	14 15 16 BLANK	Feb. 6/61 Feb. 10/62	C C-1 NA	93-5 93-5 93-5 93-5	1 2 3 4	Feb. 6/61 Feb. 10/62 Feb. 10/62 Feb. 10/62	A C-1 A-1 C-1
93-1 93-1 93-1	18 19 20	Feb. 6/61 June 12/64 Feb. 6/61	A C-2 A	93-5 93-5	BLANK 6 7	Feb. 10/62 Feb. 10/62	C-1 C-1
93-1 93-1 93-1	21 22 23 BLANK	Feb. 10/62 Feb. 6/61 Feb. 10/62	C-1 A C-1	93-6 93-6 93-6	BLANK 1 2 3	Feb. 6/61 Feb. 10/62 Feb. 10/62	A C-1 C-1
93-2 93-2 93-2	2	Feb. 6/61 Feb. 6/61 Feb. 10/62	A A C-1	93-6 93-6	3 4 5 BLANK	Feb. 6/61 Feb. 10/62	C C-1
93-2 93-2 93-2 93-2	4 5 6 7	Feb. 10/62 Feb. 10/62 Feb. 6/61 Feb. 10/62	A-1 C-1 A C-1	93-7 93-7 93-7	1 2 3 BLANK	Feb. 10/62 Feb. 10/62 June 12/64	A-1 C-1 A-2
93-3	BLANK 1	Feb. 10/62	A-1				

NA = Not Applicable

^{*}Pages revised, added or deleted by this revision.





SECTION V

Chapter 93 ELECTRONIC HARNESSES

TABLE OF CONTENTS

CHAPTER- SUBJECT		FIGURE
93-1	FLIGHT COMPARTMENT ELECTRONIC HARNESSES Pilot and Copilot Console Electronic Harnesses Pilot and Copilot Forward Pedestal	1
	Electronic Harnesses Pilot and Copilot Pedestal Electronic Harnesses Flight Engineer Station Electronic Harnesses	2 3 4 5
	Circuit Breaker Panel Electronic Harnesses RH Forward Stewardess Station Electronic Harnesses RH Forward Stewardess Station and Coat Closet	5
	Electronic Harnesses	7
	Electronic Harnesses	8
93-2	CABIN ELECTRONIC HARNESSES Hatrack Speaker Electronic Harnesses	57
	Station 432 to 697	1
	Station 659 to 888	2
	Station 926 to 1230	3
93-3	FUSELAGE NOSE ELECTRONIC HARNESSES Fuselage Nose Electronic Harnesses	
	Forward Flight Deck	1
	Nose Wheel Well Bay Electronic Harnesses LH Underfloor Electronic Harnesses	2
	Station 179 to 260 RH	3



TABLE OF CONTENTS (CONT)

CHAPTER- SUBJECT		FIGURE
93-4	ELECTRICAL AND ELECTRONIC COMPARTMENT ELECTRONIC HARNESSES Electrical and Electronic Compartment	
8:	Electronic Harnesses RH Electrical and Electronic Compartment Rack	1
	Electronic Harnesses LH Electrical and Electronic Compartment	2
	Electronic Harnesses LH	3
93-5	FUSELAGE FORWARD UNDERFLOOR ELECTRONIC HARNESSES	
	Fuselage Forward Underfloor Electronic Harnesses	
	Forward Cargo Area Station 323 to 622 Fuselage Forward Underfloor Electronic Harnesses	1
	Overwing Area and Above Wheel Well	2
93-6	FUSELAGE AFT UNDERFLOOR ELECTRONIC HARNESSES	
	Fuselage Aft Underfloor Electronic Harnesses	
	Station 926 to 1590 LH	1
	Fuselage Aft Underfloor Electronic Harnesses	_
	Station 926 to 1590 RH	2
93-7	VERTICAL STABILIZER ELECTRONIC HARNESSES	
	Vertical Stabilizer Electronic Harnesses	1



PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	OTY. PER ACFT,	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	OTY PER ACF
22-31806	93-1 93-3	2-6 1-6		22-31922	93-1 93-3	2-12 1-12	1
22-31807	93-3 93-4 93-1 93-3	2-6 2-6 2-7 1-7	4	22-31923	93-4 93-1 93-3 93-4	1-12 2-13 1-13 1-13	
22-31808	93-3 93-4 93-1 93-3	2-7 2-7 2-8 1-8 2-8		22-31965 22-31968 22-31969	93-3 93-4 93-4 93-4	1-81 1-81 1-109 1-108	ß
22-31809	93-3 93-4 93-1 93-3	2-8 2-9 1-9	ŀ	22-31970 22-31971	93-1 93-3 93-4 93-4	2-14 1-14 1-14 1-107	
22-31810 22-31811	93+3 93-4 93-3 93-4	2-9 2-9 1-79.1 2-134.1		22-32722 22-32723 22-32724	93-4 93-4 93-4	2-132 2-130 2-131 3-131	
22-31812 22-31813 22-31849	93-1 93-3 93-4 93-1	3-15 2-93 2-93 1-10		22-32742-801 22-32743 22-32745	93-1 93-1 93-4 93-4	4-24 4-26 1-120 3-120	
	93-3 93-3 93-4 93-4	1-10 2-10 2-10		22-32745-801	93-5 93-4 93-4	1-120 1-120.1 3-120.1	
22-31850 22-31852-805	93-3 93-4 93-3	3-10 1-80 2-80 1-84		22-32752 22-32812	93-5 93-1 93-1 93-4	1-120.1 5-28 5-29 2-29	
22-31853 22-31854 22-31855	93-4 93-4 93-4	2-123 2-129 3-129		22-32815 22-32829	93-4 93-4 93-4	2-133 2-124 3-124	
22-31856	93-4 93-4	1-110		22-32830	93-1 93-1	5-41 6-41	
22-31857	93-3 93-4	2-92 2-92			93-4	1-41 2-41	
22-31859	93-3 93-4	5-8t 5-8t		22-32861 22-32865	93-4 93-1	2-135 5-30	
22-31861-801 22-31864	93-4 93-3 93-3	2-134 1-79.2 1-82		22-32879-801	93-4 93-4 93-4	2-30 2-136 3-136	
22-31885 22-31881-801	93-3 93-1 93-3	1-83 4-23 3-23		22-32880-801 22-32881	93-4 93-4	1-111.1 3-111.1	
22-31889	93-3 93-4 93-1 93-1	1-23 1-11 2-11		22=32899=801 22=32899=801	93-4 93-5 93-4 93-4	3-155 1-155 2-125 1-105	
22-31890	93-3 93-3 93-4 93-1	1-11 2-11 2-11 1-3		22-32901-803 22-32905	93-4 93-4 93-1	2-129.1 3-129.1 5-31	
22-31891 22-31892 22-31893 22-31895-801 22-31900-801	93-1 93-3	1-1.1 3-96.1 1-2 1-4 1-96		22-32906 22-32912 22-32913	93-4 93-4 93-1 93-1 93-4	1-31 2-31 2-137 4-25 2-127	
	93-3	3-96		22-32914-801	93-1 93-3 93-4	1-97 3-97 1-97	
				22-32916	93-1		



22-32917 22-32918		I)	ACFT
22-32926 22-32936 22-32937 22-32944 22-32945 22-32946 22-32972 22-32981 22-32986 22-33741 22-33743 22-33744 22-33745 22-33747 22-33747 22-33747 22-33750 22-33750 22-33751 22-33751 22-33800-801 22-33800-801 22-33801 22-33843-801 22-33845-801 22-33845-801 22-33850-805 22-33867 22-33867-801 22-33867-801 22-33867-801 22-33867-801 22-33870-801 22-33871-801 22-33872-801	93-4 1-101 93-5 1-126.1 93-5 1-115 93-4 1-115 93-4 2-114 93-4 2-113 93-4 2-113 93-4 2-112 93-4 2-112 93-5 1-112 93-6 1-106 93-7 1-116 93-1 1-106 93-1 1-106 93-2 2-102 93-3 1-116 93-4 1-106 93-4 1-106 93-5 1-150 93-6 1-169 93-6 1-169 93-6 1-159 93-6 1-159 93-7 2-151 93-7 2-151 93-8 2-152 93-9 2-152 93-1 1-152 93-1 1-152 93-2 2-61 93-5 2-158 93-6 1-159 93-1 3-126.2 93-1 3-126.2 93-2 2-62 93-3 2-157 93-5 2-157 93-5 2-157 93-5 2-157 93-5 2-157 93-5 2-157 93-5 2-150 93-6 1-150 93-1 3-126 93-3 3-126 93-4 3-121 93-4 3-121 93-4 3-121 93-4 3-121 93-5 1-141 93-6 1-163.5 93-7 1-141 93-1 1-121 93-3 3-126 93-3 3-126 93-4 3-126 93-5 1-141 93-4 3-126 93-5 1-141 93-6 1-163.5 93-1 3-126 93-3 3-126	22-33873 22-33880-801 22-33883 22-33884-801 22-33890 22-33894-801 22-33896-801 22-33897-801 22-33899-801 22-33900-801 22-33901-801 22-33908-801 22-33908-801 22-33908-801 22-33908-801 22-33908-801 22-33910-801 22-33912-801 22-33912-801 22-33912-801 22-33918-801 22-33918-801 22-33918-801 22-33926-803 22-33926-803 22-33928-801 22-33928-801 22-33930-803 22-33930-803 22-33930-803 22-33931 22-33935	93-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1	3-138.2 7-44 8-44 1-44 3-44 1-45 8-45 8-46 1-163 2-160 2-60 1-57 1-553 2-63 2-63 2-63 2-63 2-63 2-63 2-63 2-6	




22-33935-801	PART NUMBER		FIGURE AND IDEX NUMBER	OTY. PER ACFT,	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND	OTY. PER ACFT
	22-33938 22-33938-801 22-33941 22-33941-801 22-33941-803 22-33944 22-33949 22-33953 22-33954	93-6 93-5 93-5 93-6 93-6 93-5 93-6 93-6 93-4 93-4 93-4 93-6 93-6 93-6 93-6	2-180 1-145 1-145 1-145 1-145 1-146 1-147 1-147 1-147 1-163.3 1-119 2-119 1-118 1-118 1-118 1-172 1-172 1-172 1-172 1-175 1-175		22-33963-801 22-33965-801 22-33967 22-33968 22-33969 22-33971 22-33977 22-35860 22-35923 22-35923 22-35924 22-35924-801 22-35928 22-35928	93-5 93-4 93-4 93-1-1 93-1-2 93-2 93-5 93-5 93-5 93-5 93-6 93-7 93-6 93-7 93-7 93-7 93-6 93-7 93-7 93-6	2-161 1-111 2-111 3-111 5-42 1-42 1-42 3-42 2-67 1-162 2-162 1-153 2-153 1-164 2-176 1-183 1-181 1-182 2-177 1-177 2-178 1-178 2-174 1-174 2-173 1-173 1-171 2-171	





SECTION V

Chapter 93
<u>ELECTRONIC HARNESSES</u>

FLIGHT COMPARTMENT ELECTRONIC HARNESSES



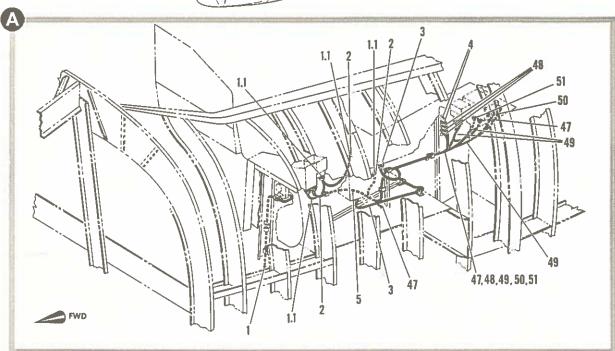


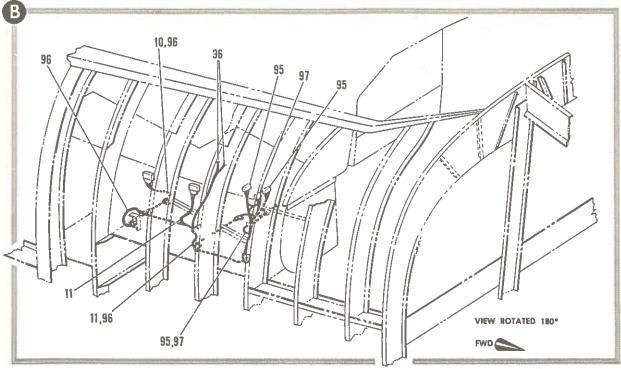


22.04.93,01,002



FIGURE AND	PART NUMBER	NOMENCLATURE	USA		UNITS
NDEX NO.		1 2 3 4 5 6	FROM	TO	ASSEMBL
- 1.1	22-31891 D024052-0001 36151 36157 320567	PILOT AND COPILOT CONSOLE ELECTRONIC HARNESSES SEE 22-31001 HARNESS ASSEMBLY, AUDIO JACK BOX TO PILOT AUDIO SELECTOR PANEL PLATE, CONVAIR 92-63502-003 -V71468- TERMINAL, CONVAIR 98-90805-001 -V89110- TERMINAL, CONVAIR 98-90805-015 -V89110-	1 1 1		1 1 3 1 6 34
- 2	320580 22-31893 XMRE34SC2A300 36151 36153 320562	. TERMINAL, CONVAIR 98-90814-001 -V89110- HARNESS ASSEMBLY, AUDIO SELECTOR PANEL TO PILOT MIKE SELECTOR PANEL PLUG, CONVAIR 92-50145-008 -V81312- TERMINAL, CONVAIR 98-90805-001 -V89110- TERMINAL, CONVAIR 98-90805-003 -V89110- SPLICE, CONVAIR 98-34001-001 -V00779-	1		1 1 1 1 5
- 3	320559 22-31890 SCA2B XLR4-31	SPLICE, CONVAIR 98-34001-003 -V00779- HARNESS ASSEMBLY; PILOT CONSOLE AUDIO SPLICE TO PILOT MIKE JACK JACK, CONVAIR 95-18504-008 -V37942- RECEPTACLE, CONVAIR 92-50287-001 -V71486-	1 1 1 1		10
- 4	22-31895-801 SC1A SCA2B XLR4-31	- HARNESS ASSEMBLY; PILOT CONSOLE AUDIO SPLICE TO PILOT MIKE AND HEADSET JACK - JACK, CONVAIR 95-18504-005 -V37942 JACK, CONVAIR 95-18504-008 -V37942 RECEPTACLE, CONVAIR 92-50287-001 -V71468-	1 1 1 1 1		1 1 1
				==	
			=		

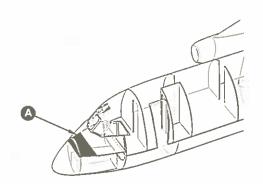

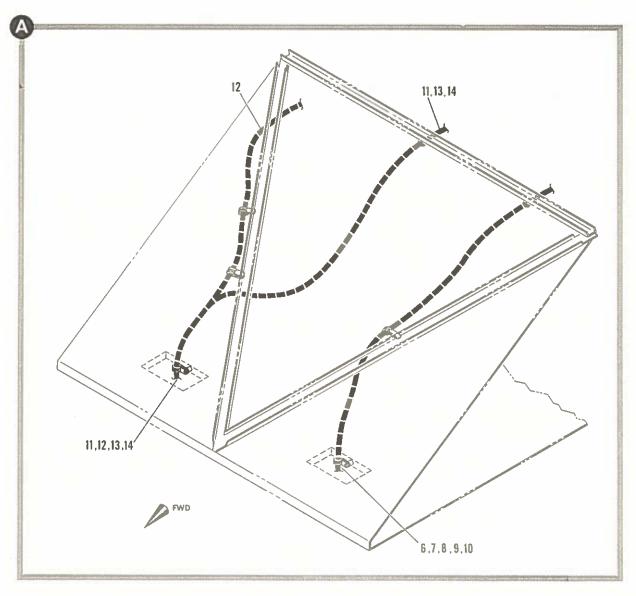


22 04 93 01.003A




FIGURE			USA		UNITS
AND INDEX NO.	PART NUMBER	NOMENCLATURE	FROM	то	ASSEMBI
		1 2 3 4 5 6 PILOT AND COPILOT FWD PEDESTAL ELECTRONIC			
		HARNESSES SEE 22-31001			
- 6	22-31806	. HARNESS ASSEMBLY. SHELF A TO RADAR	1		1
	42 0.444	INDICATOR			Ι.
	029850-0015	INSERT, CONVAIR 95-02201-006 -V71468-	1		1 1
	020745-0008	- SHIELD, CONVAIR 98-03501-008 -V71468-	1		
L L	FK37-21C9-16	PLUG, CONVAIR 92-40319-001 -V71468-			
	22-32537-11	DECAL	1 1		-
- 7	22-31807	- HARNESS ASSEMBLY. SHELF A TO RADAR INDICATOR VIDEO			
	UG260B-U	. PLUG, CONVAIR 92-47001-004	1		1 2
	22-31808	. HARNESS ASSEMBLY, SHELF A TO	1		
- 0	22 31000	RADAR INDICATOR RANGE MIKES			
İ	UG260B-U	PLUG, CONVAIR 92-47001-004	1		
	22-31809	. HARNESS ASSEMBLY. SHELF A TO	1		
		RADAR CONTROL PANEL	١.		
	029850-0015	INSERT, CONVAIR 95-02201-006 -V71468-			
	034993-0001	. PLATE, CONVAIR 98-02505-001 -V71468-	1 1		
	020745-0008	. SHIELD, CONVAIR 98-03501-008 -V71468-	-		ĺ
	D024050-0022	. PLATE, CONVAIR 92-50277-003 -V71468- . TERMINAL, CONVAIR 98-90805-001 -V00779-	;		
	36151		i		
1.0	22-32537-11	. DECAL . HARNESS ASSEMBLY. ADF CONTROL	i		1
- 10	22-31849	PANEL 1 TO SHELF B			
	D024199-0002	PLATE, CONVAIR 92-50277-005 -V71468-	1		
	029850-0002	INSERT. CONVAIR 95-02201-001 -V71468-	1		
	020745-0008	. SHIFID. CONVAIR 98-03501-008 -V71468-	1		
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1		
	22-32537-15	- DECAL	1		1
- 11	22-31889	. HARNESS ASSEMBLY, SHELF C TO SELECTIVE	1		
		CALL CONTROL PANEL	1		
	034993-0001	. PLATE, CONVAIR 98-02505-001 -V71468-			
	029850-0014	- INSERT, CONVAIR 95-02201-005 -V71468- - SHIELD, CONVAIR 98-03501-008 -V71468-	1 1		
	020745-0008	. PLATE, CONVAIR 92-50277-001 -V71468-	i		
	0024050-0001 36151	. TERMINAL, CONVAIR 98-90805-001 -V89110-	i		
	22-32537-27	- DECAL	i]	
- 12	22-32331-21	. HARNESS ASSEMBLY. SHELF D TO HE 1	1		
7 44		COMMUNICATION CONTROL PANEL			
	029850-0002	INSERT, CONVAIR 95-02201-001 -V71468-	!		
	034993-0001	_ PLATE. CONVAIR 98-02505-001 -V71468-	1 1	1	
	020745-0008	SHIELD, CONVAIR 98-03501-008 -V71468-			
	D024051-0001	. PLATE, CONVAIR 92-63502-002 -V71468-			
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1		
	22-32537-35	- DECAL - HARNESS ASSEMBLY. SHELF D TO HF 2	1 1		
- 13	22-31923	COMMUNICATION CONTROL PANEL	· ·		
		CONTROLLOR CONTROL PRICE			
	029850-0002	INSERT, CONVAIR 95-02201-001 -V71468-	1		
	020745-0008	. SHIELD, CONVAIR 98-03501-008 -V71468-	1 1		
	22-32537-35	DECAL	!		
- 14	22-31970	. HARNESS ASSEMBLY, SHELF E TO	1	1	
		ADF CONTROL PANEL 2	1		
	029850-0002	. INSERT, CONVAIR 95-02201-001 -V71468-			
	020745-0008	. SHIELD, CONVAIR 98-03501-008 -V71468- . PLATE, CONVAIR 92-50277-005 -V71468-			
	0024199-0002	PLATE, CONVAIR 92-30277-003	i		
	36151 22-32537-43	. DECAL	i		
	22-32331-43	a o DEGRE			

			0
3			





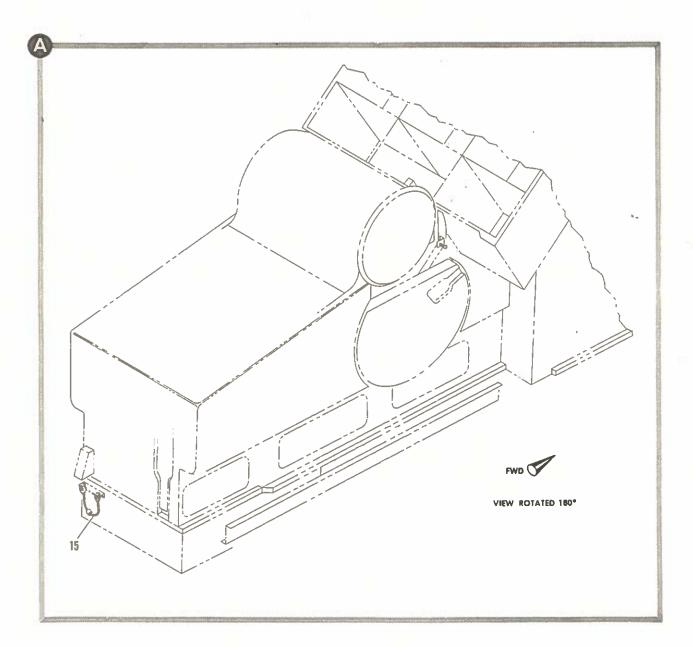

22 04 93 01:004A



FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNITS
INDEX NO.		1 2 3 4 5 6	FROM	то	ASSEMBL
3 - 15	22-31812	PILOT AND CUPILOT PEDESTAL ELECTRONIC HARNESSES SEE 22-31001 HARNESS ASSEMBLY, PUBLIC ADDRESS SPLICE FO PILOT HANDSET HOLDER	1		1
	9607	- HOLDER, HANDSET CONVAIR 94-69004-001	1		1
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-	1		t _i
			=		




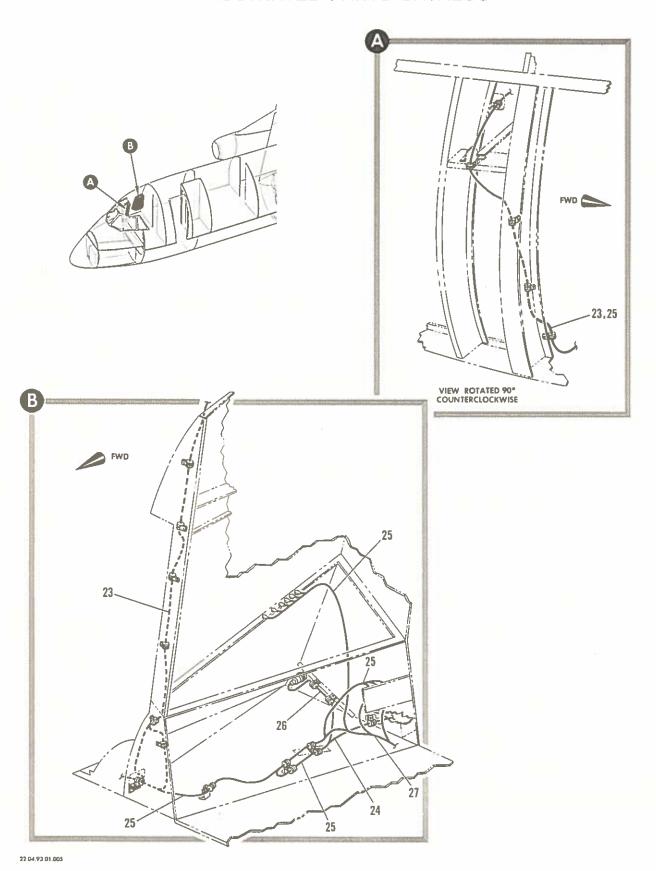




FIGURE			USA	GE DE	UNITS
AND INDEX NO	PART NUMBER	NOMENCLATURE	FROM	то	PER ASSEMBLY
		1 2 3 4 5 6	I KOM		AGGEMBE!
4		FLIGHT ENGINEER STATION ELECTRONIC HARNESSES SEE 22-31001			
- 23	22-31881-801	. HARNESS ASSEMBLY, AUDIO JACK BOX	1		1
- 23	22-31001-001	TO PILOT AND COPILOT SPEAKERS			
	36157	TERMINAL, CONVAIR 98-90805-008 -V89110-	1 1		1
	320580	. TERMINAL, CONVAIR 98-90814-001 -V89110-	1 1		Lį.
- 24	22-32742-801	- HARNESS ASSEMBLY, FLIGHT ENGINEER AUDIO	1		1
		SPLICE TO MIKE AND HEADSET JACK			
	SC 1A	- JACK, CONVAIR 95-18504-005 -V37942-	1 1		1
	SCA28	- JACK, CONVAIR 95-18504-008 -V37942-			> 1
	XLR4-31 320562	- RECEPTACLE, CONVAIR 92-50287-001 -V7146H- - SPLICE, CONVAIR 98-34001-001 -V00779-			2
	320059	- SPLICE, CONVAIR 98-34001-003 -V00779-	- i		3
	323975	SPLICE, CONVAIR 98-34009-003 -V00779-	l i		4
- 25	22-32912	. HARNESS ASSEMBLY. AUDIO JACK BOX TO	i		1
		FLIGHT ENGINEER AUDIO SELECTOR PANEL			
	D024052-0001	PLATE, CONVAIR 92-63502-003 -V71468-	1 1		1
	36151	TERMINAL, CONVAIR 98-90805-001 -V89110-	1 1		2
	320567	- TERMINAL, CONVAIR 98-90805-015 -V89110-	1 1		6
	320580	. TERMINAL, CONVAIR 98-90814-001 -V89110-	1 1		30
- 26	22-32743	- HARNESS ASSEMBLY, FLIGHT ENGINEER	1		1
	SCA2B	AUDIO SPLICE TO MIKE JACK JACK CONVAIR 95-18504-008 -V37942-	1 1		1
	XLR4-31	. RECEPTACLE, CONVAIR 92-50287-001 -V71468-	i		l i
- 27	22-32916	- HARNESS ASSEMBLY. FLIGHT ENGINEER AUDIO	i		i
	32710	SELECTOR PANEL TO MIKE SELECTOR PANEL	'		
	XMRE34SC2A300	PLUG. CONVAIR 92-50145-008 -V81312-	1		1
	320562	SPLICE, CONVAIR 98-34001-001 -V00779-	1		I4
	320559	SPLICE, CONVAIR 98-34001-001 -V00779-	1 1		9
	36151	TERMINAL, CONVAIR 98-90805-001 -V89110-	1 1		1
	36153	TERMINAL, CONVAIR 98-90805-003 -V89110-	1 1		1
			100		
			ļ		
				i	
				1	
				Ī	
				}	



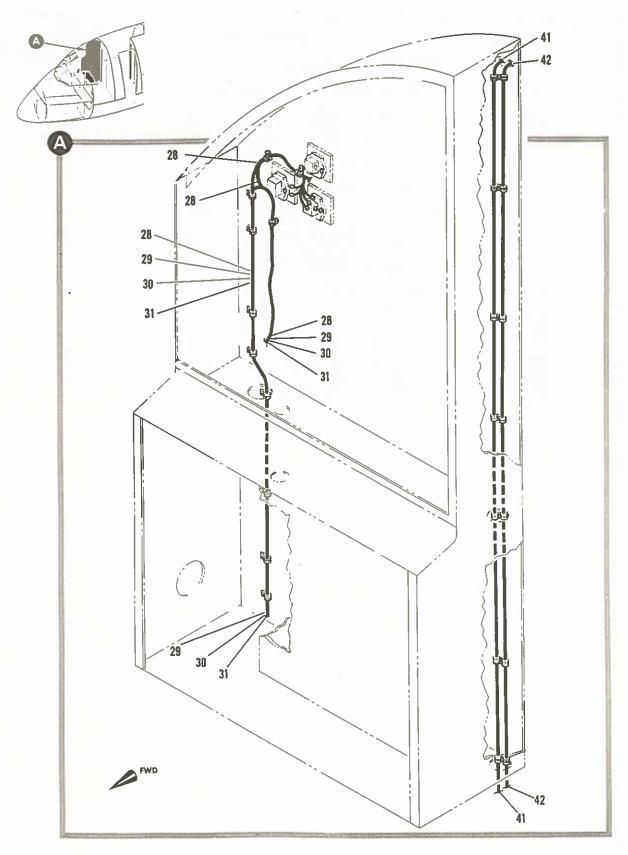

22 04 93.01.006 A




FIGURE AND	PART NUMBER	NOMENCLATURE		USAGE CODE	
INDEX NO.	The state of the s	1 2 3 4 5 6	FROM	то	PER ASSEMBI
5	-	CIRCUIT BREAKER PANEL RH			
		ELECTRONIC HARNESSES SEE 22-31001			
- 28	22-32752	- HARNESS ASSEMBLY. RELAY PANEL TO	A		1
	22-32752-801	CIRCUIT BREAKER PANEL - HARNESS ASSEMBLY, RELAY PANEL	5	6	1
	22 32132-001	TO CIRCUIT BREAKER PANEL	3	ľ	· '
	320570	SPLICE, CONVAIR 98-34001-002 -V00779-	1		2
	36153	- TERMINAL, CONVAIR 98-90805-003 -V89110-	1 1		15
	320571 36161	- TERMINAL, CONVAIR 98-90805-005 -V89110-	1 A		69
	36161	- TERMINAL, CONVAIR 98-90805-016 -V89110-	5	6	71
	320569	TERMINAL, CONVAIR 98-90805-017 -V89110-	î		7
	A36153	- TERMINAL, CONVAIR 98-90805-033 -V89110-	1 1		9
- 29	22-32812	- HARNESS ASSEMBLY, SHELF A TO	1		1
	029850-0002	CIRCUIT BREAKER PANEL . INSERT, CONVAIR 95-02201-001 -V71468-	1,1		1
	034993-0001	- PLATE, CONVAIR 98-02505-001 -V71468-	i		i
	020745-0008	SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	36153	- TERMINAL, CONVAIR 98-90805-003 -V89110-	! !		6
- 30	22-32537 - 9 22-32865	. DECAL . HARNESS ASSEMBLY. SHELF B TO	1		1
	32003	CIRCUIT BREAKER PANEL	,		· '
	034993-0001	PLATE, CONVAIR 98-02505-001 -V71468-	1 1		1
	029849-0013	- INSERT, CONVAIR 95-02202-004 -V71468-	1]
	020745-0008 36153	. SHIELD, CONVAIR 98-03501-008 -V71468-	1		[
	22-32537-23	- DECAL	_ i		'
- 31	22-32905	. HARNESS ASSEMBLY. SHELF C TO	* i		1
		CIRCUIT BREAKER PANEL			
	029849-0013	- INSERT, CONVAIR 95-02202-004 -V71468-	1		1
	36153	. SHIELD, CONVAIR 98-03501-008 -V71468- L. TERMINAL, CONVAIR 98-90805-003 -V89110-			16
	22-32537-27	- DECAL	i		1
	(6)				
		A AIRPLANES 1 THRU 4. 7 AND ON			
		TO THE POST OF THE PROPERTY OF			
		Į.			
					ł
	W				
			-		ļ
			1		


			,
			0





FIGURE AND	PART NUMBER	NOMENCLATURE	USAGE		UNITS	
INDEX NO.	I AKI NUMBEK	1 2 3 4 5 6		TO	ASSEMB	
- 41 - 42	22-32830 RF0349 UG1185U UG573A-U 22-33965-801 UG212C-U RF0349	FWD STEWARDESS STATION RH ELECTRONIC HARNESSES SEE 22-31001 HARNESS ASSEMBLY, VHF COMMUNICATION ANTENNA 3 TO VHF COMMUNICATION RECEIVER ANTENNA JACK 1 CAP, CONVAIR 92-74210-001 -V94375- PLUG, CONVAIR 92-47003-005 -V81350- PLUG, CONVAIR 92-47008-002 -V81350- HARNESS ASSEMBLY, DMET RECEIVER 2 TO DMET ANTENNA ADAPTER, CONVAIR 92-04312-001 -V81350-	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			
	UG1213U UG710A-U	. CONNECTOR, CONVAIR 92-47004-004 -V81350- . CONNECTOR, CONVAIR 92-47008-003 -V81350-	1			
			==			




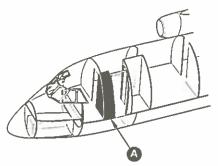

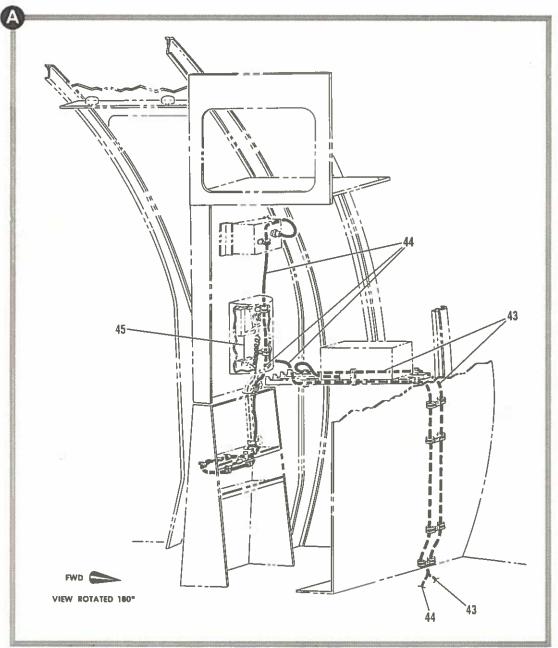



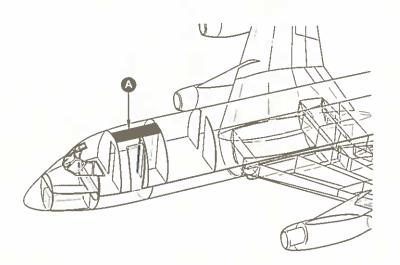


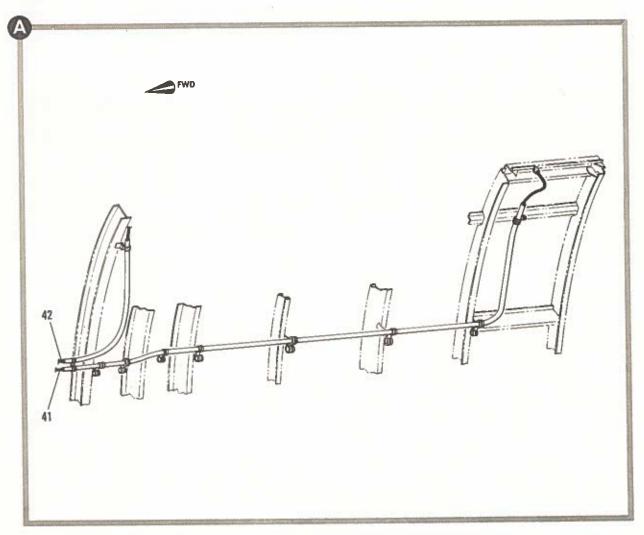

22.04.93.01.007



FIGURE AND	PART NUMBER	NOMENCLATURE		USAGE CODE	
NDEX NO.		1 2 3 4 5 6	FROM	то	PER ASSEMB
- 44 - 45	22-33880-801 PT06E18-32S 320559 36151 36157 320580 22-33883	FWD STEWARDESS STATION AND COAT CLOSET ELECTRONIC HARNESSES SEE 22-31001 HARNESS ASSEMBLY, AUDIO JACK BOX TO FWD STEWARDESS PUBLIC ADDRESS CONTROL PANEL PLUG, CONVAIR 92-40325-001 -V06840- SPLICE, CONVAIR 98-34001-003 -V00779- TERMINAL, CONVAIR 98-90805-001 -V89110- TERMINAL, CONVAIR 98-90805-008 -V89110- TERMINAL, CONVAIR 98-90814-001 -V89110- HARNESS ASSEMBLY, FWD STEWARDESS HANDSET SWITCH TO STEWARDESS SPLICE HOLDER, CONVAIR 94-69004-001 -V82872-	1 1 1 1 1		2
		W U			

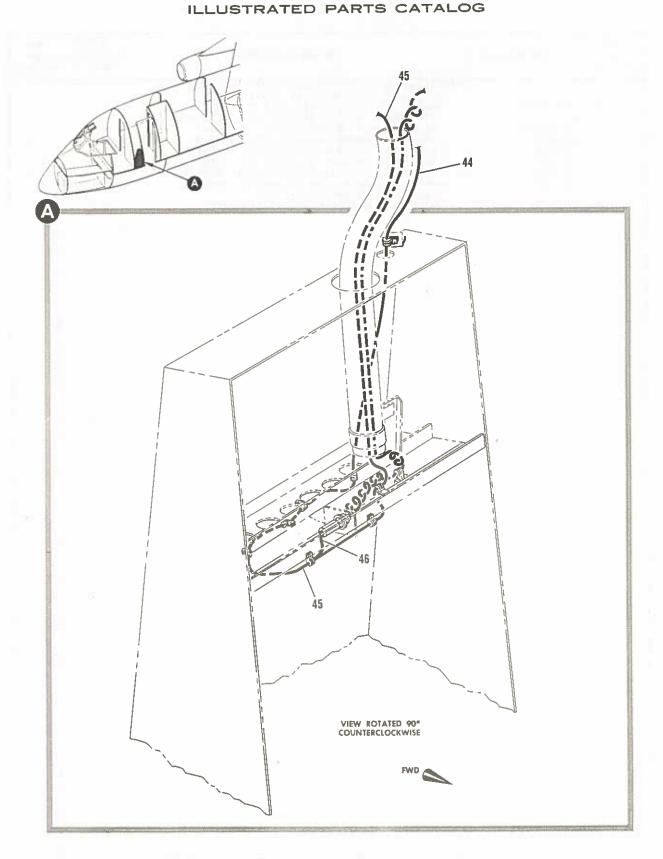

22 04-93 01:009



FIGURE AND	PART NUMBER	NOMENCLATURE		GE DE	UNITS
INDEX NO.		1 2 3 4 5 6	FROM	то	ASSEMB
	22-33884-801 95-25	FWD STEMARDESS STATION FOLDING SEAT ELECTRONIC HARNESSES SEE 22-31001 HARNESS ASSEMBLY, FWD STEWARDESS HANDSET JACK TO FWD STEWARDESS HANDSET SPLICE JACK, CONVAIR 95-18504-007 -V81812-	1		1
		X			
		III			
:					

	_s s




SECTION V

Chapter 93 ELECTRONIC HARNESSES


CABIN ELECTRONIC HARNESSES



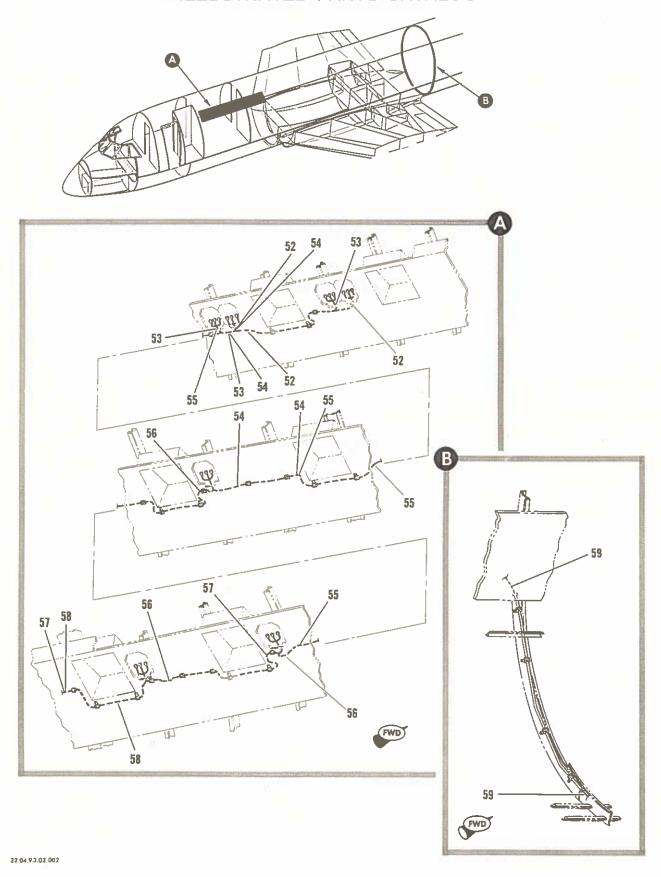



HATRACK SPEAKER ELECTRONIC HARNESSES STA 659 TO 888 SEE 22-33001 HARNESS ASSEMBLY, AIR CONDITIONING COMPRESSOR LH TO HATRACK SPEAKER STA 659 LH 36151 TERMINAL, CONVAIR 98-90805-001 -V89110- 1	PEI ASSEM
1 2 3 4 5 6 HATRACK SPEAKER ELECTRONIC HARNESSES STA 659 TO 888 SEE 22-33001 HARNESS ASSEMBLY, AIR CONDITIONING COMPRESSOR LH TO HATRACK SPEAKER STA 659 LH 36151 TERMINAL, CONVAIR 98-90805-001 -V89110- 1	ASSEM
STA 659 TO 888 SEE 22-33001 - HARNESS ASSEMBLY, AIR CONDITIONING - COMPRESSOR LH TO HATRACK SPEAKER STA 659 LH - TERMINAL, CONVAIR 98-90805-001 -V89110- 1	
60 22-33894-801 • HARNESS ASSEMBLY, AIR CONDITIONING 1 COMPRESSOR LH TO HATRACK SPEAKER STA 659 LH - TERMINAL, CONVAIR 98-90805-001 -V89110- 1	
COMPRESSOR LH TO HATRACK SPEAKER STA 659 LH 36151 - TERMINAL, CONVAIR 98-90805-001 -V89110- 1	
STA 659 LH 36151 - TERMINAL, CONVAIR 98-90805-001 -V89110- 1	
36151 - TERMINAL, CONVAIR 98-90805-001 -V89110- 1	
36157 - TERMINAL, CONVAIR 98-90805-008 -V89110- 1	
61 22-33750 . HARNESS ASSEMBLY, HYDRAULIC COMPARTMENT 1 2	
DISCONNECT TO ADF 1 SENSE ANTENNA	
DISCONNECT	
22-33750-803 - HARNESS ASSEMBLY, HYDRAULIC COMPARTMENT 3	
DISCONNECT TO ADF 1 SENSE ANTENNA	
DISCONNECT	
22-33750-801 - HARNESS ASSEMBLY. HYDRAULIC COMPARTMENT 1 2	
DISCONNECT TO ADF 2 SENSE ANTENNA	
DISCONNECT	
22-33750-805 - HARNESS ASSEMBLY, HYDRAULIC COMPARTMENT 3	
DISCONNECT TO ADF 2 SENSE ANTENNA	
DISCONNECT	
UG88C-U CONNECTOR, CONVAIR 92-47001-007	
UG909-U . CONNECTOR, CONVAIR 92-57001-008	
62 22-33845-801 - HARNESS ASSEMBLY, HYDRAULIC COMPRESSOR 1	
SPLICE TO SENSE CONTROL DISCONNECT	
MS3100E18-8S	
	A
	A
	A
STA 659 TO 725 LH 64 22-33911-801	
-	
STA 697 TO 773 RH 65 22-33900-801 HARNESS ASSEMBLY, HATRACK SPEAKER 1	
STA 725 TO BILLH	
66 22-33912-801	
STA 773 TO 849 RH	
36151 . TERMINAL, CONVAIR 98-90805-001 -V89110-	
67 22-33967 - HARNESS ASSEMBLY, AIR CONDITIONING	,
COMPARTMENT DISCONNECT TO VHF)	
ANTENNA FEED THRU	
UG21D-U . CONNECTOR, CONVAIR 92-47003-004	
82-835 . CONNECTOR, CONVAIR 92-47005-001 -V02660-	
68 22-33901-801 . HARNESS ASSEMBLY, HATRACK SPEAKER	
STA 811 TO 887 LH	
69 22-33913-801 . HARNESS ASSEMBLY, HATRACK SPEAKER 1	
STA 849 TO 925 RH	
36151 . TERMINAL, CONVAIR 98-90805-001 -V89110-	
7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7	

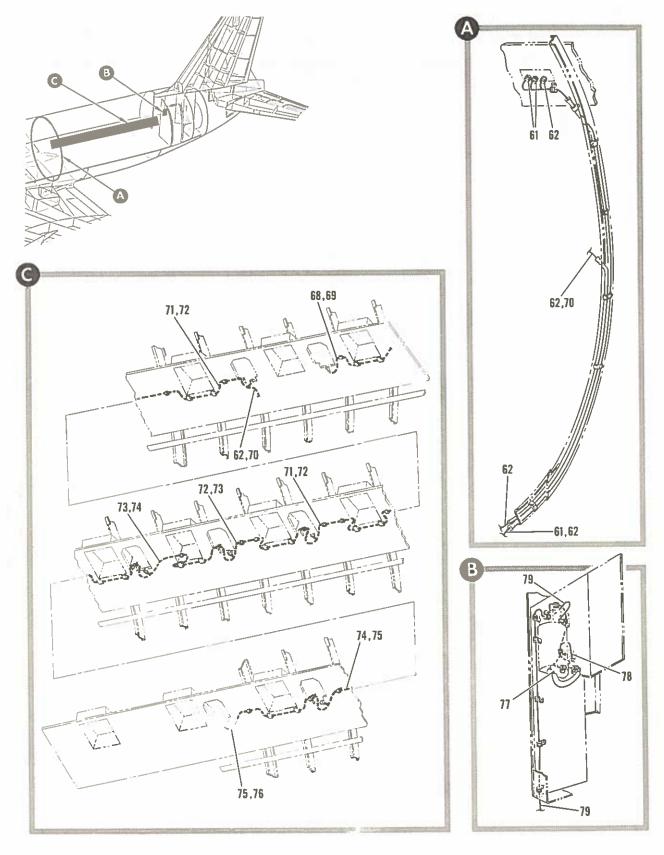

22.04 93.02 004




FIGURE	PART NUMBER	NOMENCLATURE	US/ CO	GE DE	UNITS
AND INDEX NO.	FAKI NUMBEK		FROM	το	PER ASSEMBLY
3		1 2 3 4 5 6 HATRACK ELECTRONIC HARNESSES	- 11-111	,-	
3		STA 926 TO 1230 SEE 22-33001			
- 70	22-33914-801	- HARNESS ASSEMBLY, HYDRAULIC COMPARTMENT	1		1
	74151	SPLICE LH TO HATRACK SPEAKER STA 1001 RH TERMINAL, CONVAIR 98-90805-001 -V89110-	1		2
	36151 36157	. TERMINAL, CONVAIR 98-90805-008 -V89110-	- I- i		í
- 71	22-33903-801	. HARNESS ASSEMBLY. HATRACK SPEAKER	i		i
70	22 27015 201	STA 953 TO 1039 LH	1		1
- 72	22-33915-801	. HARNESS ASSEMBLY. HATRACK SPEAKER STA 1001 TO 1077 RH	'		'
- 73	22-33904-801	- HARNESS ASSEMBLY, HATRACK SPEAKER	1		1
		STA 1039 TO 1115 LH			1.
- 74	22-33916-801	- HARNESS ASSEMBLY, HATRACK SPEAKER STA 1077 TO 1153 RH	1	ĺ	1
- 75	22-33905-801	- HARNESS ASSEMBLY, HATRACK SPEAKER	1 1		1
		STA 1115 TO 1181 LH			
- 76	22-33917-801	. HARNESS ASSEMBLY, HATRACK SPEAKER	1		1
	36151	STA 1153 TO 1229 RH TERMINAL, CONVAIR 98-90805-001 -V89110-	1		6
- 77	22-33807	. HARNESS ASSEMBLY. AFT STEWARDESS HANDSET	i		ĭ
		SWITCH TO STEWARDESS SPLICE			
- 78	9607 22-33741	HOLDER, CONVAIR 94-69004-001 -V82872- L. HARNESS ASSEMBLY, AFT STEWARDESS			1
- 10	22-33171	HANDSET SPLICE TO HANDSET JACK	'		
	95-25	JACK, CONVAIR 95-18504-007 -V81812	1 1		1
- 79	22-33746	. HARNESS ASSEMBLY, AFT FUSELAGE SPLICE TO AFT STEWARDESS PUBLIC ADDRESS CONTROL	1		1
		PANEL PANEL			
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-	1		9
	PT06E18-32S	PLUG. CONVAIR 92-40325-001 -V06840-	1 1		1
					1
		#			
					1
			ŀ		
		No.			
		**			
		22			
	2.				
		W			
	-				
					1
	<u> </u>			L	<u> </u>

	3	

SECTION V

Chapter 93
ELECTRONIC HARNESSES


FUSELAGE NOSE UNDERFLOOR ELECTRONIC HARNESSES

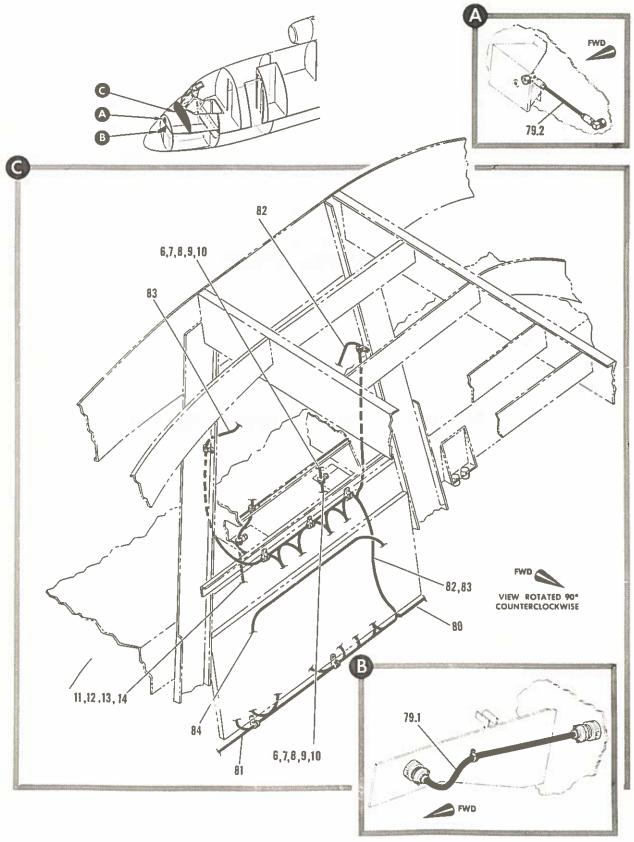


22.04.93.03.001A



FIGURE	PART NUMBER	NOMENCLATURE	USA		UNITS
NDEX NO.	TAKE INDINGER		FROM	то	ASSEMB
		1 2 3 4 5 6 FUSELAGE NOSE UNDER FLOOR ELECTRONIC HARNESSES			
		FWD FLIGHT DECK			
		SEE 22-31004 AND 22-32001			
_ 70 1	22-31810	. HARNESS ASSEMBLY, FWD PRESSURE DISCONNECT	1 1		1 1
- 17.1	22-31810		1 '		'
	46310/63/ 36	TO RADAR ANTENNA	1 1		12.9
	MS3106E36-7S	CONNECTOR. CONVAIR 92-40313-003	$\perp i_{\perp}$		
	MS3106E36-7P	CONNECTOR, CONVAIR 92-40313-002	1 1		
- 79.2	22-31861-801	. HARNESS ASSEMBLY. FWD PRESSURE FITTING	'	i	
		TO GLIDE SLOPE ANTENNA			1 .
	82-835	CONNECTOR. CONVAIR 92-47005-001 -V02660-	1 1		
- 80	22-31850	. HARNESS ASSEMBLY, SHELF B TO	1 1		
		INSTRUMENT JUNCTION BOX			
	029850-0015	INSERT, CONVAIR 95-02201-006 -V71468-	1 1		
	029850-0002	INSERT, CONVAIR 95-02201-001 -V71468-	1		
	020745-0008	SHIELD, CONVAIR 98-03501-008 -V71468-	1 1		
	034993-0001	PLATE, CONVAIR 98-02505-001 -V71468-	1 1		
	320567	_ TERMINAL, CONVAIR 98-90805-015 -V00779-	1 1		
	36157	- TERMINAL, CONVAIR 98-90805-008 -V00779-	1 1		
	320580	TERMINAL, CONVAIR 98-90814-001 -V00779-	i		5
	22-32537-19	. DECAL	li		
- 81	22-31965	. HARNESS ASSEMBLY. SHELF E TO	l i		
- 01	22-31703	INSTRUMENT JUNCTION BOX	[.		
	029850-0015	. INSERT, CONVAIR 95-02201-006 -V71468-	1		
	034993-0001	PLATE, CONVAIR 98-02505-001 -V71468-			
	029850-0002	. INSERT, CONVAIR 95-02201-001 -71468-			
	020745-0008	- SHIELD, CONVAIR 98-03501-008 -V71468-			
	320580	- TERMINAL, CONVAIR 98-90814-001 -V00779-	1 1		14
	320547	TERMINAL, CONVAIR 98-90805-010 -V00779-	1 1		
	36157	TERMINAL, CONVAIR 98-90805-008 -V00779-	1		1
	22-32537-47	- DECAL	1 1		
- 82	22-31864	. HARNESS ASSEMBLY. INSTRUMENT JUNCTION	1 1		
		BOX TO DNET INDICATOR 1			
	K03-21-30PN	+LUG. CONVAIR 92-40058-005 -V71468-	1 1		
	K06-21-5-8	CL-MP. CONVAIR 98-02500-003 -V71468-	i 1		1
	320580	. TERMINAL, CONVAIR 98-90814-001 -V00779-	1 1		2
- 83	22-31865	. HARNESS ASSEMBLY, INSTRUMENT JUNCTION	l i		
00		BOX TO DMET INDICATOR 2			
	K03-21-30PN	PLUG, CONVAIR 92-40058-005 -V71468-	1 1		
	K06-21-5-8	CLAMP, CONVAIR 98-02500-003 -V71468-	l i		
	320580	. TERMINAL, CONVAIR 98-90814-001 -V00779-	i		2
O.b.		1	À		*
- 84	22-31852-805	- HARNESS ASSEMBLY INSTRUMENT JUNCTION	l A		1
		BOX TO RESISTOR BOARD INTERNAL		_	
	22-31852	. HARNESS ASSEMBLY. INSTRUMENT JUNCTION	2	8	
		BOX TO RESISTOR BOARD INTERNAL	_	_	1
	320567	- TERMINAL, CONVAIR 98-90805-015 -V00779-	2	8	
	320580	TERMINAL, CONVAIR 98-90814-001 -V00779-	2	8	2
	S17377	- CAPACITOR, CONVAIR 91-57061-003 -V80183-	A.		
	S17377	CAPACITOR, CONVAIR 91-57061-003 -VB0183-	2	8	
	RC42GF101J	RESISTOR, CONVAIR 97-40002-013	1 1		
	RC42GF271J	RESISTOR, CONVAIR 97-40002-018	A		
	RC42GF271J	RESISTOR, CONVAIR 97-40002-018	2	В	
	RC42GF102J	. RESISTOR, CONVAIR 97-40002-025	A		
	RC42GF102J	- RESISTOR, CONVAIR 97-40002-025	2	В	
	RC42GF391J	- RESISTOR, CONVAIR 97-40002-020	Ā	_	
	RC42GF561J	. RESISTOR, CONVAIR 97-40002-022	Ā		
	22-31520	BOARD ASSEMBLY. RESISTOR	î	l	
	22-31520-9	INSULATOR	1 i		
		TERMINAL BOARD. MAKE FROM X1401NB1-8	i	[
	22-31520-7	TERMINAL BUARD, MARE PROM X1401NB1-8	i		RE
	X 140 1NB 1-8		'		KE
	00 31610 01	-V71279-		1	
	22-31512-21	BRACKET, INSTRUMENT PANEL JUNCTION	1		
		BOX			
	AN515-4R7	SCREW	!		
	NAS679A04	NUT	1		
		A AIRPLANES 1, 9 AND ON			
		3			
	I			I	1



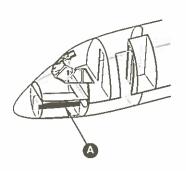


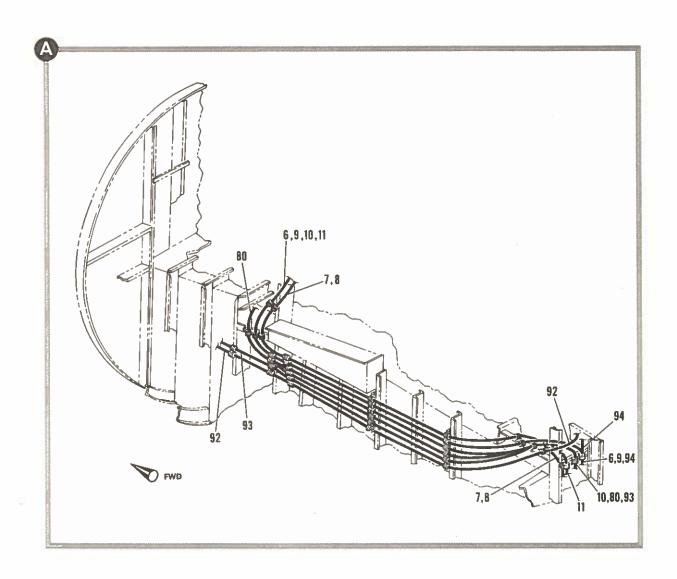



FIGURE 2

22 04.93.03.002 A

93-3 Page 6

FIGURE	PART NUMBER	NOMENCLATURE	USA CO	GE DE	UNITS
INDEX NO.	T TOTAL T THE PARTY OF THE PARTY.	1 2 3 4 5 6	FROM	то	ASSEMB
- 92 - 93	22-31856 UG566U UG572U 82-835 22-31813 029850-0015 020745-0008 MS3100E36-7S 22-32537-7	NOSE WHEEL WELL BAY ELECTRONIC HARNESSES LH SEE 22-31004 HARNESS ASSEMBLY, GLIDE SLOPE TEE ADAPTER TO FORWARD PRESSURE FITTING ADAPTER, TEE CONVAIR 90-04307-004 PLUG, CONVAIR 92-47008-004 CONNECTOR, CONVAIR 92-47005-001 -V02660- HARNESS ASSEMBLY, SHELF A TO FORWARD PRESSURE DISCONNECT RADAR INSERT, CONVAIR 95-02201-006 -V71468- SHIELD, CONVAIR 98-03501-008 -V71468- DECAL	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
- 94	22-31857 36151 029850-0002 034993-0001 029850-0007 D024199-0001 020745-0008 22-32537-7 22-32537-23	- HARNESS ASSEMBLY: SHELF A AND B TO ATC CONTROL PANEL - TERMINAL, CONVAIR 98-90805-001 -V00779 INSERT, CONVAIR 95-02201-001 -V71468 PLATE, CONVAIR 96-02505-001 -V71468 INSERT, CONVAIR 95-02201-002 -V71468 PLATE, CONVAIR 92-50277-004 -V71468 SHIELD, CONVAIR 98-03501-008 -V71468 DECAL	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		1 1 1 1 2 2 1 1 1
		88			

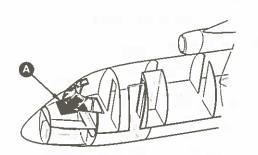

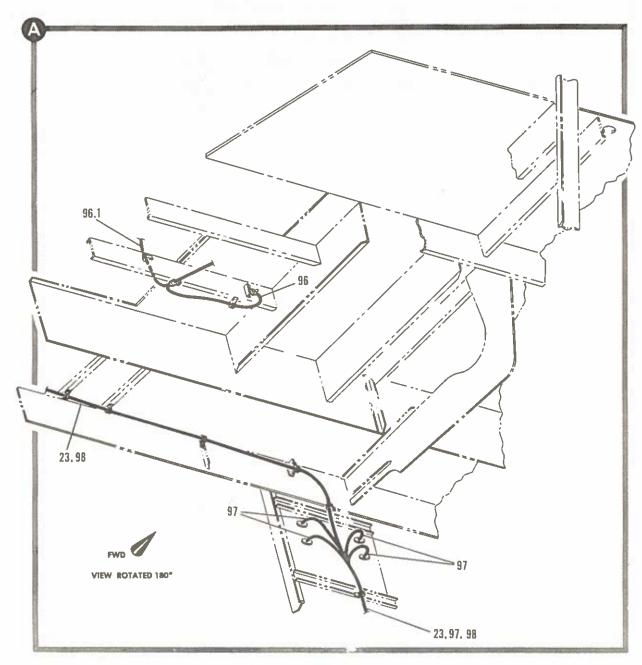

22:04 93:03:003 A




FIGURE AND	PART NUMBER	NOMENCLATURE		USA COI		UNITS
INDEX NO.		1 2 3 4 5 6		эм	TO	ASSEMBI
- 96	22-31900-801 SC1A SCA2B XLR4-31	UNDER FLOOR ELECTRONIC HARNESSES STA 179 TO 260 RH SEE 22-31004 HARNESS ASSEMBLY, COPILOT CONSOLE AUDIO SPLICE TO COPILOT MIKE AND HEADSET JACK JACK, CONVAIR 95-18504-005 - V37942- JACK, CONVAIR 95-18504-008 - V37942- RECEPTACLE, CONVAIR 92-50287-001 - V71468-				1
- 96.1 - 97	22-31892 D024052-0001 36151 36157 320567 320580 22-32914-801	. HARNESS ASSEMBLY, AUDIO JUNCTION BOX TO COPILOT AUDIO SELECTOR PANEL . PLATE, CONVAIR 92-63502-003 -V71468 TERMINAL, CONVAIR 98-90805-001 -V00779 TERMINAL, CONVAIR 98-90805-015 -V00779 TERMINAL, CONVAIR 98-90814-001 -V00779 HARNESS ASSEMBLY, AUDIO JUNCTION BOX			10	31
••	22-32914-805 320580 320547 \$0-1009-3951	TERMINAL TO AUDIO ACCESSORY RELAYS HARNESS ASSEMBLY, AUDIO JUNCTION BOX TERMINAL TO AUDIO ACCESSORY RELAYS TERMINAL, CONVAIR 98-90814-001 -V00779- TERMINAL, CONVAIR 98-90805-010 -V00779- SOCKET, CONVAIR 98-24506-002 -V00614-				3(
						•
			_			
			8			
		N N				
		,.				


			* E
			0

SECTION V

Chapter 93
ELECTRONIC HARNESSES

ELECTRICAL AND ELECTRONIC COMPARTMENT ELECTRONIC HARNESSES

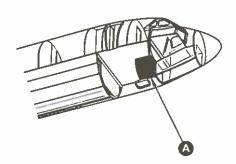

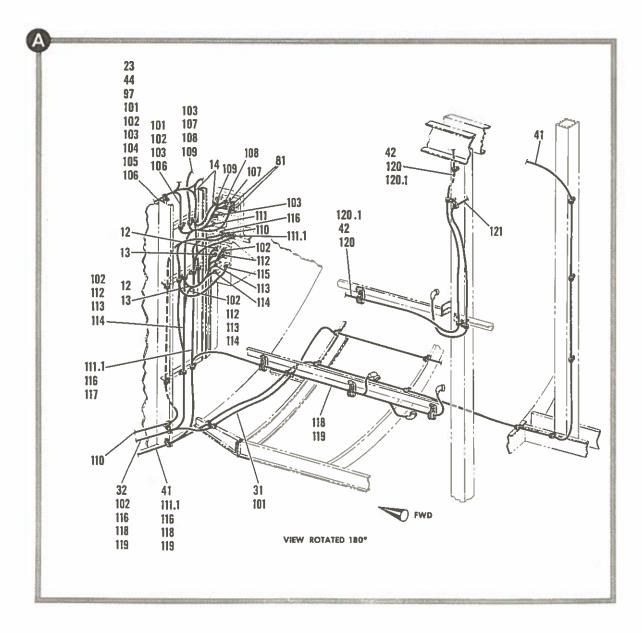

22.04.93.04.002A



FIGURE	PART NUMBER	NOMENCLATURE	CO	GE DE	UNIT
NDEX NO.	171111111111111111111111111111111111111	1 2 3 4 5 6	FROM	то	ASSEM
		ELECTRICAL AND ELECTRONIC COMPARTMENT			
		ELECTRONIC HARNESSES RH SEE 22-32000			
-101	22-32917	. HARNESS ASSEMBLY. AUDIO JUNCTION	1 1		
		BOX TO GROUND POWER JACK			
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1		
	36157	- TERMINAL, CONVAIR 98-90805-008 -V00779-	1 1 1		
	MS3108E14S6S	CONNECTOR, CONVAIR 92-40316-004	1		
-102	22-32946	. HARNESS ASSEMBLY, SHELF D TO			
	000000 0034	HF 1 RADIO COMPARTMENT SPLICE			
	029850-0014	. INSERT, CONVAIR 95-02201-005 -V71468- . PLATE, CONVAIR 98-02505-001 -V71468-			
	020745-0008	. SHIELD, CONVAIR 98-03501-008 -V71468-			
-103	22-32981	- HARNESS ASSEMBLY, SHELF	- i		
		E TO AUDIO JUNCTION BOX			
	029850-0011	. INSERT, CONVAIR 95-02201-003 -V71468-	1 1 1		
	034993-0001	PLATE, CONVAIR 98-02505-001 -V71468-	i		
	020745-0008	SHIELD, CONVAIR 98-03501-008 -V71468-	1		
	320580	- TERMINAL, CONVAIR 98-90814-001 -V00779-	1 1		1
201	22-32537-49	- DECAL	1 1		
-104	22-32926	- HARNESS ASSEMBLY, SOCKET C3B TO	1 1		
	DPD34-12172	SHELF C HF COMMUNICATION POWER - SHIELD, CONVAIR 98-03500-004 -V71468-			
	320580	. TERMINAL, CONVAIR 98-90814-001 -V00779-			
	029850-0012	. INSERT, CONVAIR 95-02202-004 -V71468-			
	DPD23HV1-33S1B	. RECEPTACLE, CONVAIR 92-50285-013 -V71468-	- i		
-105	22-32900-801	- HARNESS ASSEMBLY, AUDIO JUNCTION	- i		i
		BOX TO AUDIO ACCESSORY PANEL	1		
	36157	TERMINAL, CONVAIR 98-90805-008 -V00779-	1 1		i
	CE31C751G	- CAPACITOR, CONVAIR 91-57065-001	1 1		
	320580	- TERMINAL, CONVAIR 98-90814-001 -V00779-	1		1
	RC42GF753J	- RESISTOR, CONVAIR 97-40002-082			
	RC42GF331J	- RESISTOR, CONVAIR 97-40002-019	!		
	C30	- POTENTIOMETER, CONVAIR 90-25503-002	1		
	22-31520-5	TERMINAL BOARD	1 1		
	4040	. SOCKET, CONVAIR 98-24506-011 -V99699-	- i - i - l		
-106	22-32986	- HARNESS ASSEMBLY, VHF COMMUNICATION	l i l		
		RECEIVER POWER RELAY TO TERMINAL STRIP			
		SHELF E	1 1		
	320580	TERMINAL, CONVAIR 98-90814-001 -V00779-	1 1		
	50-1009-3951	- SOCKET, CONVAIR 98-24506-002 -V00614-	1 1		
-107	22-31971	. HARNESS ASSEMBLY, SHELF E TO	1 1		
	55555 551	2 VHF-VOR CONTROL PANEL DHET			
	029850-0014 36151	. INSERT, CONVAIR 95-02201-005 -V71468- . TERMINAL, CONVAIR 98-90805-001 -V00779-			
	020745-0008	TERMINAL, CONVAIR 98-90805-001 -900779-			
	22-32537-45	- DECAL	- ;		
-108	22-31969	- HARNESS ASSEMBLY. SHELF E TO	1 1 1		
,		2 VHF-VOR CONTROL PANEL NAVIGATION	1 , 1		
	029850-0002	INSERT, CONVAIR 95-02201-001 -V71468-	1 1		
	034993-0001	- PLATE, CONVAIR 98-02505-001 -V71468-	i		
	020745-0008	SHIELD, CONVAIR 98-03501-008 -V71468-	1		
	22-32537-45	DECAL	1 1		
-109	22-31968	- HARNESS ASSEMBLY. SHELF E TO 2 VHF-VOR	1 1		
	020050 0000	CONTROL PANEL VHF COMMUNICATION			
	029850-0002	- INSERT, CONVAIR 95-02201-001 -VM1468-			
	020745-000B	- PLATE, CONVAIR 98-02505-001 -V71468- - SHIELD, CONVAIR 98-03501-008 -V71468-			
	D024198-0001	- PLATE, CONVAIR 92-63502-001 -V71468-			
	22-32537-45	DECAL	;		
			'		
					1

COMPARIMENT

AND INDEX NO. 1 -110	PART NUMBER	NOMENCLATURE	FROM	то	ASSEMBL
	22-31955			1	Nooigin De
		. HARNESS ASSEMBLY, SHELF E TO	1		1
-111		GLIDE SLOPE TEE ADAPTER		l	
-111	UG709A-U	PLUG, CONVAIR 92-47008-006	1		2
	22-33963-801	. HARNESS ASSEMBLY, SHELF E TO ADF 2	: A		1
		LOOP ANTENNA			1
1	22-33963-805	- HARNESS ASSEMBLY, SHELF E TO ADF 2	8		'
1	029850-0007	LOOP ANTENNA . INSERT, CONVAIR 95-02201-002 -V71468-	1 1		1
•	GK-C8-21C1-2	. PLUG. CONVAIR 90-40319-002 -V71648-	i		l i
	020745-0008	. SHIELD. CONVAIR 98-03501-008 -V71648-	i		1
	22-32537-49	- DECAL	i		1
-111.1	22-32880-801	. HARNESS ASSEMBLY, SHELF E TO	1		1
		NAVIGATION TEE ADAPTER			1 .
	υ G536A−U	PLUG. CONVAIR 92-47009-002	1 1		1
	UG709A-U	- PLUG, CONVAIR 92-47008-006			1 1
-112	22-32945	. HARNESS ASSEMBLY, SHELF D TO HF 2 RADIO COMPARTMENT SPLICE		1	'
	029850-0014	. INSERT, CONVAIR 95-02201-005 -V71468-	1 1	1	1
	029830-0014	. SHIELD, CONVAIR 98-03501-008 -V71468-	_ i	l	l i
	22-32537-37	. DECAL	i	İ	i
-113	22-32944	. HARNESS ASSEMBLY, SHELF C TO 1	i		i
		HE COMMUNICATION SHELF D			
	029850-0014	. INSERT, CONVAIR 95-02201-005 -V71468-	1		1
	034993-0001	- PLATE, CONVAIR 98-02505-001 -V71468-	1	100	3
	029849-0013	INSERT, CONVAIR 95-02202-004 -V71468-	1		
	020745-0008	. SHIELD. CONVAIR 98-03501-008 -V71468-	1		1 3
	22-32537-31	DECAL	1 1) :
	22-32537-39	. DECAL	1		
-114	22-32937	. HARNESS ASSEMBLY, SHELF C TO	1		1
	020850-021	2 HF COMMUNICATION SHELF D . INSERT, CONVAIR 95-02201-005 -V71468-	1 1		;
	029850-0014	. SHIELD, CONVAIR 98-03501-008 -V71468-	1 1		
	029849-0013	. INSERT, CONVAIR 95-02202-004 -V71468-		1	1
	22-32537-31	. DECAL			
	22-32537-39	. DECAL	i		1
-115	22-32936	. HARNESS ASSEMBLY, SHELF D	i		1
		TO AUDIO UNICITION DOV			
	029850-0007	. INSERT, CONVAIR 95-02201-002 -V71468-	1		
	029850-0015	. INSERT, CONVAIR 95-02201-006 -V71468-	1]]
	034993-0001	. PLATE, CONVAIR 98-02505-001 -V71468-	1		
	020745-0008	SHIELD, CONVAIR 98-03501-008 -V71468-		1	1 10
	320580	- TERMINAL, CONVAIR 98-90814-001 -V00779-		1	"
	22-32537-41	- DECAL	'		1
				1	
	Ť	A AIRPLANES 1, 4, 8 AND ON			1
		8 AIRPLANES 2, 3 AND 5 THRU 7			
			-		
	34				
				i	
	}	1			
	ļ		1		
]		1
			j		
					1
	1				
					1
					1
	+				1
					1




AND PART NUMBER NOMENCLATURE TROW TO	UNIT
1 -116 22-32972	ASSEM
-117 22-33849-801 - CONNECTOR, CONVAIR 92-47008-002 1 1 1 1 1 1 1 1 1	
020745-0008 GK-C8-21C1-2 DECAL	
-118 22-33949	
TO 2 HF XMTR DISCONNECT RADIO COMPARTMENT UG21D-U 82-835 -119 22-33944 -801 - CONNECTOR, CONVAIR 92-47003-004 -120 22-33944-801 - HARNESS ASSEMBLY, 1 HF COMMUNICATION RCVR -120 22-32745 -120 1 F RCVR DISCONNECT RADIO COMPARTMENT -120 1 F RCVR DISCONNECT RADIO COMPARTMENT -120 22-32745 -120 22-32745-803 - HARNESS ASSEMBLY, COAX 1 ADF RCVR TO RADIO COMPARTMENT DISCONNECT -120 1 22-32745-801 - HARNESS ASSEMBLY, COAX 1 ADF RCVR TO RADIO COMPARTMENT DISCONNECT -120 1 22-32745-801 - HARNESS ASSEMBLY, COAX 2 ADF RCVR TO RADIO COMPARTMENT DISCONNECT -120 1 22-32745-805 - HARNESS ASSEMBLY, COAX 2 ADF RCVR TO RADIO COMPARTMENT DISCONNECT	
-119 82-835 -119 22-33944 - CONNECTOR, CONVAIR 92-47005-001 - V02660119 22-33944 - CONNECTOR, CONVAIR 92-47005-001 - V02660120 22-32745 - CONNECT RADIO COMPARTMENT -120 1	:
22-33944-801 UGS36A-U UGS36A-U UGS49A-U -120 22-32745 -120.1 22-32745-803 -120.1 22-32745-801 -120.1 22-32745-805 UG88C-U UG88C-U UG98C-U UG98C-U UG175U 83-1SP -121 22-33850-803 -121 -121 22-33850-803 -121 -121 -122-33850-803 -123-35944-801 -124 -125 -125 -126 -127 -127 -128 -129-33850-803 -129-32944-801 -129-33850-803 -120-129-33850-803 -120-129-33850-803 -121	
UG349A-U 22-32745 -120	
22-32745-803	
-120.1 22-32745-801	
TO RADIO COMPARTMENT DISCONNECT UG88C-U PLUG, CONVAIR 92-47001-007 ADAPTER, CONVAIR 90-04307-005 PLUG, CONVAIR 92-47017-002 -V02660 PLUG, CONVAIR 92-47017-002 -V02660 HARNESS ASSEMBLY, ADF 1 LOOP CABLE CABLE, ADF 1 LOOP MFR TO SPEC CONT	
83-1SP	

ELECTRONIC HARNESSES
ELECTRICAL & ELECTRONIC

ILLUSTRATED PARTS CATALOG

COMPARTMENT

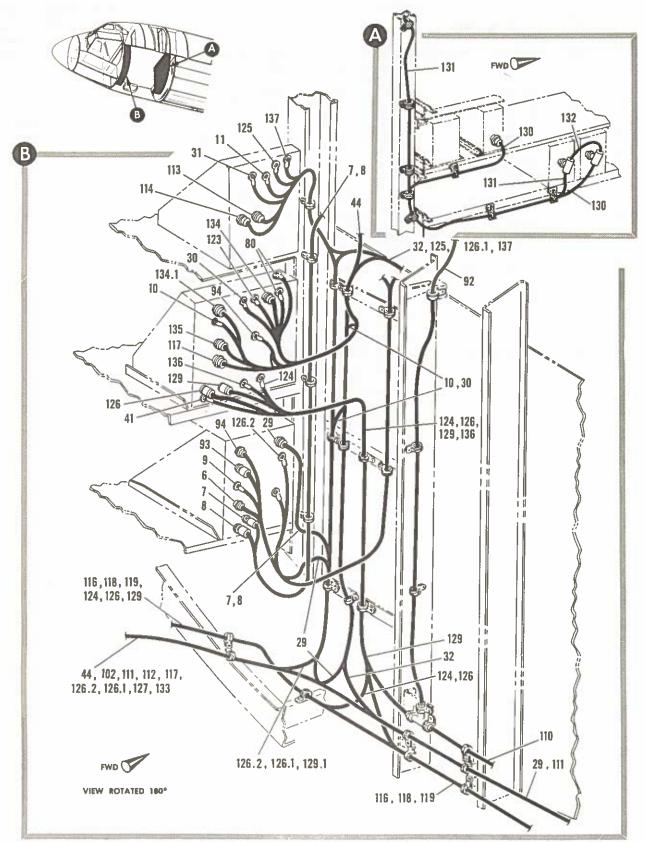


22.04 93.04.004 A



FIGURE AND	PART NUMBER	NOMENCLATURE		GE DE	UNIT
DEX NO.		1 2 3 4 5 6	FROM	то	ASSEME
		HATRACK SPEAKER ELECTRONIC HARNESSES			
		STA 432 TO 697 SEE 22-33001			
- 52	22-33909-801	- HARNESS ASSEMBLY, HATRACK SPEAKER	1		
- 53	22-33897-801	STA 432 TO 490 RH - HARNESS ASSEMBLY, HATRACK SPEAKER	1		
		STA 432 TO 475 LH			
- 54	22-33908-801	- HARNESS ASSEMBLY, HATRACK SPEAKER	1		
- 55	22-33896-801	STA 490 TO 545 RH - HARNESS ASSEMBLY. HATRACK SPEAKER	1		
- 33	22-33070-001	STA 475 TO 583 LH	'		
- 56	22-33907-801	. HARNESS ASSEMBLY, HATRACK SPEAKER	1		
	22 22005 000	STA 545 TO 621 RH			
- 57	22-33895-801	- HARNESS ASSEMBLY, HATRACK SPEAKER STA 583 TO 659 LH	1		
- 58	22-33910-801	- HARNESS ASSEMBLY, HATRACK SPEAKER			
		STA 621 TO 697 RH			
	36151	TERMINAL, CONVAIR 98-90805-001 -V89110-	1		
- 59	22-33906-801	- HARNESS ASSEMBLY, SPLICE AIR CONDITIONING	1		
		COMPARTMENT LH TO SPEAKER HATRACK STA 621 RH			
	36151	. TERMINAL, CONVAIR 98-90805-001 -V00779-	1 1		
	36157	. TERMINAL, CONVAIR 98-90805-008 -V00779-	i		
			i		
	- I				
		N .			
		88			
					-
	5.5				



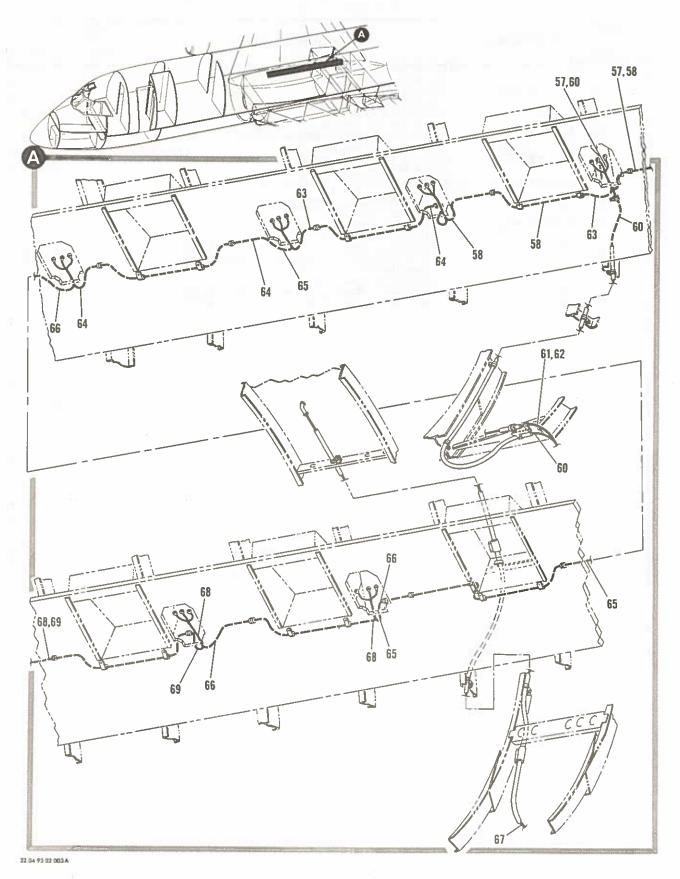

HATRACK SPEAKER
ELECTRONIC HARNESSES STA 659 TO 888
FIGURE 2




FIGURE	PART NUMBER	NOMENCLATURE	USA		UNITS
NDEX NO.	I AKI HOMBEK		FROM	TO	PER ASSEMBI
		1 2 3 4 5 6	1 100		THOUSE MID
		ELECTRICAL AND ELECTRONIC COMPARTMENT			
107	22057	RACK ELECTRONIC HARNESSES LH SEE 22-32000			
-123	22-31853	- HARNESS ASSEMBLY, SHELF B TO NAVIGATOR 1	1		1
	029850-0014	CONTROL PANEL INSERT C	1		
	22-32537-17	. INSERT, CONVAIR 95-02201-005 -V71468-			
	020745-0008	- SHIELD, CONVAIR 98-03501-008 -V71468-			
	36151	- TERMINAL, CONVAIR 98-90805-001 -V00779-	;		1
-124	22-32829	- HARNESS ASSEMBLY, SHELF B TO VHF 1	_ ;		1
-124	22-32027	COMMUNICATION TRANSMITTER ANTENNA	'		i - '
UG573A-U UG1185U	UG573A-U	- PLUG, CONVAIR 92-47008-002			1
		. PLUG, CONVAIR 92-47003-005	_ i		
-125 22-32899-801	- HARNESS ASSEMBLY, SHELF C PUBLIC ADDRESS	- .j		li	
	22 32077 001	AUDIO TO AUDIO JUNCTION BOX			i '
	22-32537-29	. DECAL	1		1
	320567	- TERMINAL. CONVAIR 98-90805-015 -V00779-	- i		
	36157	. TERMINAL, CONVAIR 98-90805-008 -V00779-			
	320580	. TERMINAL, CONVAIR 98-90814-001 -V00779-			17
	020745-0008	- SHIELD, CONVAIR 98-03501-008 -V71468-	;		1
	029850-0014	. INSERT. CONVAIR 95-02201-005 -V71468-			
-126	22-33872	- HARNESS ASSEMBLY, SHELF B TO MARKER	-		
120	22 33012	BEACON ANTENNA	'		'
	UG573A-U	. CONNECTOR: CONVAIR 92-47008-002			,
-124 1	22-32918	- CONNECTOR, CONVAIR 92-47008-002 - HARNESS ASSEMBLY, AUDIO JUNCTION BUX	-		2
.2001	22 32710	TO RADIO COMPARTMENT SPLICE			'
	36157	- TERMINAL, CONVAIR 98-90805-008 -V00779-			3
	36151	- TERMINAL, CONVAIR 98-90805-001 -V00779-	1 1		21
-124 2	22-33800-801	- TERMINAL, CONVAIR 98-90803-001 -900779-			
-12002	22-33000-001	GYRO SPLICE	'		1
	029850-0007	. INSERT, CONVAIR 95-02201-002 -V71468-			
	020745-0008	. SHIELD, CONVAIR 98-03501-008 -V71468-			;
	22-32537-9	DECAL	_ i		
-127	22-32913	- HARNESS ASSEMBLY, AUDIO JUNCTION BOX TO	- i		-
121	JE/13	RADIO RACK AUDIO SELECTOR PANEL	' '		'
	D024052-0001	- PLATE, CONVAIR 92-63502-003 -V71468-	1 1		1
	320580	- TERMINAL, CONVAIR 98-90814-001 -V00779-	1 1		30
	320567	. TERMINAL, CONVAIR 98-90805-015 -V00779-			6
-128	22-33850-805	- HARNESS ASSEMBLY, ADF 2 LOOP CABLE	- ;		í
7 00 67	7501-9	- CABLE, LOOP ADF	i		i
	1	MFR TO SPEC CONT 22-03468-803 -V02304-	'		· '
-129	22-31854	- HARNESS ASSEMBLY, SHELF B TO GLIDE SLOPE	1 1		1
		TEE ADAPTER	'		ı '
	UG709A-U	CONNECTOR, CONVAIR 92-47008-006	1 1		2
-129.1	22-32901-803	- HARNESS ASSEMBLY, AUDIO JUNCTION BOX	i		ĺ
		TO RADIO COMPARTMENT SPLICE	'		ı '
	36151	. TERMINAL. CONVAIR 98-90805-001	1 1		1
	330580	- TERMINAL, CONVAIR 98-90814-001 -V00779-	- ;		ا
-130	22-32723	- HARNESS ASSEMBLY, ATC TRANSPONDER 2 TO	_ i		,
		DMET 1	'		
	31-301	CONNECTOR, CONVAIR 92-47010-008 -V02660-	1 1		2
	UG274A-U	. ADAPTER, CONVAIR 90-04302-004			1
	JUL 74 - 0	HUNITED CONTAIN TO-0430Z-004	'		Ι ,
				1	

ELECTRONIC HARNESSES ELECTRICAL & ELECTRONIC

COMPARTMENT


FIGURE	PART NUMBER	NOMENCLATURE	USA		UNITS
INDEX NO.	TAKI NOMBER	1 2 3 4 5 6	FROM	то	ASSEMBLY
2 -131	22-32724 31-301	. HARNESS ASSEMBLY, ATC 1 TO DMET 2 . CONNECTOR, CONVAIR 92-47010-008 -V02660-	1		1 2 1
-132	22-32722 UG274A-U	. HARNESS ASSEMBLY, ATC TRANSPONDER 1 TO TRANSPONDER 2 . ADAPTER, CONVAIR 90-04302-004	1	İ	1
-133	31-301 22-32815	. CONNECTOR, CONVAIR 92-47010-008 -V02660- HARNESS ASSEMBLY, SOCKET A3A TO TERM STRIPS SHELF A	1		2 1
	034994-0001	SHELL, CONVAIR 98-02505-016 -V71468-	1		1
-134	029849-0014 320580 22-31859	. INSERT, CONVAIR 95-02202-005 -V71468 TERMINAL, CONVAIR 98-90814-001 -V00779 HARNESS ASSEMBLY, SHELF B TO NAVIGATOR 1	1		29
	029850-0002 034993-0001 020745-0008 22-32537-17	CONTROL PANEL INSERT B . INSERT, CONVAIR 95-02201-001 -V71468 PLATE, CONVAIR 98-02505-001 -V71468 SHIELD, CONVAIR 98-03501-008 -V71468 DECAL	1		1 1 1
-134.	1 22-31811 034993-0001 0024198-0001 029850-0002 020745-0008	- HARNESS ASSEMBLY, SHELF E TO 1 VHF CONTROL PANEL - PLATE, CONVAIR 98-02505-001 -V71468 PLATE, CONVAIR 92-63502-001 -V71468 INSERT, CONVAIR 95-02201-001 -V71468 SHIELD, CONVAIR 98-03501-008 -V71468-	1 1 1		1 1 1
-135	22-32537-15 22-32861	- DECAL - HARNESS ASSEMBLY, SHELF B TO AUDIO JUNCTION BOX	i		i 1
	029850-0014 034993-0001 020745-0008 320580 22-32537-21	. INSERT, CONVAIR 95-02201-005 -V71468 SHELL, CONVAIR 98-02505-001 -V71468 SHIELD, CONVAIR 98-03501-008 -V71468 TERMINAL, CONVAIR 98-90814-001 -V00779 DECAL	1		1 1 14
-136	22-32879-801 UG536A-U UG709A-U	 HARNESS ASSEMBLY, SHELF B TO NAVIGATION ANTENNA TEE ADAPTER CONNECTOR, CONVAIR 92-47009-002 CONNECTOR, CONVAIR 92-47008-006 	1 1		1
-137	22-32906 034993-0001 029850-0014 020745-0008 22-32537-29 320580 36157 320567	- HARNESS ASSEMBLY, SHELF C TO AUDIO JUNCTION BOX - PLATE, CONVAIR 98-02505-001 -V71468 INSERT, CONVAIR 95-02201-005 -V71468 SHIELD, CONVAIR 98-03501-008 -V71468 DECAL - TERMINAL, CONVAIR 98-90814-001 -V00779 TERMINAL, CONVAIR 98-90805-008 -V00779 TERMINAL, CONVAIR 98-90805-015 -V00779-	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		1 1 1 1 20 1
	320300				
			25		



ELECTRONIC HARNESSES
ELECTRONIC

ILLUSTRATED PARTS CATALOG

COMPARTMENT

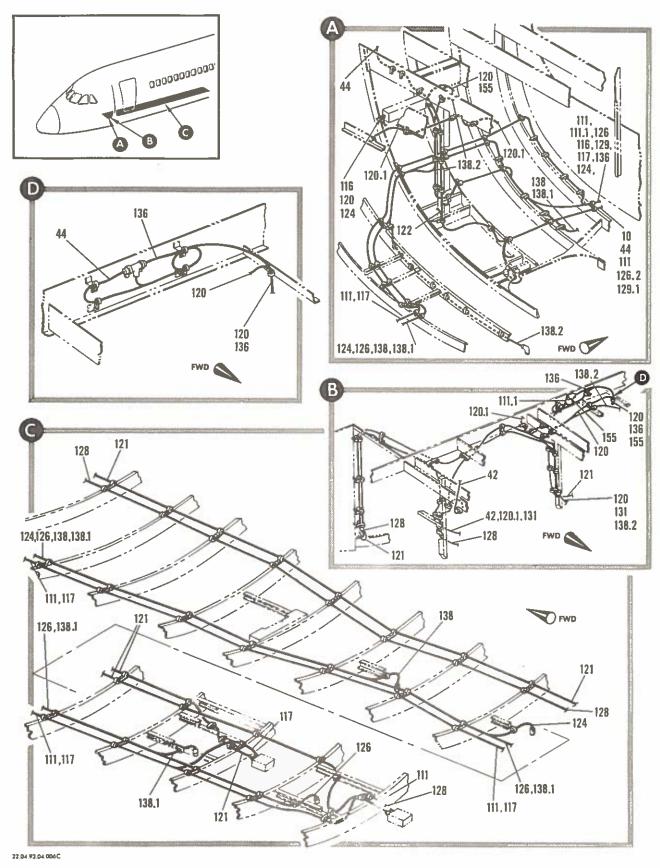


93-4 Page 10

ELECTRICAL AND ELECTRONIC
COMPARTMENT ELECTRONIC HARNESSES LH
FIGURE 3




FIGURE AND	PART NUMBER	NOMENCLATURE		GE DE	UNITS
INDEX NO.		1 2 3 4 5 6	FROM	τo	ASSEMBLY
	22-33870-801 22-33871-801 83700 MS90237-710A UG1213U 22-33873 83700 82-833 MS90237-710A	ELECTRICAL AND ELECTRONIC COMPARTMENT ELECTRONIC HARNESSES LH SEE 22-32001 HARNESS ASSEMBLY, TRANSPONDER 1 TO ANTENNA HARNESS ASSEMBLY, TRANSPONDER 2 TO ANTENNA COVER, CONVAIR 92-74210-001 -V71468- CONNECTOR, CONVAIR 92-47008-004 HARNESS ASSEMBLY, DMET RCVR 1 TO DMET ANTENNA COVER, CONVAIR 92-74210-001 -V71468- CONNECTOR, CONVAIR 92-47006-002 -71468- CONNECTOR, CONVAIR 92-47008-003	1 1 1 1 1 1		1 1 1 1
				Ţ¢.	
				н	
				. <u>.</u>	




SECTION V


Chapter 93 ELECTRONIC HARNESSES

FUSELAGE FWD UNDERFLOOR ELECTRONIC HARNESSES

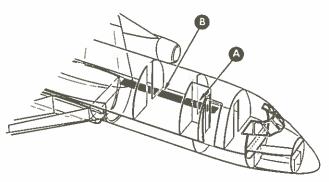

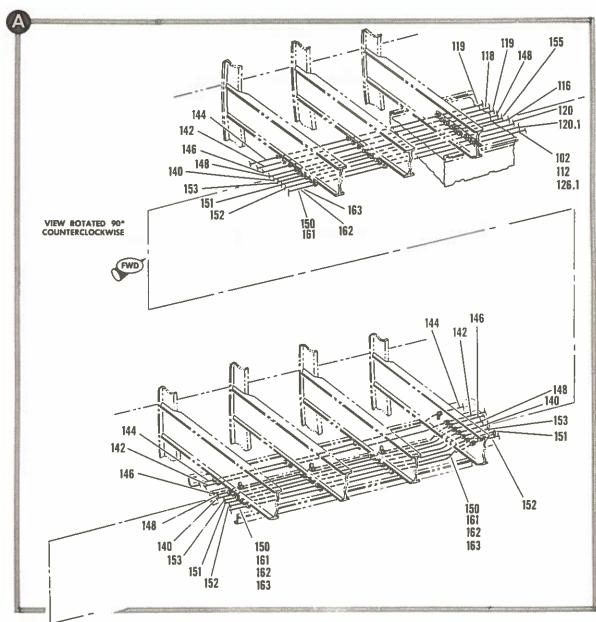

22.04.93.05.001 -18

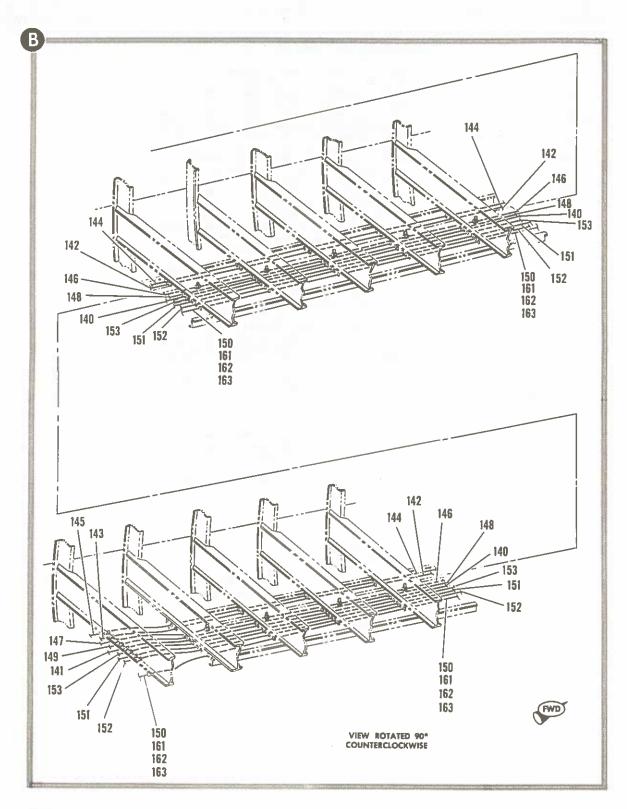


22.04.93.05.001-28


FIGURE AND	PART NUMBER	NOMENCLATURE	USA		UNITS
IDEX NO.	PARI NUMBER	1 2 3 4 5 6	FROM	то	ASSEMBI
	-	FUSELAGE FWD UNDER FLOOR ELECTRONIC			
		HARNESSES FMD CARGO AREA STA 323 TO 622			1
		SEE 22-33003			
-140	22-33867	. HARNESS ASSEMBLY, RADIO COMPARTMENT	1 1		1
		DISCONNECT STA 323 TO 603			1
-144	22-33867-801	- HARNESS ASSEMBLY, RADIO COMPARTMENT DISCONNECT STA 608 TO 926	"		'
-142	22-33930	HARNESS ASSEMBLY, COAX RADIO COMPARTMENT	1 1		1
-142	22-33730	DISCONNECT HE RECEIVER STA 323 TO 603	'		`
-143	22-33930-801	- HARNESS ASSEMBLY. COAX RADIO COMPARTMENT	1		1
		DISCONNECT HE RECEIVER STA 603 TO 926			
-144	22-33938	- HARNESS ASSEMBLY, COAX RADIO COMPARTMENT	1] 1
		DISCONNECT TO AIR CONDITIONING			ĺ
21.5		COMPARTMENT HF1 RECEIVER STA 323 TO 603	1		1 1
-145	22-33938-801	. HARNESS ASSEMBLY. COAX RADIO COMPARTMENT DISCONNECT TO AIR CONDITIONING	'		1 '
		COMPARTMENT HET RECEIVER STA 603 TO 926			1
-146	22-33941	. HARNESS ASSEMBLY, COAX RADIO COMPARTMENT	1 1		1
140	22 33741	DISCONNECT TO AIR CONDITIONING			1
		COMPARTMENT HET TRANSMITTER			
		STA 323 TO 603			1
-147	22-33941-801	- HARNESS ASSEMBLY. COAX RADIO COMPARTMENT			
		DISCONNECT TO AIR CONDITIONING			
		COMPARTMENT HF1 TRANSMITTER			ł
-148	22-33926	STA 603 TO 926 HARNESS ASSEMBLY, COAX RADIO COMPARTMENT	11		
-148	22-33450	DISCONNECT TO AIR CONDITIONING SPLICE			
		HE2 TRANSMITTER STA 323 TO 603			
-149	22-33926-801	. HARNESS ASSEMBLY. COAX RADIO COMPARTMENT	1 1		
		DISCONNECT TO AIR CONDITIONING SPLICE			
		HF2 TRANSMITTER STA 603 TO 926			
	82-888	ADAPTER, CONVAIR 90-04800-003 -V02660-	1 1 1		-
	UG160C-U	CONNECTOR, STA 323 TO 603	1 1		
		CONVAIR 92-57003-008	1 1		
	UG210-U	CONNECTOR, STA 603 TO 926 CONVAIR 92-47003-004	'		1 '
-150	22-33843-801	. HARNESS ASSEMBLY. RADIO COMPARTMENT SPLICE	1		
-150	22-33643-001	TO AIR CONDITIONING COMPARTMENT SPLICE	'		'
		PUBLIC ADDRESS STA 323	90		
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-	1		
	320562	SPLICE, CONVAIR 98-34001-001 -V00779-] 1]		
-151	22-33747	- HARNESS ASSEMBLY. RADIO COMPARTMENT	1	2	
		DISCONNECT TO AIR CONDITIONING			
		COMPARTMENT DISCONNECT ADF 1			
	00 33717 003	STA 323 TO 622	3		
	22-33747-803	HARNESS ASSEMBLY, RADIO COMPARTMENT DISCONNECT TO AIR CONDITIONING	3		
		COMPARTMENT DISCONNECT ADE 1			
		STA 323 TO 622			
-152	22-33747-801	- HARNESS ASSEMBLY. RADIO COMPARTMENT	1 1	2	
		DISCONNECT TO AIR CONDITIONING			
		COMPARTMENT DISCONNECT ADF 2			1
		STA 323 TO 622			
	22-33747-805	. HARNESS ASSEMBLY. RADIO COMPARTMENT	3		
		DISCONNECT TO AIR CONDITIONING			1
		COMPARTMENT DISCONNECT ADF 2	1 1		1
		STA 323 TO 622	1		
-153	UG909U 22-33969	. CONNECTOR, CONVAIR 92-57001-008 . HARNESS ASSEMBLY, COAX AIR CONDITIONING			
-153	22-33404	COM THENT DISCONNECT TO RADIO	1 1		1
		COMPARIMENT DISCONNECT VHF 1			
		COMMUNICATION STA 323			1
	UG160C-U	CONNECTOR, CONVAIR 92-57003-008	1		
	82-888	ADAPTER, CONVAIR 90-04800-003 -V02660-	1		
-155	22-32881	- HARNESS ASSEMBLY, NAVIGATION TEE ADAPTER	1 1		
		TO RADIO COMPARTMENT DISCONNECT			
	UG536A-U	CONNECTOR, CONVAIR 92-47009-002	1		:
	UG28A-U	ADAPTER, CONVAIR 90-04304-004	1 1		\



ELECTRONIC HARNESSES FUSELAGE FWD UNDERFLOOR



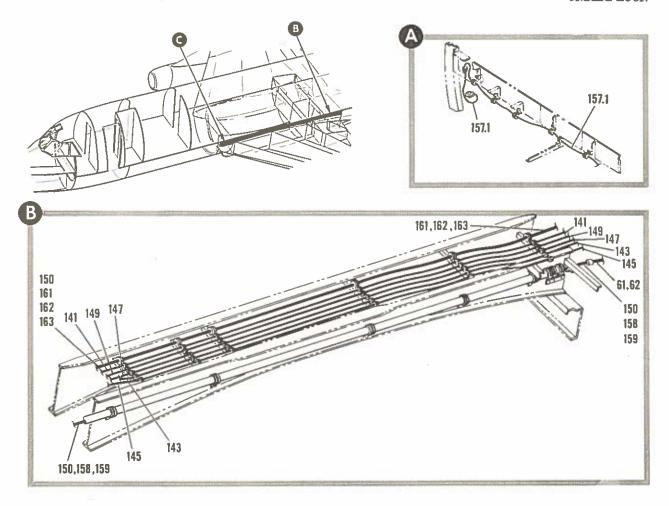

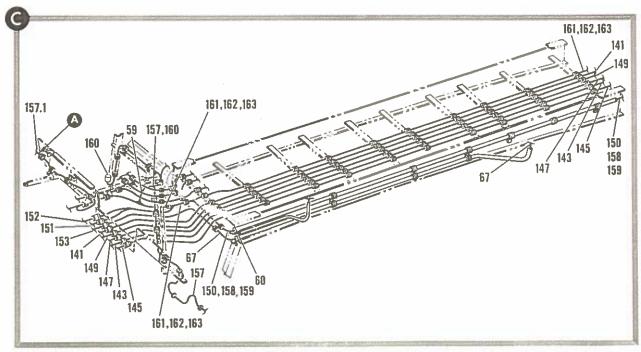

22.04.93.05.007C


ELECTRONIC HARNESSES FUSELAGE AFT UNDERFLOOR




SECTION V

Chapter 93 ELECTRONIC HARNESSES

FUSELAGE AFT UNDERFLOOR ELECTRONIC HARNESSES

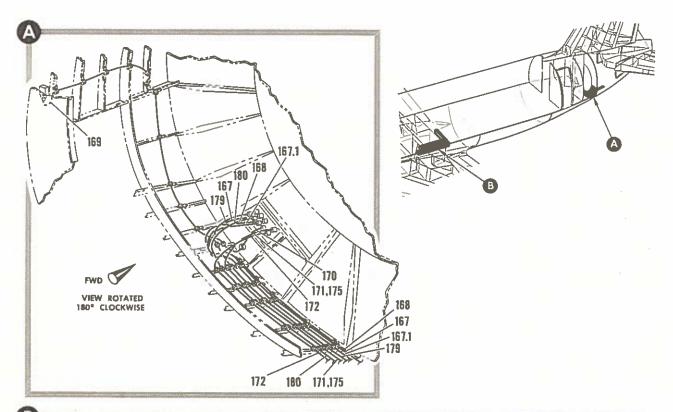


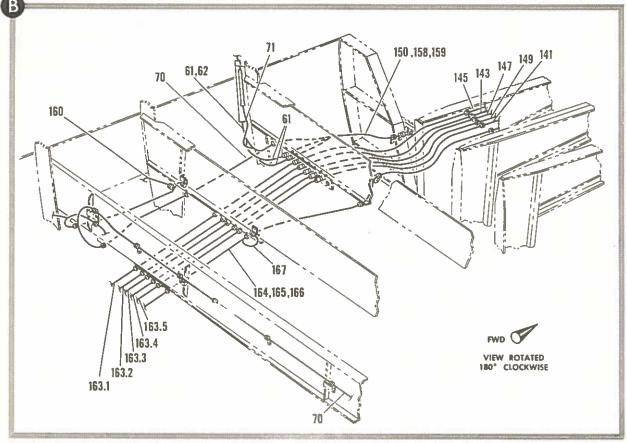

22.04.93.06.0016




FIGURE AND	PART NUMBER	NOMENCLATURE	US/ CO	GE DE	UNITS
NDEX NO.	I AKI NOMBEK		FROM	то	PER ASSEMB
		1 2 3 4 5 6	FROM		N33CME
		FUSELAGE AFT UNDER FLOOR ELECTRONIC HARNESSES			
147		STA 926 TO 1590 LH SEE 22-33004	- I I		
-165-1	22-33938-803	- HARNESS ASSEMBLY, RADIO COMPARTMENT	1 1		
		DISCONNECT TO TAILCONE DISCONNECT HEI			
-147 2	22-33030-003	RECEIVER STA 926 TO STA 1373			
-103-2	22-33930-803	- HARNESS ASSEMBLY, RADIO COMPARTMENT	1		
		DISCONNECT TO TAILCONE DISCONNECT HF2 RECEIVER STA 926 TO STA 1373			1
-147 7	22-33941-803	- HARNESS ASSEMBLY, RADIO COMPARTMENT	1		}
- 103-3	22-33741-803	DISCONNECT TO TAILCONE DISCONNECT HER	, ,		1
		TRANSMITTER STA 926 TO STA 1373			
-163.h	22-33926-803	- HARNESS ASSEMBLY, RADIO COMPARTMENT	1		
10301	22 33720 003	DISCONNECT TO TAILCONE DISCONNECT	'		
		HF1 TRANSHITTER STA 926 TO STA 1373			
-163-5	22-33867-803	- HARNESS ASSEMBLY, RADIO COMPARTMENT	1		
		DISCONNECT TO AFT PRESSURE DISCONNECT			
		STA 926 TO STA 1373			
	UG210-U	CONNECTOR, CONVAIR 92-47003-004	1 1		
	82-888	- ADAPTER, CONVAIR 90-04800-003 -V71468-	i i		
	UG160C-U	JACK, CONVAIR 92-57003-00B	i		
-164	22-33971	- HARNESS ASSEMBLY, HYDRAULIC COMPARTMENT	i		
		SPLICE TO AFT PRESSURE DISCONNECT HF2			
	MS3100E20-295W	- CONNECTOR, CONVAIR 92-50279-005	1 1		
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-	1		1 1
-165	22-33955	- HARNESS ASSEMBLY, HYDRAULIC COMPARTMENT	1 1		1
]		SPLICE TO AFT PRESSURE DISCONNECT HET			1
	MS3100E20-29S	- CONNECTOR, CONVAIR 92-50279-003	1 1		1
i	320559	- SPLICE, CONVAIR 98-34001-003 -V00779-	1		
1	323975	- SPLICE, CONVAIR 98-34009-003 -V00779-	1 1		1
-166	22-33743	- HARNESS ASSEMBLY, HYDRAULIC COMPARTMENT	1 1		
		SPLICE TO TAILCONE PRESSURE DISCONNECT PA			1
j	MS3100E14S6S	CONNECTOR, CONVAIR 92-50278-001	!		
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-	1 ! !		
	320562	SPLICE, CONVAIR 98-34001-001 -V00779-	1 1		Ι.
-167	323975 22-33928	- SPLICE, CONVAIR 98-34009-003 -V00779-	1 1		1
-101	22-33450	- HARNESS ASSEMBLY, AFT PRESSURE DISCONNECT	1		
		TO VERTICAL FIN DISCONNECT HE			
-167 1	22-33928-801	COMMUNICATION TRANSMITTER NO 1 - HARNESS ASSEMBLY, AFT PRESSURE DISCONNECT	1 1		
,,,,,,	22-33720-001	TO VERTICAL FIN DISCONNECT HE	'		1
		COMMUNICATION TRANSMITTER NO 2			1
	UG1185U	. CONNECTOR, CONVAIR 92-47003-005	1		
	82-888	- ADAPTER, CONVAIR 90-04800-003 -V02660-	i		
-168	22-33931	- HARNESS ASSEMBLY, AFT PRESSURE DISCONNECT	1 1		1
		TO VERTICAL FIN DISCONNECT WHE NAVIGATION	'		
	UG1185U	- CONNECTOR, CONVAIR 92-47003-005	1 1		1
	82-888	- ADAPTER, CONVAIR 90-04800-003 -V02660-	- i		
-169	22-33744	. HARNESS ASSEMBLY, TAILCONE SPLICE TO	i		-
		TAILCONE JACKBOX	'		
	WK6-21C1-2	CONNECTOR, CONVAIR 92-40117-001 -471468-	1 1		1
-170	22-33745	- HARNESS ASSEMBLY, TAILCONE PRESSURE	1		
]		DISCONNECT TO TAILCONE SPLICE			
	MS3106E14S6P	CONNECTOR, CONVAIR 92-40307-003	1		
-171	22-35934	. HARNESS ASSEMBLY, TAILCONE SPLICE TO	i		
		JACKBOX HF COUPLER ACCESS			
	WK6-21C1-2	CONNECTOR, CONVAIR 92-40117-001 -V71468-	1 1		1

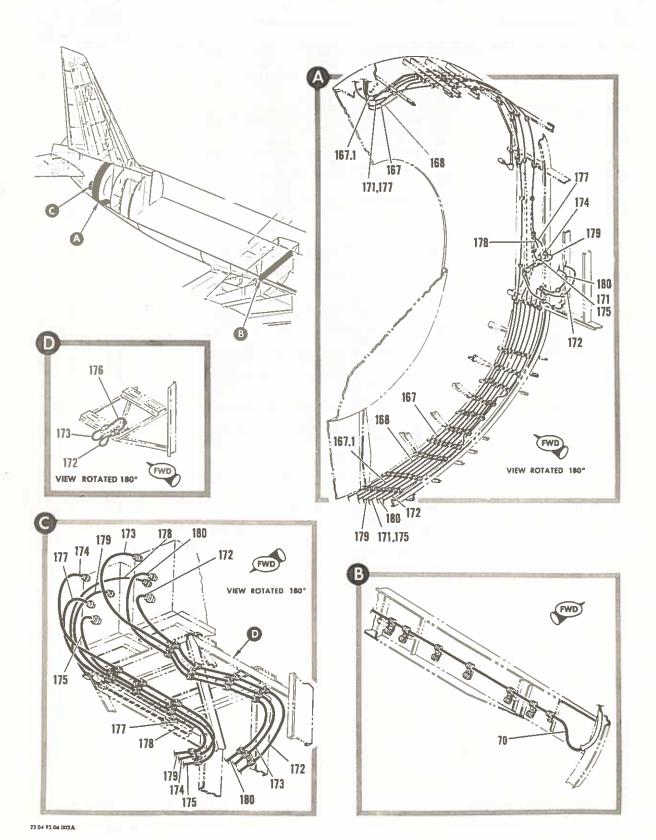

93-6 Page 4 FUSELAGE AFT UNDERFLOOR ELECTRONIC HARNESSES STA 926 TO 1590 RH FIGURE 2

FIGURE			USA		UNITS
AND INDEX NO.	PART NUMBER	NOMENCLATURE	FROM	то	ASSEMBI
2		FUSELAGE AFT UNDER FLOOR ELECTRONIC HARNESS STA 926 TO 1590 RH SEE 22-33004	11	<u> </u>	
-172	22-33953	. CONNECTOR, CONVAIR 92-40058-018 . HARNESS ASSEMBLY, AFT PRESSURE DISCONNECT	1		1
	MS3106E20-29PW DM9700-37SW	TO HF2 COUPLER CONTROL CONNECTOR, CONVAIR 92-40296-006 CONNECTOR, CONVAIR 92-40317-004 -V17419-	1 1		1
	323287 320559	. PLUG, CONVAIR 96-89500-001 -V00779- . SPLICE, CONVAIR 98-34001-003 -V00779-	1		9
-173	320562 22-35932	- SPLICE, CONVAIR 98-34001-001 -V00779 HARNESS ASSEMBLY, HF2 COUPLER CONTROL TO - HF2 COUPLER	1		5
-174	DM9700-37S DM9700-7S 22-35928	CONNECTOR, CONVAIR 92-40317-003 -V17419- CONNECTOR, CONVAIR 92-40317-001 -V17419- . HARNESS ASSEMBLY, HF1 COUPLER CONTROL TO	1 1		1
7174	DM9700-37S	HF1 COUPLER . CONNECTOR, CONVAIR 92-40317-003 -V17419-	1		
-175	DM9700-75W 22-33954	. CONNECTOR, CONVAIR 92-40317-002 -V17419- HARNESS ASSEMBLY, DISCONNECT STA 1373 TO HF1 COUPLER CONTROL	1		1
	MS3106E20-29P DM9700-37SW	. CONNECTOR, CONVAIR 92-40296-004 . CONNECTOR, CONVAIR 92-40317-004 -V17419-	1 1		1
	320562 320559 323287	. SPLICE, CONVAIR 98-34001-002 -V00779- . SPLICE, CONVAIR 98-34001-003 -V00779- . PLUG. CONVAIR 96-89500-001 -V00779-		:	
-176	22-33977	- HARNESS ASSEMBLY, JUMPER REPLACE NO 2 HF COUPLER CONNECTION	1		
-177	DM9609-37P DM9609-37PW 22-35924	. CONNECTOR, CONVAIR 92-40058-017 -V17419- . CONNECTOR, CONVAIR 92-40058-018 -V17419- . HARNESS ASSEMBLY, HF COUPLER CONTROL TO HF	1 1		
-178	22-35924-801	COUPLER ASSEMBLY COMMUNICATION 2 . HARNESS ASSEMBLY, HF COUPLER CONTROL TO HF	1		
-179	UG627A-U 22-33935	COUPLER ASSEMBLY COMMUNICATION 1 CONNECTOR, CONVAIR 92-47008-005 HARNESS ASSEMBLY, TAILCONE DISCONNECT HF		10	
	22-33935-803	COUPLER 1 CONTROL - HARNESS ASSEMBLY, TAILCONE DISCONNECT HF	11		
-180	22-33935-801	COUPLER 1 CONTROL HARNESS ASSEMBLY, TAILCONE DISCONNECT HF COUPLER 2 CONTROL	1	10	
	22-33935-805	HARNESS ASSEMBLY, TAILCONE DISCONNECT HF COUPLER 1 CONTROL	11		
	UG536A-U UG88C-U	- CONNECTOR, CONVAIR 92-47009-002 - CONNECTOR, CONVAIR 92-47001-007			
		2			



ELECTRONIC HARNESSES VERTICAL STABILIZER




SECTION V


Chapter 93 ELECTRONIC HARNESSES


VERTICAL STABILIZER ELECTRONIC HARNESSES




ELECTRONIC HARNESSES VERTICAL STABILIZER

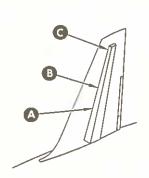

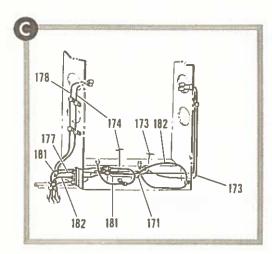

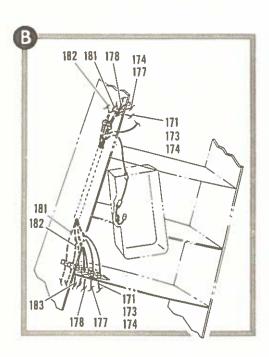

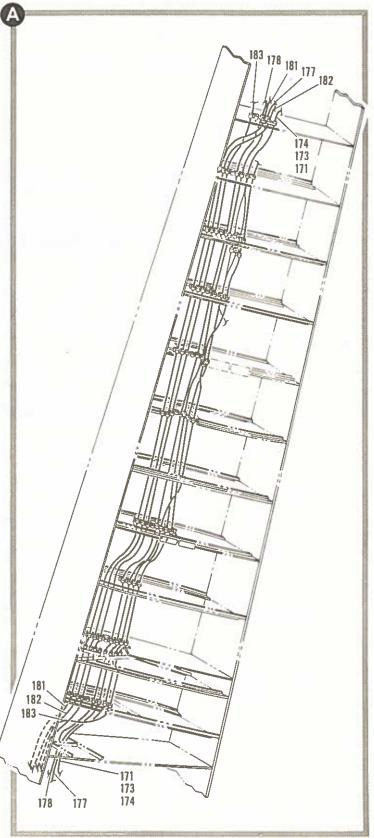

22 04 93 07.002



FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNITS
INDEX NO.		1 2 3 4 5 6	FROM	то	ASSEMBI
1 -181 -182	22-35923 22-35923-801	VERTICAL STABILIZER ELECTRONIC HARNESSES SEE 22-34111 HARNESS ASSEMBLY, VERTICAL FIN DISCONNECT TO HF COMMUNICATION TRANSMITTER 1 COUPLER HARNESS ASSEMBLY, VERTICAL FIN DISCONNECT TO HF COMMUNICATION TRANSMITTER 2 COUPLER	1		1 1
-163	82-888 UG230-U UG1600-U 22-35860	. ADAPTER, CONVAIR 90-04800-003 -V02660- . CONNECTOR, CONVAIR 92-47003-008 -V81350- . CONNECTOR, CONVAIR 92-57003-008 -V81350- . HARNESS ASSEMBLY, VERTICAL FIN DISCONNECT	1		
	82-888 UG1158U UG160C-U	TO VHF NAVIGATION ANTENNA . ADAPTER, CONVAIR 90-04800-003 -V02660 CONNECTOR, CONVAIR 92-47003-005 -V81350 CONNECTOR, CONVAIR 92-57003-008 -V81350-	1 1 1		1
	:		8		



master

GENERAL DYNAMICS/CONVAIR

March 5/62

INSTRUCTION COVER SHEET

TO:

SUBJECT:

All Holders of

ILLUSTRATED PARTS CATALOG

Model 22-2


DAL CS-59-060

COMPLETE REPLACEMENT - CHAPTER 94

Dated Feb. 10/62

243

Remove and destroy all pages now in your manual for Chapter 94. Insert the attached pages to replace those pages just removed.





LIST OF EFFECTIVE PAGES

Section V - Chapter 94 ELECTRICAL HARNESSES

CHAPTER	PAGE	DATE	CODE	CHAPTER	PAGE	DATE	CODE
v-94	i	Feb. 10/62	C-2	94-1	14	Feb. 10/62	C-2
V-94	ii	Feb. 10/62	C-2	94-1	15	Feb. 10/62	C-2
V-94	iii	Feb. 10/62	C-2	94-1	16	Feb. 10/62	C-2
	BLANK	/		94-1	17	Feb. 10/62	C-2
94-0	1	Feb. 10/62	C-2	94-1	18	Feb. 10/62	C-2
94-0	2	Feb. 10/62	C-2		BLANK	•	
	BLANK	•		94-1	20	Feb. 10/62	A-2
	BLANK			94-1	21	Apr. 28/61	A
94-0	5	Feb. 10/62	C-2	94-1	22	Feb. 10/62	C-2
94-0	5 6	Feb. 10/62	C-2	94-1	23	Feb. 10/62	C-2
94-0	7	Feb. 10/62	C-2	94-1	24	Feb. 10/62	C-2
94-0	8	Feb. 10/62	C-2	94-1	25	Feb. 10/62	C-2
94-0	9	Feb. 10/62	C-2	94-1	26	Feb. 10/62	C-2
94-0	10	Feb. 10/62	C-2	94-1	27	Feb. 10/62	C-2
94-0	11	Feb. 10/62	C-2	94-1	28	Feb. 10/62	C-2
94-0	12	Feb. 10/62	C-2		BLANK	•	
94-0	13	Feb. 10/62	C-2	94-1	30	Feb. 10/62	A-2
94-0	14	Feb. 10/62	C-2	94-1	31	Feb. 10/62	C-2
94-0	15	Feb. 10/62	C-2	94-1	32	Feb. 10/62	C-2
94-0	16	Feb. 10/62	C-2	94-1	33	Feb. 10/62	C-2
94-0	17	Feb. 10/62	C-2	94-1	34	Feb. 10/62	C-2
94-0	18	Feb. 10/62	C-2	94-1	35	Feb. 10/62	C-2
94-0	19	Feb. 10/62	C-2	94-1	36	Feb. 10/62	C-2
94-0	20	Feb. 10/62	C-2	94-2	1	Apr. 28/61	A
94-0	21	Feb. 10/62	C-2	94-2	2	Feb. 10/62	A-2
94-0	22	Feb. 10/62	C-2	94-2	3	Feb. 10/62	A-2
94-0	23	Feb. 10/62	C-2	94-2	4	Feb. 10/62	C-2
94-0	24	Feb. 10/62	C-2	94-2	5	Feb. 10/62	C-2
94-0	25	Feb. 10/62	C-2	94-2	6	Feb. 10/62	C-2
-1	BLANK	-016		94-3	1	Apr. 28/61	A _
94-1.	1	Apr. 28/61	A	94-3	2	Feb. 10/62	A-2
94-1	2	Apr. 28/61	A	94-3	3	Feb. 10/62	C-2
94-1	3 4	Apr. 28/61	A	94-3	<u>1</u> =	Feb. 10/62	A-2
94-1		Feb. 10/62	C-2	94-3	5	Feb. 10/62	A-2
94-1	5	Feb. 10/62	A-2	94-3	6	Feb. 10/62	A-2
94-1	6	Apr. 28/61	A	94-3	7	Feb. 10/62	A-2
94-1	7	Feb. 10/62	C-2	94-3	8	Feb. 10/62	A-2
94-1	8	Apr. 28/61	A		BLANK	- 3 - 30/60	
94-1	9	Feb. 10/62	C-2	94-3	10	Feb. 10/62	A-2
94-1	10	Feb. 10/62	C-2	94-3	11	Feb. 10/62	A-2
94-1	11	Feb. 10/62	C-2	94-3	12	Feb. 10/62	A-2
94-1	12	Apr. 28/61	A	94-3	13 14	Feb. 10/62	A-2
94-1	13	Apr. 28/61	A	94-3	14	Apr. 28/61	A



LIST OF EFFECTIVE PAGES (CONT)

				, -	- ,		
CHAPTE	PAGE PAGE	DATE	CODE	CHAPTER	PAGE	DATE	CODE
94-3 94-3 94-3 94-4 94-4 94-4 94-4 94-4	15 16 17 18 1 2 3 4 56 78 9 10	Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62 Apr. 28/61 Feb. 10/62 Feb. 10/62 Apr. 28/61 Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62	C-2 A-2 C-2 A-2 C-2 A-2 C-2 C-2 C-2 C-2	94-5 94-5 94-5 94-5 94-5 94-5 94-5 94-5	17 18 19 20 21 22 23 24 25 26 BLANK 28 29	Feb. 10/62 Apr. 28/61 Apr. 28/61 Apr. 28/61 Feb. 10/62 Apr. 28/61 Feb. 10/62 Apr. 28/61 Feb. 10/62 Apr. 28/61 Feb. 10/62	C-2 A A A C-2 A C-2 C C-2
94-4	BLANK	,			30 BLANK	Feb. 10/62	C-2
94-4 94-4	12 13 14	Apr. 28/61 Apr. 28/61 Apr. 28/61	A A A	94-5 94-5	32 33 BLANK	Apr. 28/61 Feb. 10/62	A A-2
94-4 94-4 94-4 94-4 94-4 94-4 94-4 94-4	15 16 17 18 19 20 21 22 23 24 25 BLANK	Feb. 10/62 Apr. 28/61 Apr. 28/61 Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62	C-2 C C-2 C-2 C-2 C-2 A-2 C-2 A-2 A-2	94-6 94-6 94-6 94-6 94-6 94-6 94-6 94-6	1 2 3 4 5 6 7 8 9 10 11 BLANK	Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62	A-2 A-2 A-2 A-2 A-2 C-2 C-2 C-2
94-5 94-5 94-5 94-5 94-5 94-5	123456	Apr. 28/61 Apr. 28/61 Apr. 28/61 Apr. 28/61 Apr. 28/61 Feb. 10/62	A A A A C2	94-7 94-7 94-7 94-7	1 2 3 4 BLANK 6	Apr. 28/61 Apr. 28/61 Apr. 28/61 Feb. 10/62	A A C-2
94-5 94-5 94-5	7 8 9	Feb. 10/62 Feb. 10/62 Feb. 10/62	C-2 C-2	94-7 94-7	7 8 BLANK	Apr. 28/61 Feb. 10/62	A A-2
94-5 94-5 94-5 94-5 94-5 94-5	10 11 12 13 14 15 16	Feb. 10/62 Feb. 10/62 Feb. 10/62 Feb. 10/62 Apr. 28/61 Apr. 28/61 Feb. 10/62	C-2 C-2 C-2 C-2 A A C-2	94-7 94-7 94-7 94-7 94-7 94-7	10 11 12 13 14 15	Apr. 28/61 Apr. 28/61 Apr. 28/61 Feb. 10/62 Feb. 10/62 Feb. 10/62	C C C-2 C-2 C-2 C-2



LIST OF EFFECTIVE PAGES (CONT)

					•		
CHAPTER	PAGE	DATE	CODE	CHAPTER	PAGE	DATE	CODE
94-7	17	Feb. 10/62	C-2	94-11	4	Feb. 10/62	C-2
94-7	ī8	Apr. 28/61	C	/	BLANK	100. 10/02	U-Z
94-7	19	Apr. 28/61	C	94-11	6	Apr. 28/61	Α
94-7	20	Apr. 28/61	C	94-11	7	Apr. 28/61	A A
94-7	21	Feb. 10/62	C-2	94-11	8	Feb. 10/62	Q-2
94-7	22	160. 10/05	NA	34477	BLANK	160. TO/ 05	U-2
94-7	23		NA	94-11	10	100/67	Α.
94-7	24	Apr. 28/61	A	94-11		Apr. 28/61	A
94-7	25	Feb. 10/62	A-2	94-11	11 12	Apr. 28/61	A
71	BLANK	160° TO\ 05	A-2	34-11		Feb. 10/62	C-5
94-8	1	Feb. 10/62	A 0	01: 33	BLANK 14	00/67	
94-8	5	Feb. 10/62	A-2	94-11		Apr. 28/61	A
94 - 8			A-2	94-11	15	Feb. 10/62	C-2
94 - 8	3 4	Feb. 10/62	A-2	94-11	16	Feb. 10/62	A-2
94 - 0 94 - 9		Feb. 10/62	C-2		BLANK		
94 - 9	1 2	Apr. 28/61	A	94-11	18	Apr. 28/61	A
	2	Apr. 28/61	A	94-11	19	Apr. 28/61	A
94-9	3 4	Apr. 28/61	A	94-11	20	Apr. 28/61	A
94-9	4	Apr. 28/61	A	94-11	21	Feb. 10/62	A-2
94-9	5 6	Feb. 10/62	C-2	94-11	22	Apr. 28/61	A
94-9		Apr. 28/61	A	94-11	23	Feb. 10/62	A-2
94-9	7	Feb. 10/62	A-2	94-11	24	Apr. 28/61	A
94-9	8	Apr. 28/61	A	94-11	25	Feb. 10/62	C-2
94-9	9	Feb. 10/62	A-2		BLANK		
-1	BLANK	-14		94-12	1	Feb. 10/62	A-2
94-10	1	Apr. 28/61	Α	94-12	2	Feb. 10/62	A-2
94-10	2	Apr. 28/61	A	94-12	3 4	Feb. 10/62	A-2
94-10	3 4	Apr. 28/61	A	94-12		Feb. 10/62	C-2
94-10		Feb. 10/62	A-2	94-12	5 6	Feb. 10/62	C-2
94-10	5 6	Feb. 10/62	C-2	94-12	6	Feb. 10/62	C-2
94-10		Feb. 10/62	C-2		BLANK	,	
	BLANK			94-12	8	Feb. 10/62	A-2
94-10	8	Apr. 28/61	A	94-12	9	Feb. 10/62	A-2
94-10	9	Apr. 28/61	· A	94-12	10	Feb. 10/62	C-2
94-10	10	Feb. 10/62	C-2	94-12	11	Feb. 10/62	C-2
94-10	11	Feb. 10/62	C-2	94-12	12	Feb. 10/62	C-2
94-10	12	Feb. 10/62	C-2		BLANK	ŕ	
94-10	13	Feb. 10/62	C-2	94-12	14	Feb. 10/62	A-2
94-10	14	Apr. 28/61	A	94-12	15	Feb. 10/62	A-2
94-10	15	Feb. 10/62	A-2	94-12	16	Feb. 10/62	C-2
94-10	16	Apr. 28/61	A	94-12	17	Feb. 10/62	C-2
94-10	17	Feb. 10/62	A-2	94-12	18	Feb. 10/62	C-2
94-10	18	Apr. 28/61	A	-	BLANK	7	• –
94-10	19	Feb. 10/62	C-2	94-12	20	Feb. 10/62	A-2
	BLANK	,		94-12	21	Feb. 10/62	A-2
94-11	1	Apr. 28/61	A	94-12	22	Feb. 10/62	C-2
94-11	2	Apr. 28/61	A	94-12	23	Feb. 10/62	C-2
94-11	3	Feb. 10/62	A-2	94-12	24	Feb. 10/62	C-2
		r	j				~ –

NA = Not Applicable





ILLUSTRATED PARTS CATALOG

SECTION V

Chapter 94 ELECTRICAL HARNESSES

TABLE OF CONTENTS

CHAPTER- SUBJECT		FIGURE
94-1	FLIGHT COMPARTMENT ELECTRICAL HARNESSES Pilot and Copilot Console Electrical Harnesses Pilot and Copilot Pedestal Electrical Harnesses Pilot Overhead Electrical Harnesses AC Distribution and DC Emergency Box Electronic Harnesses Circuit Breaker Panel Electrical Harnesses Flight Engineer Electrical Harnesses	1 2 3 4 5 6
94-2	FORWARD ENTRANCE ELECTRICAL HARNESSES Forward Entrance Station 301 to 413 Electrical Harnesses	1
94-3	CABIN ELECTRICAL HARNESSES Passenger Compartment Station 390 to 640 Electrical Harnesses	1 2 3 4 5
94-4	FUSEIAGE NOSE UNDERFLOOR ELECTRICAL HARNESSES Nose Landing Gear Electrical Harnesses Forward Flight Deck Electrical Harnesses Nose Wheel Well RH Electrical Harnesses Nose Wheel Well LH Electrical Harnesses Underfloor Station 187 to 250 LH Electrical Harnesses. Underfloor Station 187 to 250 RH Electrical Harnesses.	1 2 3 4 5 6
94-5	ELECTRONIC AND ELECTRICAL COMPARTMENT ELECTRICAL HARNESSES Underfloor Station 250 to 375 RH Electrical Harnesses	123 4567



ILLUSTRATED PARTS CATALOG

TABLE OF CONTENTS (CONT)

CHAPTER- SUBJECT		FIGURE
94 - 6	FUSELAGE FORWARD COMPARTMENT UNDERFLOOR ELECTRICAL HARNESSES Forward Cargo Compartment Underfloor Electrical Harnesses	1
94-7	FUSEIAGE WING SECTION UNDERFLOOR ELECTRICAL HARNESSES Underfloor Front Spar Overwing Electrical Harnesses Overwing Electrical Harnesses Plenum Area Underfloor Station 640 to 926 RH Electrical Harnesses Plenum Area Underfloor Station 640 to 926 LH Electrical Harnesses Underfloor Over Nose Wheel Well Electrical Harnesses.	1 2 3 4 6
94-8	FUSELAGE AFT COMPARTMENT UNDERFLOOR ELECTRICAL HARNESSES Underfloor Hydraulic Compartment RH Electrical Harnesses	1
94-9	TAIL CONE AND STABILIZER ELECTRICAL HARNESSES Tail Cone Electrical Harnesses	1 2 3
94-10	MAIN WHEEL WELL ELECTRICAL HARNESSES Main Wheel Well Forward LH Electrical Harnesses Main Wheel Well Forward RH Electrical Harnesses Main Wheel Well Aft LH Electrical Harnesses Main Wheel Well Aft RH Electrical Harnesses Main Landing Gear Electrical Harnesses	1 2 3 4 5
94-11	WING ELECTRICAL HARNESSES Main Fuel Tank 2 and 3 Wing Electrical Harnesses Wing Leading Edge Electrical Harnesses Wing Trailing Edge Electrical Harnesses Main Fuel Tank 1 and 4 Wing Electrical Harnesses Wing Rear Spar Electrical Harnesses Replenishing Fuel Tank 1 and 4 Wing Electrical Harnesses Wing Trailing Edge Outboard Electrical Harnesses	
94-12	POD AND PYION ELECTRICAL HARNESSES Pod and Pylon 1 Electrical Harnesses Pod and Pylon 2 Electrical Harnesses Pod and Pylon 3 Electrical Harnesses Pod and Pylon 4 Electrical Harnesses	1 2 3 4

ELECTRICAL HARNESSES NUMERICAL PARTS

CONVAIR 880

LIST INDEX

PART NUMBER	CHAPTER AND SUILLECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	OTY. PER ACFT
22-61501-1	94-1 94-5 94-5	6-176 1-176 3-176		22-61512-1	94-1 94-1 94-5	3-39 5-39 1-39	
22-61502-1	94-5 94-1 94-5	6-176 6-177 1-177		22-61513	94-5 94-6 94-1	3-39 1-39 3-53	;
22-61503	94-4 94-5	3-177 3-398 4-398		(94-5 94-5 94-5 94-1	1-53 3-53 6-53	
22-61504	94-5 94-5 94-4 94-4 94-4	1-398 3-398 4-440 5-440 6-440		22-61514	94-1 94-4 94-4 94-5	3-55 5-55 2-55 3-55 1-55	
22-61505-1	94-5 94-1 94-1 94-5	3-440 3-27 5-27 1-27	:	22-61515	94-5 94-1 94-1	3-55 3-28 5-28 3-28	
22-61505-801	95-5 94-1 94-1 94-5 94-5	3-27 3-27 5-27 1-27 3-27		22-61516	94-5 94-5 94-6 94-4 94-4	1-28 3-28 1-28 4-441 6-441	
22-61506	94-1 94-1 94-2 94-5 94-5	3-37 5-37 1-37 1-37 2-37		22-61518	94-5 94-5 94-5 94-6 94-1	1-441 2-441 3-441 1-441 3-47	
:2-61507 :2-61508-1	94-1 94-1 94-5 94-5 94-1	3-51 5-51 1-51 3-51 3-45		22-61519	94-1 94-5 94-5 94-6 94-1	5-47 1-47 3-47 1-47 3-52	
	94-1 94-5 94-5 94-5	5-45 1-45 2-45 3-45		22-61520	94-1 94-4 94-1 94-1	5-52 3-52 3-43 5-43	
22-61508-801	94-6 94-1 94-1 94-5	1-45 3-45 5-45 1-45		22-61521	94-1 94-1 94-4 94-5 94-4	3-56 5-56 1-56 3-56 1-340	
22-61509	94-5 94-6 94-1 94-1 94-4	3-45 1-45 3-38 5-38 3-38		22-61523-1	94-4 94-4 94-4 94-4	1-338 3-338 4-338 1-338 2-338	
22-61510-1	94-5 94-5 94-1 94-1 94-5	1-38 3-38 3-54 5-54 1-54		22-61524-801 22-61525	94-5 94-1 94-1 94-4	3-338 1-339 6-196 3-196 4-196	
22-61510-805	94-5 94-6 94-1 94-1 94-5	3-54 1-54 3-54 5-54 1-54		22-61525-1	94-5 94-5 94-5 94-6 94-1	1-196 2-196 3-196 1-196 6-196	
22-61511	94-5 94-6 94-1 94-1 94-5	3-54 1-54 3-46 5-46 1-46			94-4 94-5 94-5 94-5	3-196 4-196 1-196 2-196 3-196	
22-61511-1	94-5 94-1 94-1 94-5 94-5	3-46 3-46 5-46 1-46 3-46			94-6	1-196	
	:						



PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	OTY. PER ACFT.	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND	OTY. PER ACFT.
22-61526	94-1 94-4 94-5	6-197 3-197 1-197		22-61541	94-1 94-5 94-5	6-164 1-164 3-164	
22-61526-1	94-5 94-6 94-1 94-4 94-5	3-197 1-197 6-197 3-197 1-197		22-61542-1	94-6 94-1 94-1 94-5 94-5	1-164 5-165 6-165 1-165 3-165	
22-61529-1	94-5 94-6 94-4 94-5	3-197 1-197 1-341 3-341		22-61543 22-61544	94-6 94-1 94-5 94-1	1-165 6-198 3-198 6-178	
22-61531-1	94-4 94-4	3-394 4-394 1-394		22-61545	94-5 94-1 94-5	3-178 6-179 3-179	
22-61532 22-61533	94-5 94-1 94-1	3-394 1-8 1-6 3-6		22-61546-1	94-1 94-5 94-5 94-5	6-180 1-180 3-180 6-180	
	94-4 94-4	4-6 5-6 6-6		22-61547	94-5 94-5 94-5	6-181 1-181 3-181	
22-61534-1	94-5 94-5 94-5	1-6 2-6 3-6 3-40		22-61548	94-1 94-5 94-5	6-182 1-182 3-182	1
55-01234-1	94-1 94-2 94-5	5-40 1-40 1-40		22-61549	94-1 94-5 94-5 94-1	6-183 1-183 3-183 6-184	
22-61535	94-5 94-1 94-1	3-40 3-29 5-29		22-61551	94-5 94-5 94-1	1-184 3-184 6-185	
22-61536	94-5 94-5 94-1 94-1	1-29 3-29 1-9 5-9			94-5 94-6 94-7	1-185 3-185 1-185 7-186	
	94-1 94-5 94-5	6-9 1-9 2-9		22-61552	94-1 94-4 94-5	6-186 5-186 1-186	
22-61537	94-5 94-6 94-1 94-1	3-9 1-9 1-10 5-10 6-10		22-61553-1	94-6 94-7 94-1 94-4 94-5	1-186 1-186 6-187 3-187 1-187	
22-61538	94-5 94-5 94-6 94-1	1-10 2-10 3-10 1-10 1-11		22-61554-1	94-5 94-1 94-1 94-4 94-5	3-187 3-48 5-48 3-48 1-48	
	94-1 94-1 94-5 94-5 94-5	5-11 6-11 1-11 2-11 3-11		22-61555	94-5 94-6 94-1 94-1 94-1	3-48 1-48 1-12 5-12 6-12	
22-61539	94-6 94-1 94-1 94-5	1-11 5-162 6-162 1-162			94-5 94-5 94-6	1-12 2-12 3-12 1-12	
22-61540	94-5 94-1 94-1 94-5 94-6	3-162 5-163 6-163 1-163 1-163		22-61556	94-1 94-1 94-4 94-5	5-12 5-166 6-166 4-166 3-166	

CONVAIR 880

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND	OTY PER ACF1
22-61557-1	94-4 94-4	2-364 3-364 1-364		22-61579	94-4 94-5 94-5	5-144 1-144 6-144	
22-61558-1	94-4 94-4 94-4	2-364 3-364 2-385 4-385		22-61580	94-5 94-6 94-5 94-5	3-444 1-444 1-450 2-450	
22-61560-1 22-61562-1 22-61562-1	94-4 94-5 94-4 94-4	5-385 2-539 2-375 3-375		22-61581	94-5 94-6 94-5 94-5	3-450 1-450 1-470 2-470	
22-61562-807 22-61563-1	94-4 94-4 94-4	2-375 3-375 2-378 3-378		22-61581-1	94-5 94-6 94-5	3-470 6-470 1-470 1-470	
22-61565-1	94-5 94-6 94-5	1-378 3-378 1-378 6-576	:		94-5 94-5 94-6	2-470 3-470 6-470 1-470	
22-61566-1	94-5 94-5 94-5 94-5	7-576 3-581 6-581 7-581		22-61582	94-1 94-5 94-5 94-6	6-211 1-211 3-211 1-211	
22-61567-1 22-61568-1	94-5 94-5 94-2	6-578 7-578 1-232		22-61583	94-5 94-5 94-5 94-5	3-589.1 6-589.1 7-589.1 6-580	
	94-5 94-5 94-5	4-232 6-232 7 - 232		22-61584	94-5 94-5 94-5	6-580 7-580 6-577	
22-61569 22-61570	94-5 94-5	6-584 6-579		22-61586	94-5 94-5 94-5	7-577 1-480 7-480	
22-61571	94-1 94-4 94-4	2-25 4-25 6-25		22-61586-1	94-5 94-5	1-480 7-480	
22-61572-1 22-61572-1	94-5 94-4 94-5 94-5 94-5	5-25 2-376 1-376 2-376 3-376		22-61587	94-4 94-4 94-5 94-5	2-381 3-381 4-381 1-381 3-381	
22-61573-1	94-6 94-5 94-5 94-5 94-6	1-376 1-486 2-486 3-486 1-486		22-61587-1	94-6 94-4 94-4 94-4	1-381 2-381 3-381 4-381	
22-61574-1	94-5 94-5 94-6	1-481 2-481 3-481 1-481		22-61588	94-5 94-6 94-4 94-5	3-381 1-381 3-403 1-403	
22-61575-1 22-61576-1	94-5 94-5 94-6	1-482 2-482 3-482 1-482		22-61589	94-5 94-4 94-4 94-5	3-403 2-391 3-391 4-391 1-391	
SS-01) {0-1	94-5 94-5 94-5 94-5 94-6	1-508 2-508 3-508 6-508 1-508		22-61589-1	94-5 94-6 94-4 94-4	3-391 1-391 2-391 3-391	
22-61577-1	94-5 94-5 94-6	1-479 2-479 3-479 1-479		7 1 1 1 1 1 1 1 1 1 1	94-4 94-5 94-5 94-6	4-391 1-391 3-391 1-391	
22-61578	94-5 94-5 94-5 94-5	1-479 1-487 2-487 3-487 1-487		22-61591-1	94-4 94-4 94-5 94-5 94-6	2-383 2-383 3-383 1-383 3-383 1-383	
				10 10 10 10 10 10 10 10 10 10 10 10 10 1			



22-61592-1			ACFT.		SUBJECT	INDEX NUMBER	PER ACFT.
22-61593-1 22-61594-1		2-382.1 2-383.1 2-384		22-61606	94-1 94-4 94-5	5-118 3-118 1-118	
	94-4 94-5 94-5	3-384 1-384 3-384 1-384		22-61607-1	94-5 94-1 94-5 94-5	3-118 5-113 1-113 3-113	
22-61595	94-1 94-5 94-5	6-188 1-188 3-188 1-188		on Galary Rest	94-6 94-7 94-7 94-1	1-113 1-113 6-113	
22-61595-803	94-5 94-5 94-5	1-150 1-172 2-172 3-172 1-172		22-61607-807	94-5 94-5 94-6 94-7	5-113 1-113 3-113 1-113 1-113	
22-61596-1	94-7 94-1 94-5	1-472 6-206 1-206 3-206		22-61608-1	94-7 94-1 94-5 94-5	6-113 5-109 1-109 2-109	
22-61596-5	94-1 94-5 94-5	1-206 6-206 1-206 3-206		22-61609-1 22-61610	94-5 94-6 94-1 94-1	3-109 1-109 5-106 5-125	
22-61596-803	94-1	1-206 6-206 1-206 3-206		22-61611	94-5 94-1 94-5 94-5	3-125 4-85 2-85 3-85	
22-61597	94-6 94-1 94-1	1-206 4-64 5-64 6-64		22-61612	94-1 94-5 94-5 94-5	4-86 1-86 2-86 3-86	
1	94-5	1-64 3-64		22-61613-1	94-5 94-6 94-1	1-86 4-67	
12-61598	94-1 94-1 94-5 94-5	5-167 6-167 1-167 3-167			94-1 94-4 94-5 94-5	5-67 3-67 1-67 2-67	
22-61599-1	94-4 94-4 94-5	1-167 2-387 3-387 1-387		22-61614	94-5 94-6 94-1 94-4 94-4	3-67 1-67 4-80 4-80 6-80	
22-61600-1	94-1 94-5	3-387 5-101 1-101 1-101		22-61615-1	94-4 94-5 94-1 94-4	1-80 2-20 3-20	
22-61601	94-1 94-4	5-149 3-149			311-11 311-11	4-20 5-20	
2-61601-5	94-4	5-149 3-149			94-4	6-20 1-20	
:2-61602 :2-61603-1	94-5 94-6 94-1	5-146 1-146 1-146 5-116		22-61619-1	94-5 94-1 94-1 94-5	3-20 4-79 5-79 1-79	
22-61604	94-5 94-5 94-1	1-116 3-116 6-175 3-175		22-61616	94-5 94-5 94-6 94-5	2-79 3-79 1-79 1-525	
22-61605	94-5 94-5 94-6 94-5 94-5	1-175 3-175 1-175 1-524 3-524 1-524	:	22-61618 22-61619-805	94-5 94-5 94-1 94-5 94-5	3-525 3-553 4-79 5-79 1-79 2-79	
		_ /=-			94-5 94-6	3-79 1-79	
					:		

CONVAIR 880

PART NUMBER	CHAPTER AND SUILIECT	FIGURE AND INDEX NUMBER	OTY. PER ACFT.	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND	PER ACF
22-61619-807	94-1 94-1 94-5	4-79 5-79 1-79		22-61630-1	34-4 34-4 34-4	2-388 3-388 4-388	
	94-5 94-5 94-6	2-79 3-79 1-79		22-61631-1	31 - 1 31 - 1 31 - 1	5-388 2-365 3-365	
22-61619-801	94-1 94-1	4-79 5-79			94-4 94-4	4-365 5-365	
	94-5 94-5 94-5	1-79 2-79 3-79		22-61633-1	94-5 94-5 194-5	1-456 2-456 3-456	
2-61623-3	94-6 94-1	1-79 6-200		22-61635-1	94-4 94-5	4-435 1-435	
2-61624-1	94-5 94-1 94-5	3-200 6-201 1-201			94-5 94-5 94-5	3-435 4-435 5-435	
	94-5 94-6	3-201 1-201		22-61637-1	94-6	1-435	
2-61624-5	94-1 94-5	6-201			94-4 94-5	5-431 1-431 4-431	
2-61620-1	94-5 94-6 94-5	3-201 1-201 6-574.1			94-5 94-5 94-6	5-431 1-431	
2-61221-1	94-4	2-358 2-358		22-61638	3/1-jt	2-354 4-354	
2-61622	94-5 94-5 94-1	6-358 7-358 6-199		22-61639-1 22-61640-1	94-4 94-4	2-546.5 4-412 5-412	
	94-4	3-199 1-199			94-5 94-5	4-412 5-412	
2-61623-1	94-5 94-6 94-1	3-199 1-199 6-200		22-61641-1	94-4 94-4 94-5	4-432 5-432 4-432	
2-61625-803	94-5 94-1	3-200 6-202		22-61643-1	94-5 94-4	5-432 4-436	
	94-5 94-5 94-6	1-202 3-202 1-202		22-61644-1	94-5 94-5 94-4	4-436 5-436 4-419	
2-61624-803	94-1	6-201 1-201		22-01044-1	94-5 94-5	4-419 5-419	
e (1 (er 1	94-5	3-201 1-201 6-202		22-61645-1	94-4 94-5 94-5	4-413 4-413 5-413	
2-61625-1	94-1 94-5 94-5	1-202		22-61646-1	94-4 94-5	4-411	
2-61615-803	94-5 94-6 94-1	1-202 2-20		(aClm -	94-5 94-5 94-4	4-411 5-411	
	3/1-/1 3/1-/1 3/1-/1	3-20 4-20 5-20		22-61647-1	94-4 94-4	2-355 4-355 2-343	
	94-4 94-5	6-20 1-20		22-61651-1	94-H 94-H	4-343 2-357	Å
2-61626	94-5 94-1 94-5	3-20 6-189 1-189			94-4 94-5	4-357 5-357 2-357	
	94-5 94-5	2-189 3-189		22-61652-1	94-4 94-4	11-3111 5-3111	İ
2-61627	94-6 94-1 94-5	1-189 6-190 1-190		22-61653 22-61656-1	94-4 94-5 94-4	5-3 ⁴ 4 5-572 4-427	
	94-5 94-6	3-190 1-190		/	94-5	4-427 5-427	
	9 ¹ 4-7 9 ¹ 4-7	1-190 2-190		22-61659	94-4 94-4 94-5	3-399 4-399 1-399	
		!			94-5	3-399	
				//			



PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	OTY. PER ACFT.	PART NUMBER	CHAPTER AND SUIJECT	FIGURE AND INDEX NUMBER	OTY. PER ACFT
22-61659-1	311-11 311-11	3-399		22-61677	94-4	3-402	
	94-5	4-399 1-399			94-4 94-5	4-402 3-402	
22-61660	94-5 94-4	3-399 3-404	İ	22-61678	94-1	2-13 2-13	
	94-5 94-5	1-404 3-404			94-4	4-13 5-13	
22-61660-1	94-4 94-5	3-404 1-404	T I	22-61679	94-4	6-13	
22-61661	94-5	3-404		22-010/9	94-1 94-1	3-30 5-30	
22-01001	94-1 94-4	5-115 3-115			94-4 94-4	3-30 1-30	
22-61661-1	94-5 94-1	3-115 5-115			94-5 94-6	3-30 1-30	
	94-4 94-5	3-115 3-115	İ	22-61680	94-1 94-1	3-31 5-31	
22-61663	94-1 94-4	2-21 4-21			94-4	3-31	
	94-4	6-21			94-5 94-5	1-31 3-31	
22-61664	94-5 94-1	1-21 2-24		22-61681	94-6	1-31 3-32	
1)	94-1 94-4	6-24			94-1 94-4	5-32 3-32	
22-61665	94-4 94-1	6-24 2-22			94-5	1-32	
22-0100)	94-4	4-22			94-6 94-5	3-32 1-32	i
22-61666	94-4 94-1	6-22 2-23		22-61682	94-1 94-1	3-33 5-33	
	94-4 94-4	4-23 6-23			94-4 94-5	3-33 1-33	
22-61667-1	94-1 94-4	5-111 4-111			94-5	3-33	
00 61669 1	94-4 94-5	3-111		22-61683	94-1	1-33 6-203	
22-61668-1 22-61668-3	94-4	5-443 5-443			94-4	3-203 1-203	
22-61668-5 22-61669-1	04-1 04-1	5-443 4-60			94-5 94-6	3-203 1-203	
		1-60		22-61683-1	94-1	6-203	6.1
į.	94-5	3-60		1	94-5	3-203 1-203	
22-61669-807	94-1	1-60 4-60			94-5 94-6	3-203 1-203	
		1-60 2-60		22-61684	94-1	6-204 3-204	
	94-5	3-60 1-60			94-5	1-204 3-204	
22-61670-801	94-1	6-173		(2(0)	94-6	1-204	
20 CaCara a	94-5	2-173 3-173		22-61684-1	94-1 94-4	3-204	
2-61671-1	34-14 34-14	2377 3-377			94-5	1-204 3-204	
	94-4	4-977 5-377		22-61685	94-6	1-204 6-205	
22-61672	94-1	6-191		22-0100)	94-4	3-205	
	94-5	1-191 3-191			94-5 94-5	1-205 3-205	
22-61673		1-191 5-168		22-61685-1	94-6 94-1	1-205 6-205	
	94-1	6-168 1-168			94-4	3-205 1-205	
	94-5	3-168			94-5	3-205	
22-61674	94-1	1-168 5-169		22-61686	94-6 94-1	1-205 3-3 ⁴	
		6-169 3-169			94-1 94-5	5-34 3-34	
22-61675	94-1	5-170 6-170		22-61687	94-1	3-35 5-35	
22-61676	94-5	3-170		20, 61688	94-5	3-35	
T-0T0 (Q		2-537 3-537		22-61688	94-1 94-1	3-36 5-36	
					94-5	3-36	
			1				
			1.1	- 1			

CONVAIR 880

ILLUSTRATED PARTS CATALOG

PART NUMBER	CHAPTER FIGURE AND PE INDEX NUMBER AC	R PART NUMBER	CHAPTER AND SUBJECT FIGURE AND PER ACFT.
PART NUMBER 22-61689-1 22-61690-1 22-61691-1 22-61692 22-61693 22-61695 22-61695 22-61696 22-61697 22-61698 22-61699 22-61700-1 22-61701-1	AND INDEX NITABED PE	R PART NUMBER	AND INDEX MILLIAGE PER
22-61702-1 22-61702-5	94-5 94-4 94-4 94-4 94-4 94-5 94-5 94-5 94-5 94-9 94-9 94-9 94-9	22-61725-807	94-4 5-421 94-5 2-421 94-5 4-421 94-5 5-421 94-4 4-421 94-4 5-421
22-6170 ¹ 4-1	94-4 3-392 94-5 5-392 94-5 3-392 94-5 1-473 94-5 2-473 94-5 3-473 94-6 1-473	22-61726-1 22-61726-1	94-5 2-421 94-5 4-421 94-5 5-421 94-4 2-374 94-4 4-374 94-5 1-374
22-61705 22-61706 22-61707 22-61708	94-7 1-473 94-7 1-473 94-1 5-136 94-1 5-137 94-1 5-138 94-2 1-138 94-1 5-139	22-61726-809	94-5 4-374 94-5 5-374 94-4 2-374 94-4 4-374 94-4 5-374 94-5 1-374
22-61709	94-1 7-139 94-5 1-139 94-6 1-139 94-1 5-140	22-61727-1	94-5 4-374 94-4 4-422 94-5 4-422 94-5 5-422

Feb. 10/62 C-2 94-0 Page 11



PART NUMBER		URE AND PER ACFT.	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	OTY. PER ACFI
2-61727-5	94-4 4-42 94-5 14-42 54-5 5-42	22	22-61755	94-1 94-5 94-5	5-119 1-119 4-119	
2-61728-1 2-61730-1	94-1 6-20 94-4 2-31 94-4 4-31	9.1	22-61756	94-6 94-4 94-5	1-119 4-428 1-428	
2-61731-1	94-1 2-15 94-4 4-15 94-4 5-15	;		94-5 94-5 94-6	2-428 3-428 11-428	
2-61732-1	94-1 2-16 94-4 5-16		22-61758	94-4 94-5	4-424	
2-61735-1	94-4 4-43 94-4 5-43 94-5 4-43 94-5 5-43	.5 .5 .5	22-61759	94-4 94-4 94-5	4-142 5-142 6-142 1-442	
2-61736-1	94-4 4-43 94-4 5-43 94-5 2-43	13 13	22-61760-1	94-5 94-1 94-5	3-442 4-61 3-61	
	94-5 3-43 94-5 4-43 94-5 5-43	13 13 13	22-61761-1	94-1 94-1 194-1	3-42 4-42 5-42	
2-61737-1	94-4 4-43 94-5 2-43 94-5 3-43	.6 .6 .6	22-61762-1	94-5 94-5	3-42 4-62 3-62	
	94-5 4-41 94-5 5-41	.6	22-61763-1	94-1 94-5	4-69 3-69	
2-61737-809	94-4 4-43		22-61764-1	94-1 94-5	4-66 3-66	
	94-5 3-41 94-5 4-41 94-5 5-41	.6 .6	22-61765-1	94-1 94-5 94-5	4-71 3-71 6-71	
2-61738 2-61738	94-1 6-17 94-5 4-17	14	22-61766-1	94-1 94-5	4-65 3-65	
2-61739	94-1 3-50 94-1 5-50)	22-61767-1	94-1 94-5	4-72 3-72	
2-61740	94-5 3-50 94-1 5-11	7	22-61768-1	94-5 94-5 94-5	1-446 2-448 3-448	
2-61743 2-61743	94-4 4-42 94-5 1-42 94-5 4-42 94-5 5-42	3 3 3	22-61769-1	94-5 94-5 94-5 94-5	6-448 1-448 1-447 2-447 3-447	
2-61744	94-6 1-42 94-5 2-52 94-5 3-52 94-5 4-52	i6 i6	22-61701-1	94-5 94-6 94-1	6-447 1-447 5-110	
2-61746	94-5 1-49 94-5 2-49 94-6 1-49	77	22-61770-1	94-5 94-5 94-4	2-110 3-110 2-361	
2-61750	94-1 5-16 94-4 3-16 94-5 1-16 94-5 3-16	50 50	22-61771 22-61772-1 22-61773	94-4 94-4 94-4	2-386 3-386 2-371 2-345	
2-61752	94-6 11-16 94-1 5-11 94-5 11-11	50 L2 L2	22-6177 ⁴ 22-61775-1	3/1-ft 3/1-ft 3/1-ft	3-395 4-395 2-373	
2-61753	94-5 3-11 94-1 6-17 94-5 1-17	71	22-61776-1	94-4 94-2 94-4 94-4	4-373 3-373 2-350 4-350	
2-61754	94-5 3-1 94-6 1-1 94-1 6-2 94-5 1-2 94-5 3-2	71 10 10	22-61777-1 22-61778-1 22-61779	94-5 94-5 94-1 94-1 94-5 94-5 94-6	6-575.1 6-573.1 6-172 3-172 1-172 3-172 1-172	

NUMERICAL PARTS LIST INDEX

ELECTRICAL HARNESSES CONVAIR 88

PART NUMBER	CHAPTER AND SUILIECT	FIGURE AND INDEX NUMBER	OTY. PER ACFT.	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	OTY PER ACF
2-61780 2-61781-1	94-1 94-5 94-5 94-4 94-4	5-110.1 1-110.1 3-110.1 2-362 4-362		22-61799-1	94-5 94-5 94-5 94-5 94-6	1-454 2-454 3-454 6-454	
2-61783	24-4 24-4	2-363 4-363		22-61800	94-5 94-5	1-516 6-516	
2-61784	94-4	2-351 4-351		22-61801	94-6 94-5	1-516 1-522	
2-61785	94-4 94-4 94-5 94-5	4-425 5-425 3-425 4-425		22-61802	94-5 94-6 94-5 94-5	6-522 1-522 1-515 6-515	
2-61786	94-5 94-5	5-425 4-426 4-426		22-61803	94-6 94-5 94-5	1-515 1-523 6-523	
2-61787	94-5 94-4 94-5	5-426 4-429 5-429 1-429	!	22-61804-3	94-6 94-1 94-5 94-5	1-523 4-93 1-93 6-93	
2-61788	94-5 94-5 94-4	4-429 5-429 4-434		22-61804-5	94-5 94-1 94-5 94-1	7-93 4-97 6-97 4-90	
2-61789	94-4 94-4 94-5 94-5	5-434 4-430 4-430 5-430		22-61805-3	94-5 94-5 94-5	1-90 6-90 7-90	100
2-61790	94-1 94-5 94-5	6-195 1-195 3-195		22-61805-5 22-61806-3	94-1 94-1 94-5	4-94 4-92 1-92	
2-61791	94-1 94-4	1-3 2-3			94-5 94-5	6-92 7-92	
	94-4 94-4	3-3 3-3 4-77		22-61806-5	94-1 94-5	4-96 1-96	
2-61792-1	94-1 94-1 94-2 94-5 94-5	4-77 5-77 1-77 1-77 2-77		22-61807-3	94-5 94-5 94-1 94-5 94-5	2-96 6-96 4-91 1-91 6-91	
2-61792-5 2-61792-5	94-5 94-1 94-1 94-5	3-77 4-78 5-78 2-78		22-61807-5 22-61808	94-5 94-1 94-6 94-7	7-91 4-95 1-609	3
2-61793	94-1 94-5 94-5 94-6	6-207 1-207 3-207		22-61809 22-61810	94-6 94-1 94-1	1-609.1 4-89 5-89	
2-61794	194-5	1-207		22-61811	94-1 94-1	4-87 5-87	
2-61795-1	94-6 94-5 94-5 94-5	1-510 1-449 2-449 3-449		22-61812	94-5 94-5 94-5 94-1	1-87 2-87 3-87 5-141	
2-61796	94-4 94-4 94-5	6-449 2-389 3-389 1-389		22-61812-1 22-61813-1 22-61814	94-1 94-1 94-1 94-1	5-141 5-150 4-88 5-88	200
2-61797-1	94-6 94-4 94-4 94-5	1-389 2-366 3-366 1-366		22-61815 22-61816-1 22-61817 22-61817-807	94-1 94-1 94-1 94-1	5-142 5-159 5-104 5-104	
2-61798-1	94-5 94-5 94-5 94-5 94-6	3-366 1-446 2-446 3-446 6-446		22-61818 22-61818-1 22-61819-1 22-61819-5 22-61820	94-5 94-5 94-1 94-1 94-1	3-552 3-552 5-116.1 5-116.1 5-116.2	



PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	OTY. PER ACFT.	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND	QTY. PER ACFT.
22-61821	94-5 94-5 94-6 94-1	1-459 3-459 1-459 4-59		22-61846	94-1 94-1 94-5 94-5	4-83 5-83 1-83 2-83	
22-61823-1	94-1 94-5 94-5 94-1 94-1	5-59 1-59 3-59 4-58 5-58		22-61847	94-5 94-5 94-1 94-1	3-83 6-83 3-44 5-44	
22-61824-1 22-61825-1 22-61826-1 22-61827-1	94-5 94-1 94-1 94-1 94-1	1-58 5-143 5-151 5-103 5-144		22-61848 22-61849-1 22-61850	94-5 94-5 94-1 94-5 94-5	3-44 3-548 4-74 3-74 1-455	
22-61828-1 22-61829 22-61830-1	94-5 94-1 94-1 94-1 94-1	1-144 5-152 5-105 4-84 5-84	:	22-61851-1	94-5 94-5 94-5 94-5 94-5	2-455 3-455 1-501 2-501 3-501	
22-61830-5	94-5 94-1 94-1 94-5	3-84 4-84 5-84 3-84		22-61852-1 22-61854-1	94-1 94-5 94-4 94-4	4-57 3-57 2-352 4-352	
22-61831-1 22-61831-3 22-61832-1 22-61833-1	94-1 94-1 94-1 94-1	5-145 5-145 5-153 5-102		22-61856 22-61857	94-5 94-5 94-5 94-5	2-538 3-538 1-453 3-453	
22-61833-5 22-61834-1	94-1 94-1 94-5 94-5 94-5	5-102 4-82 1-82 2-82 3-82		22-61858 22-61859 22-61860-1	94-5 94-5 94-1 94-1 94-5	1-452 3-452 2-14 6-192 1-192	
22-61835	94-5 94-5 94-6 94-6	6-82 7-82 1-82 1-606		22-61861-1	94-5 94-1 94-4 94-5	3-192 6-193 3-193 1-193	
22-61836	94-7 94-5 94-5 94-6	1-606 1-471 3-471 1-471		22-61862-1	94-5 94-1 94-5 94-5	3-193 6-194 1-194 3-194	
22-61837 22-61838 22-61839	94-5 94-5 94-6 94-5 94-5	1-509 2-509 1-509 7-586 7-587		22-61863 22-61863	94-1 94-4 94-4 94-4	1-1 1-1 2-1 3-1 4-1	:
22-61840 22-61841 22-61842	94-5 94-5 94-5 94-5	3-588 7-588 7-589 6-585		22-61864	94-1 94-4 94-4	1-2 2-2 3-2 4-2	
22-61843-1	94-1 94-5 94-5 94-5	4-73 1-73 2-73 3-73 6-73		22-61865-1 22-61865-3	0#-# 6#-1 6#-# 6#-1	1-4 3-4 4-4 1-4	
22-61844-1	94-5 94-1 94-5 94-5 94-5	4-63 1-63 2-63 3-63		22-61866	94-4 94-4 94-4	3-4 4-4 3-408 4-408 3-408	
22-61845-1	94-5 94-1 94-5 94-5 94-5	6-63 4-445 1-445 2-445 3-445 6-445		22-61867-1	94-4 94-4 94-5 94-5 94-5	3-407 4-407 1-407 2-407 3-407	



ILLUSTRATED PARTS CATALOG

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND	QTY. PER ACFT.	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND	QTY PER ACFI
22-61867-5	94-4	3-407		22-61887-1	94-4	4-410	
	94-4	4-407			94-1 94-5	6-410	
		1-407		22-61889	94-5	3-410 4-81	
13	Ol 5	3-407		22-01009	94-1	5-81	
2-61868		1-7			94-5	1-81 4-81	
		3-7		22-61892	94-5 94-1	5-126	
2-61869-1	94-4	4-428.1			94-2	1-126	
		4-428.1 5-428.1		22-61893-1	94-5 94-5	1-126 1-571	
2-61870	94-5	2-540		22-01093-1	94-5	5-571	
- 6-0-1	94-5	3-540		22-61894	94-4 94-4	3-400	60
2-61871		2-360 3-360			94-4	6-400	
	94-4	4-360			94-5	1-400	
		1-360 2-360		22-61895-1	94-5 94-5	3-400 1-502	
	94-6	1-360		55-91032-1	94-5	5-502	
2-61872	94-4	3-397			04-6	1-502	
		4-397 1-397	- 1	22-61896	94-5 94-5	1-546.6 2-546.6	
	94-6	1-397			94-5	3-546.6	
2-61873		3-393		C-P	94-4 94-6	1-546.6	
		4-393 1-393		22-61897 22-61896-3	94-4	1-546.6	
	94-6	1-393		22-020/0-3	94-5	2-546.6	
2-61874		3-396 4-396		4	94-5 94-6	3-546.6 1-546.6	
	94-5	1-396		22-61898	94-5	4-565	
- 6-0-6	94-6	1-396			94-6	1-565	
2-61876 2-61876		2-390 4-390		22-61899-1	94-2 94-3	1-231 5-231	
	94-4	5-390 2-349			94-5	1-231	
2-61877	3t-t	2-349			94-5 94-5	2-231	
2-61877	94-4	4-349 5-349			94-5	3-231 4-231	
-	94-5	1-349			94-6	1-231	-
		2-349 3-349		22-61900	94-1 94-5	6-214 3-214	
2-61878	94-1	5-132		22-61901	94-1	6-215	
30	94-4	5-132	-		94-5	1-215	
2-61879 2-61880		5-133 3-13 ¹ ;		The state of the s	94-5 94-5	2-215 3-215	
	94-1	4-134		22-61902	94-5	1-527	1
3 61881		5-134			94-5 94-6	5-527	
2-61881 2-61882	94-1	5-135 5-121		22-61904-1	91+-1t	1-527 2-379	
	94-5	1-121			94-4	3-379	
		3-121 1-121		22-61904-5	94-4 94-5	1-379 2-379	
2-61883	94-1	5-122		26-01904-7	94-4	3-379	1
1	94-5	1-122			94-5	1-379	
		3-122 1-122		22-61906	94-4	2-380	
2-61884	94-1	5-123		1	94-5	1-380	
		1-123		22-61906-1	94-4	2-380	
4		3-123 1-123			94-4 94-5	3-380 1-380	
2-61885	94-1	5-124		22-61907	94-1	2-26	
		1-124 3-124		22-61908-1 22-61909-1	94-4	2-392.1 2-383.1	
	94-6	1-124			94-4	3-383.1	
2-61887		4-409		22-61910	94-5 94-5	1-528	
		1-409 3-409		22-61910-1	194-5	1-528	
				1			
				The state of the s			
11.				2			

Feb. 10/62 C-2



PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	OTY. PER ACFT.	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	OTY. PER ACFT
22-61911 22-61928 22-61929	94-5 94-5 94-1 94-1	2-546.2 3-546.2 6-208		22-62508-3	94-5 94-5 94-5	1-460 2-460 3-460	
22-61929-1 22-61932-801	94-1	6-209 6-209 2-546.1			94-6 94-7 94-7 94-7	1-460 1-460 2-460	
22-61934	94-5 94-4 94-1	3-546.1 2-392.2 3-392.2		22-62508-5 22-62508-5	94-5 94-6	6-460 1-461 1-461	
22-61940 22-61941 22-61982	94-1 94-1 94-4 94-4 94-5	6-213 6-212 3-442.1 4-442.1 1-442.1		22-62509 22-62510	94-7 94-7 94-7 94-8	1-461 2-461 6-461 1-649 3-556	
22-61983	94-5 94-4 94-5 94-5	3-442.1 3-408.1 1-408.1 3-408.1		22-02310	94-5 94-6 94-7 94-7	1-556 1-556 2-556	
22-62500	94-5 94-6 94-7 94-7	1-532 1-532 1-532 2-532		22-62511	94-7 94-5 94-6 94-7 94-7	6-556 3-557 1-557 1-557 2-557	
22-62501	94-7 94-6 94-7 94-7	6-532 1-591 1-591 2-591		22-62512+1 22-62513	94-7 94-7 94-7	6-557 3-621 4-621 1-603	
22-62502	94-7 94-6 94-8	6-591 1-604 1-604			94-6 94-7 94-7	1-603 1-603 2-603	
22-62503	94-5 94-6 94-7	1-504 1-504 1-504 2-504		22-62513-803	94-7 94-5 94-6 94-7	6-603 1-603 1-603 1-603	
22-62504	94-7 94-6 94-7 94-7 94-7	6-504 1-611.1 1-611.1 2-611.1 6-611.1		22-62515 22-62515	94-7 94-7 94-4 94-5 94-5	2-603 6-603 3-405 1-405 2-405	
22-62504-1	94-6 94-7 94-7 94-7	1-611.1 1-611.1 2-611.1 6-611.1			94-5 94-6 94-7 94-7	2-405 3-405 1-405 1-405 2-405	
22-62505	94-5 94-5 94-6	1-474 3-474 1-474 1-474 2-474 2-474		22-62516-1	94-7 94-5 94-5 94-5 94-6	6-405 1-468 2-468 3-468 1-468	
22-62506	94-5 94-5 94-6 94-7	1-458 2-458 1-458 1-458 2-458		22-62517-1	94-7 94-7 94-7 94-5 94-5	1-468 2-468 6-468 1-457 3-457 1-457	
22-62507-3	94-5 94-5 94-6	6-458 1-505 3-505 1-505 1-505 2-505		22-62517-3	94-7 94-7 94-5 94-6	1-457 2-457 6-457 1-457 3-457	
22-62507-5 22-62507-5	94-7 94-5 94-5 94-6	6-505 1-506 3-506 1-506		22-62518-1	94-7 94-7 94-7 94-5	1-457 1-457 2-457 6-457 1-465	
	94-7	1-506 2-506 6-506			94-5 94-6 94-7 94-7 94-7	3-465 1-465 1-465 2-465 6-465	

ELECTRICAL HARNESSES NUMERICAL PARTS

CONVAIR 880

LIST INDEX ILLUSTRATED PARTS CATALOG

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	OTY. PER ACFT.	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	PER ACF
22-62519-1 22-62519-1	94-4 94-5 94-5 94-5	3-406 1-406 2-406 3-406 6-406		22-62527-3	94-5 94-5 94-6 94-7	2-546.3 3-546.3 1-546.3 1-546.3	
22-62520-1	94-6 94-7 94-7 94-7 94-7	1-406 1-406 2-406 6-406 1-489		22-62528-1	94-7 94-7 94-5 94-5 94-6	2-546.3 6-546.3 1-467 2-467 3-467 1-467	
2-62520-1	94-5 94-5 94-5 94-6 94-7	5-489 2-489 3-489 1-489		22-62528-3	94-7 94-7 94-7 94-5 94-5	1-467 2-467 6-467 1-467 2-467	
12-62520-5	94-5 94-5 94-5 94-5 94-6	1-489 5-489 2-489 3-489 1-489			94-5 94-6 94-7 94-7 94-7	3-467 1-467 1-467 2-467 6-467	
2-62521-1	94-7 94-5 94-5 94-5 94-6	1-489 1-498 2-498 3-498 1-498		22-62529	94-5 94-5 94-5 94-5 94-6	1-507 2-507 3-507 6-507	
2-62522	94-7 94-5 94-5 94-6 94-7	1-498 1-451 3-451 1-451		22-62530	94-7 94-7 94-7 94-5 94-5	1-507 2-507 6-507 1-469 2-469	
2-62523 2-62524	94-5 94-5 94-6 94-7 94-5	1-513 3-513 1-513 1-513 1-495			94-5 94-5 94-6 94-7 94-7	3-469 6-469 1-469 2-469	
	94-5 94-5 94-5 94-6 94-7	2-495 3-495 6-495 1-495		22-62530-1	94-7 94-7 94-5 94-5 94-5	6-469 1-469 2-469 3-469 6-469	
22-62525	94-7 94-7 94-4 94-5 94-5	2-495 6-495 3-401 1-401 3-401		22-62531	94-6 94-7 94-7 94-7 94-8	1-469 1-469 2-469 6-469 1-657	
	94-6 94-7 94-7 94-7 94-7	1-401 1-401 2-401 4-401 6-401		22-62532	94-5 94-5 94-6 94-7	1-582 6-582 7-582 1-582 1-582	
2-62526	94-5 94-5 94-6 94-7	1-466 2-466 3-466 1-466		22-62533-1	94-7 94-7 94-5 94-5 94-5	2-582 6-582 1-462 2-462 3-462	
22-62527+1	94-7 94-7 94-5 94-5 94-6 94-7 94-7 94-7	2-466 6-466 1-546.3 2-546.3 1-546.3 1-546.3 2-546.3 6-546.3	1		94-6 94-7 94-7 94-7	1-462 1-462 2-462 6-462	



22-62534 94-5 94-5 94-7 94-7 1-518 94-7 1-528 94-7 1-528 1	CHAPTER AND SUBJECT FIGURE AND PER ACFT. PART NUMBER CHAPTER AND SUBJECT FIGURE AND NUMBER ACFT.		AND	PART NUMBER
22-62535-1 94-7 3-615 94-7 1-515 22-62535-5 94-7 3-615 94-7 1-598 94-7 1-598 94-7 1-598 94-7 1-598 94-7 1-598 94-7 1-598 94-7 1-598 94-7 1-598 94-7 1-598 94-7 1-598 94-7 1-596 22-62537-5 94-7 1-596 22-62537-5 94-7 1-596 22-62537-5 94-7 1-596 22-62537-5 94-7 1-596 22-62537-805 94-7 1-596 22-62537-805 94-7 1-596 22-62537-805 94-7 1-596 22-62538-803 94-7 1-596 22-62538-803 94-7 1-596 22-62538-803 94-7 1-596 22-62538-803 94-7 1-596 22-62538-803 94-7 1-596 22-62538-803 94-7 1-596 22-62538-803 94-7 1-596 22-62538-803 94-7 1-596 22-62538-803 94-7 1-598 94-6 1-514 94-6 1-514 94-6 1-514 94-7 1-513 94-7 1-513 94-6 1-513 94-7 1-513 94-6 1-513 94-7 1-513 94-6 1-514 94-6 1-514 94-6 1-514 94-6 1-514 94-7 1-513 94-7 1-51	94-5 6-518 94-5 7-518 94-5 3-464 94-5 3-464 94-7 1-518 94-7 1-464 94-7 2-464	6-518 7-518 1-518 1-518 2-518	94-5 94-5 94-6 94-7	22-62534
22-62535-5	94-7 6-518 22-62550 94-6 1-598 94-7 3-615	6-518	94-7 94-7	22-62535-1
22-62535-803	94-7 4-615 94-7 2-598		94-7 94-7	22-62535-5
22-62536-1 294-7 294-7 294-7 294-7 294-6 294-7 295-8 294-7 294-8 294-8 294-7 294-8 294-7 294-8 294-7 295-8 294-7 294-8 294-7 294-9 294-7 294-9 294-7 294-9 294-7 294-7 295-9 294-7 294-8 294-7 294-9 294-7 294-8 294-7 294-9 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-7 294-8 294-7 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-7 294-8 294-7 294-8 294-7 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-8 294-7 294-7 294-8 294-8 2	94-7 4-615 94-6 1-597 94-7 1-597	4-615	94-7	22-62535-803
22-62537-1	94-7 4-615 94-7 2-597	4-615	94-7 94-5	22-62536-1
22-62537-5	94-7 3-621.1 22-62552 94-8 1-653 94-5 3-596 22-62552-1 94-8 1-653 94-6 1-596 22-62553-1 94-2 1-235	3-621.1 3-596 1-596	94-7 94-5 94-6	
22-62537-805	94-5 3-596 22-62553-805 94-2 1-235	3-596	94-7	22-62537-5
22-62538-1	94-7 1-596 1-9-69551-1 1-9-69551-1 1-9-69551-1	1-596	04-7	00 60527 805
22-62538-1	94-5 3-230 94-6 1-596 22-62556-1 94-7 3-630	1-596	94-5	22-0273(+007
94-5 2-514 94-5 3-514 94-6 1-514 94-6 1-513 94-6 1-513 94-6 1-513 94-6 1-513 94-7 1-513 94-7 1-513 94-7 1-511 94-5 1-511 94-5 1-511 94-5 1-513 94-7 1-511 94-5 1-511 94-5 1-511 94-6 1-511 94-7 1-511 94-7 1-511 94-6 1-511 94-6 1-511 94-7 1-512 94-8 1-514 94-7 1-610 94-7	94-5 1-514 22-62557-1 94-6 1-632	1-514	94-5	22-62538-1
22-62538-5	94-5 2-514 94-7 3-632 94-5 3-514 22-62558 94-5 1-490	3-514	94-5 94-5	
Sq. 5 Sq.	94-5 1-513 94-5 3-490 94-6 1-490 94-6 1-513	1-513 3-513 1-513	94-5 94-5 94-6	22-62538-5
22-62539 94-5	94-5 2-514 22-62559 94-5 1-511 94-6 1-512	2-514	94-5 94-5	22-62538-803
22-62541	94-6	1-583 6-583 7-583 1-583 1-583	94-5 94-5 94-5 94-6 94-7	22-62539
22-62542	94-7 6-583 94-6 1-592 94-7 1-592 94-7 1-592 94-7 2-592 94-7 2-512	6-583 1-592 1-592 2-592	94-7 94-6 94-7	22-62541
22-62543	94-7 6-592 94-6 1-648 94-7 1-648 94-7 1-648 94-7 6-610	6-592 1-648 1-648	94-7 94-6 94-7	22-62542
94-6 1-519 94-7 1-519 94-7 2-519 94-7 2-519 94-7 6-519 22-62567-5 94-8 1-654 94-5 6-605 94-7 1-605 94-7 1-605 94-7 1-605 94-7 2-605 94-7 2-605 94-7 6-605	94-7 6-648 94-6 1-611 94-5 1-519 94-7 1-611 94-7 2-611	6-648 1-519 6-519	94-7 94-5 94-5	22-62543
22-62545 94-7 3-622 94-7 6-605	94-6	1-519 1-519 2-519 6-519 2-614	94-6 94-7 94-7 94-7 94-7	22-62544
22-62545-3 94-7 3-622 22-62570-1 94-3 1-251 22-62547 94-8 1-652 22-62547-803 94-8 1-652 94-8 1-652	94-7 3-622 94-7 3-622 94-8 1-652 94-8 1-652 94-6 1-251	3-622 3-622 1-652	94-7 94-7 94-8	22-62545-3 22-62547

CONVAIR 880

	MBER CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	OTY. PER ACFT.	PART NUMBER	CHAPTER AND SUIJECT	FIGURE AND INDEX NUMBER	PER ACF
22-62571	94-5	1-503 3-615.2		22-62597-1	94-5 94-5	1-478 3-478	
22-62572-1	94-5 94-7	3-615.2			94-6	1-478	
on forms s	94-7 94-7	4-615.2 3-625		22-62600	94-7 94-5	1-478	
22-62573-1 22-62573-5	94-7	3-625	1	22-02000	94-5	2-491	
22-62576	94-5 94-7	3-616.1 3-616.1		1	94-5 94-6	3-491 1-491	
	94-7	4-616.1			94-7	1-491	
22-62577	94-5 94-5	1-533 3-533			94-7 94-7	2-491 6-491	
22-62577	94-6	1-533		22-62601	94-5	1-484	
22-62579	94-5 94-6	3-561 1-561			94-5 94-5	3-484	
22-62580	94-5	1-517			94-6	1-484	
	94-5 94-5	2-517		1	94-7 94-7	1-484 2-484	
	94-6	3-517 1-517			94-7	6-484	
	94-7	1-517		22-62602	94-5 94-5	1-492 2-492	
	94-7 94-7	2-517 6-517		1	94-5	3-492	
22-62581	94-5 94-5	1-499			94-6 94-7	1-492	
	94-5	2-499 3-499			94-7	2-492	
	94-6	1-499		00 60603	94-7 94-5	6-492	
	94-7 94-7	1-499 6-499		22-62603	94-5	2-488	
22-62582-1	194-7	3-616		1	94-5 94-6	3-488	
22-62583-1	94-7 94-7 94-7	4-616 3-617 4-617			94-7 94-7	1-488	
22-62583-3	94-7 194-7	3-617 4-617	1	22-62604	94-7 94-5	6-488	
22-62584-1	94-7	3-623 4-623			94-5 94-5	2-493 3-493	
22-62587-1	94-7 94-7	3-618 4-618			94-6 94-7	1-493 1-493	
22-62588-1	94-5 94-7	1-626 3-626			94-7 94-7	2-493 6-493	
22-62589-1 22-62591	94-7 94-5 94-8	3-633 1-655 1-655		22-62605	94-5 94-5 94-5	1-485 2-485 3-485	
22-62592-1	94-7 94-7	3-627		3	94-6 94-7	1-485	
22-62592-5 22-62593	94-7	3-627 3-637			94-7	2-485	
22-62594	94-7 94-7	3-627.1 4-627.1		22-62606	94-7 94-5	6-485 1-494	
22-62595-1	94-5	1-472		22-02000	94-5 94-5	3-11-011 5-11-011	
22-62595-5	94-5 94-5	1-472 2-472			94-6 94-7	1-494 2-494	
22-62595-803	94-5 94-5	1-472 2-472		22-62607	94-7 94-5	6-494 1-483	
22-62596-1	94-5 94-6	3-551			94-5 94-5 94-6	2-483 3-483 1-483	
22-62596-3	94-7 94-5 94-6	1-551 3-551 1-551			94-7 94-7	1-463 1-483 2-483 6-483	
22-62596-5	94-7 94-5 94-6	1-551 3-551 1-551		22-62608	94-7 94-5 94-6	3-615.1 1-615.1	
	94-7 94-5 94-6	1-551 3-551 1-551			94-7 94-7 94-7	1-615.1 2-615.1 3-615.1	



PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	OTY. PER ACFT.	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	OTY. PER ACFT.
22-62609	94-5 94-7	3-637.1 3-637.1		22-62625	94-5 94-5	2-545 3-545	
22-62610	94-5 94-7 94-7	3-640.1 1-640.1 2-640.1			94-6 94-7 94-7	1-545 1-545 2-545	
22-62611 22-62612	94-7 94-8 94-6 94-7	4-640.1 1-656 1-590 1-590 2-590		22-62626	94-7 94-6 94-7 94-7 94-7	6-545 1-593 1-593 2-593 6-593	
22-62613 22-62614-1	94-8 94-5 94-3 94-5 94-8	1-590 2-543 5-329 3-329		22-62627-1	94-5 94-6 94-7 94-7	3-608 1-608 1-608 2-608	
22-62616	94-5 94-6 94-7 94-7	1-329 1-475 1-475 1-475 2-475		22-62627-805	94-7 94-5 94-6 94-7	3-608 1-608 1-608 2-608	
22-62617	94-7 94-5 94-5 94-5 94-6	6-475 1-476 2-476 3-476 1-476		22-62628-1 22-62629-1 22-62630	94-7 94-7 94-7 94-7 94-8	6-608 3-628 3-619 4-619 1-658	
22-62617-5	94-7 94-7 94-7 94-5 94-5	1-476 2-476 6-476 1-476 2-476		22-62632 22-62633 22-62634-5	94-7 94-7 94-7 94-7 94-7	3-636 3-634 4-634 3-620	
	94-5 94-6 94-7 94-7	3-476 1-476 1-476 2-476		22-62634-801 22-62635	94-7 94-7 94-6 94-7	3-620 4-620 1-599 2-599	
22-62618-1	94-7 94-5 94-5 94-5 94-6	6-476 1-477 2-477 3-477 1-477		22-62635-1 22-62635-1 22-62635-3 22-62635-3	94-6 94-7 94-6 94-7 94-7	1-600 2-600 1-601 2-601 4-601	
22-62618-5	94-7 94-7 94-5 94-5 94-5	1-477 2-477 1-477 2-477 3-477		22-62635-5 22-62635-5 22-63500	94-6 94-7 94-7 94-7 94-2	1-602 1-602 2-602 6-602 1-223	
22-62619	94-6 94-7 94-7 94-5	1-477 1-477 2-477 2-541		22-63503-1 22-63503-807	94-3 94-3 94-8 94-3	1-223 5-324 1-324 1-324	
22-62620-803	94-6 94-7 94-7 94-8 94-1	1-541 1-541 2-541 1-541 5-127		22-63504-801	94-3 94-1 94-2 94-6 94-1	5-324 5-128 1-128 1-128 5-129	
22-62621	94-2 94-2 94-6 94-7	1-127 1-217 1-217 1-217		22-63508-801	94-2 94-3 94-1 94-2	1-129 1-129 5-130 1-130	
22-62622-1	94-7 94-7 94-3 94-8	2-217 6-217 4-318 5-318 1-318		22-63509 22-63510	94-6 94-7 94-3 94-3	1-130 1-130 5-326 4-319 5-319	
22-62623	94-2 94-5 94-6 94-7	1-247.1 3-247.1 1-247.1 1-247.1		22-63511 22-63512 22-63513	94-3 94-3 94-2 94-3	4-320 5-320 1-229 5-327	
22-62624	94-7 94-6 94-7 94-7	2-247.1 6-247.1 1-594 1-594 6-594		22-63514-801	94-1 94-2 94-3	5-131 1-131 1-131	
				l l			



PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND	PER CFT.	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	OTY. PER ACFI
2-63516	94-3	5-321		22-63566	94-2	1-244	1
2-63518	94-6 94-2	1-321 1-236		22-63569	94-3 94-1	1-244 5-222	
2-63519	94-3 94-3	1-252			94-2	1-222	
2-63520 2-63521	94-3	2-282 1-249		3	94-5 94-5	1-222	
2-63522	94-3	1-250			94-5	3-222	
. farm	94-6 94-2	1-250 1-248	- 1	22-63571	94-6	1-222 5-33 ¹ 4	
2-63523	94-6	1-248		22-63572	94-3 94-3	1-257	
2-63524	94-3	1-273		22-63573	94-3 94-3	1-253	
2-63525	94-3 94-3	2-273 1-273		22-63574 22-63575	94-3	1-257	
	94-3	2-273		22-63576	94-3	1-258	
2-63526	94-3	2-285 3-285	- 1	22-63577 22-63578	10h-3	1-253.1	
2-63527	94-3 94-3	2-285		22-63579	94-3 94-3	1-258	
2-63528	94-3 94-3	3-285 3-317		22-63580	94-3	2-258	
2-63530	94-3 94-3	2-282		22-63581	94-1	5-237	
2-63529	94-3	3-317	- 1		94-2 94-6	1-237	
2-63531 2-63532	94-2	1-240			94-7	2-237	
	94-3 94-3	1-240		22-63582	94-3	5-332	
2-63534 2-63535	94-3	1-267		22-63583 22-63584	94-3 94-3	3-300.2	
2-63536	94-3 94-3	1-268		22-63585	94-3	5-333	
2-63537 2-63538	94-3	1-269		22-63586	94-2 94-6	1-242	
2-03/30	94-3 94-3 94-3 94-3	2-271		22-63587	94-3	1-261	
2-63539	94-3	1-271 2-271			94-3 194-3	2-261 3-261	
2-63540	94-3 94-3 94-3 94-3 94-3 94-3 94-3	2-283		22-63588	94-3	1-261	
4	94-3	3-283			94-3 94-3	2-261 3-261	
2-63541 2-63542	94-3	2-283		22-63589	94-3	2-284	
2-63543	94-3	3-301.1			94-3	3-284	
2-63544 2-63545	94-2 94-2	1-241 5-331		22-63590 22-63590-1	94 - 3	1-254	
2-63549	94-3	3-300	1	22-63590-3	94-3	1-259	1
2-63551	194-3	4-326.1 5-326.1		22-63591	94-3 94-3	1-254	
2-63553	94-3 94-3 94-3 94-3 94-3 94-2	1-216	- 1	22-63591-1 22-63591-3	94-3	1-259	
	94-3 94-3	1-216		22-63592	94-3	1-262 1-263	
2-63554	94-3	2-216		22-63592-1 22-63592-3	94-3	1-266	
_ 03//.	94-3	1-224		22-63592-5	94-3	2-275	
	94-3 94-3	2-224 3-224		22-63592-801 22-63592-803	94-3	2-277 1-278	
2-63555	ļ94-3	3-300.1		22-63592-803	94-3	2-278	
2-63556	94-2 94-3	1-234		22-63593	94-3 94-3	1-262	1
	94-6	1-234		22-63593-1 22-63593-3	94-3	1-266	
2-63557	94-2	1-245		10	94-3	2-266	
2-63558	94-3 94-3	1-253		22-63593-5	94-3	1-275	
2-63559	94-3	1-256		22-63593-801	94-3	2-277	
2-63560.1 2-63561-1	94-2 94-3	1-219		22-63594	94-3 94-3	2-288 3-288	
2-63562-1	94-Î	5-218		22-63594-1	94-3	2-290	1
2-63563-1	94-2 94-3	1-218		22-63594-3 22-63594-5	94-3 94-3	2-292 3-294	
2-63564	94-2	1-220		22-63594-801	94-3	3-296	19
2-63565	94-5 94-3	4-220 5-323		22-63594-803	94-3	3-298	
2-03707	P**-3	7-3-3					



ELECTRICAL HARNESSES NUMERICAL PARTS LIST INDEX

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	OTY. PER ACFT.	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND	OTY. PER ACFT.
22-63595 22-63595-1 22-63595-3 22-63595-801 22-63596 22-63596-1 22-63596-1 22-63596-3 22-63596-801 22-63596-801 22-63597-801 22-63597-1 22-63597-1 22-63597-1 22-63597-801 22-63597-801 22-63597-801 22-63597-801 22-63597-802 22-63598 22-63598 22-63599 22-63599-1 22-63600-1 22-63600-1 22-63600-1 22-63600-1 22-63601-1 22-63601-5 22-63601-801 22-63601-801 22-63602-5 22-63602-803 22-63603-1 22-63603-803 22-63603-1 22-63603-803 22-63604-801 22-63604-803 22-63604-801 22-63604-803 22-63604-803 22-63604-803 22-63605-803 22-63605-803 22-63605-803 22-63605-803 22-63605-803 22-63605-803 22-63605-803 22-63605-803 22-63605-803 22-63605-803 22-63605-803 22-63605-803 22-63605-803 22-63605-803 22-63605-803 22-63605-803 22-63605-803 22-63605-803 22-63605-803	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	2-286 3-286 3-286 2-290 2-292 3-294 3-3-309 3-310 3-313 3-313 3-313 3-313 3-314 3-313 3-314 3-315 5-314 1-264 1-264 1-265 2-276 1-264 1-265 2-276 2-287 2-289 2-293 3-390 3-300 1-3-303 3-303 3-303 3-303 3-304 3-305 3-306 3-307 3-306 3-307 3-		22-63607-1 22-63607-3 22-63607-5 22-63609 22-63611 22-63612 22-63613 22-63614 22-63615 22-63616 22-63622 22-64302-1 22-64302-15 22-64302-17 22-64302-19 22-64302-29 22-64302-31 22-64302-31 22-64302-31 22-64302-31 22-64302-35 22-64302-37 22-64302-45 22-64302-45 22-64302-17 22-64302-19 22-64302-19 22-64302-31 22-64302-31 22-64302-31 22-64302-31 22-64302-31 22-64302-45 22-64302-45 22-64302-12 22-64302-12 22-64302-9 22-64302-9 22-64504 22-64509 22-64509 22-64509 22-64511 22-64513 22-64513 22-64515	94-11 94-10 94-11 94-10 94-10 94-10 94-10 94-11	1-782 4-807 1-780 1-780 1-782 3-782 4-806 5-806 4-807 5-807 2-746 5-724 5-724 5-724 5-766 5-768 3-768 3-768 3-768 3-769 4-765.1 2-783 1-718 3-718	



PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	OTY. PER ACFT.	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	PER ACF
00 61516	94-11	2_705		22-64547	94-10	1-715	
22-64516 22-64516	94-11	3-795 5-795.1	1 1	22-04547	94-10	3-715	
22-64517	94-11	3-796		3	01-11	5-715	
22-0471(94-11	5-796		22-64548	94-11 94-10	2-738	
22-64518	94-11	3-796		22-64549	94-10	1-687	
22-64518	94-11	5-796.1		== 0.5.5	94-11	3-687	
22-64519	94-11	2-789		1	94-11	5-687	
22-64520-1	94-10	2-730		22-64550	94-10	1-703	
2-64521-1	94-10	2-722	i I		94-11	3-703	
2-64522-1	94-10	2-731			94-11	5-703	
2-64523-1	94-10	2-732		22-64551-1	94-10	1-705	
2-64524-1	94-10	2-733		. 16	94-11	3-705	
2-64525-1	94-10	2-734		22-64552	94-10	2-751	
2-64526-1	94-10			22-64553	94-10	1-799	
	94-11	3-699		1	94-11	3-799	
o Cheer a	94-11 94-10	5-699		no fless	94-10	5-799 2-752	
2-64527-1	94-10	1-697		22-64554	94-11	5-752	
1	94-11	3-697 5-697		22-64555	94-11	2-740	
2-64528-1	94-11	1-698		22-04)))	94-10	4-740	
L-0-760-1	94-10	3-698		22-64564	94-10	2-741	
2-64529-1	94-10	1-700	ļ [22-64569	94-10	1-714	
/ -	94-11	3-700	I	1 - 5.757	94-11	3-714	
2-64530-1	94-10	1-701	[18	94-11	5-714	
	94-11	3-701		22-64570	01-10	2-753	
	94-11	3-701 5-701		22-64571	94-10	1-717	
3	94-11	7-701			94-11	3-717	
2-64531-1	94-10	1-681		22-64573-1	94-10		
4	94-11	3-681		1	94-11	3-707	
2-64532	94-10	1-682		1	94-11	5-707	
4	94-11	3-682]]	an Chamb	94-11	7-707	
o Chana	94-11	5-682		22-64574	94-10 94-11		
2-64533	94-10	1-702		an Cherry	94-11	5-725 1-688	
3	94-11	3-702		22-64575	94-10	3-688	
2-64534-1	94-11	5-702 1-706		15	94-11	5-688	
	94-11	3-706		22-64576	94-10	2-726	
	94-11	5-706		22-04)10	94-11	5-726	
22-64535	94-10	1-720		22-64577	94-10	1-689	
	94-10	2-720			94-11	3-689	
	94-11	5-720		4	94-11	5-689	
22-64536	94-7	3-623.1		22-64578	94-10	1-685	
-	94-10	2-623.1] [31	94-10	2-685	
	94-11	5-623.1		. 3	94-11	5-685	
22-64357-1	94-10	2-735		22-64579	94-10	1-690	
	94-11	5-735		8	94-11	3-690	
2-64538-1	94-10	2-758		61-0-	94-11	5-690	
on Cheen	94-11	5-758		22-64580	94-10 94-11	2-729	
2-64539	94-10	2-736		00 61/593	94-11	5-729 1-683	1
22-64540-1	94-11	5-736		22-64581	94-11		1
2-04540-1		2-737		1	94-11	5-683	1
2-64541	01-10	5-737 1-686		22-64582-1	94-10	2-721	
2-04/41	94-10	3-686		22-64583-1		1-703.1	
	94-11	5-686	1	22-64585-1	94-11	2-792	
	94-11	7-686		22-64589	94-11	2-794	
2-64542	94-10	2-728		22-64592	94-10	2-742	
2-64543	94-10	2-750	1	22-64593	94-10	2-743	
2-64544	94-10	1-713	1	22-64594	94-10		
3		2-713		22-64595	94-10	3-759	
	94-11	3-713			94-10		
o Chele	94-11	5-713		22-64596-1	94-10		
12-64545	94-7	3-790 2-790		22-64597-1	94-10 94-10		
22-64546	94-11	2-790.1		22-64598	94-10		
2=04540	34-11	5-130.7	1	22-64599	94-10		
				1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1,110	- ! - /	
						1	



ELECTRICAL HARNESSES NUMERICAL PARTS OG LIST INDEX

PART NUMBER	CHAPTER AND SUILIECT	FIGURE AND INDEX NUMBER	OTY. PER ACFT.	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-64599-1 22-64600 22-64601 22-64602 22-64603 22-64606 22-64606-1 22-64608 22-64613 22-64615 22-64615 22-64615 22-64616 22-64617-1 22-64617-3 22-64617-801 22-64617-801 22-64618-1 22-64618-1 22-64618-1 22-64618-1 22-64618-1 22-64618-3 22-64618-5 22-64623-3 22-64621-3 22-64621-3 22-64621-3 22-64621-3 22-64621-3 22-64621-3 22-64621-3 22-64623-801 22-64623-801 22-64623-801 22-64624-803 22-64624-5 22-64624-5 22-64625-5 22-64625-5 22-64625-5 22-64625-5 22-64625-5 22-64625-5 22-64625-5 22-64625-5 22-64625-5 22-64625-803 22-64625-803 22-64625-803 22-64625-803 22-64625-803 22-64625-803 22-64625-803 22-64625-803 22-64625-803 22-64625-803	10011101110101010101011111111111111111	1-709 2-723 1-691 2-691 3-691 3-691 2-757 1-710 2-756 4-756 2-756 4-756 2-756 4-762 4-763 3-761 4-763 3-762 4-763 4-763 6-819 6-823 6-819 6-823 6-819 6-821 6-820 6-821 1-694 2-785 1-694 2-785 1-694 2-785 1-694 2-785 1-694 2-785 1-694 1-695 3-695 1-711 1-772 1-775 1-771 1-775 1-7771 1-7771 1-7771		22-64626-1 22-64626-3 22-64626-3 22-64626-803 22-64626-803 22-64626-803 22-64627-1 22-64628 22-64628-1 22-64628-1 22-64628-1 22-64631 22-64631-1 22-64634-5 22-64634-5 22-64635-1 22-64639-1 22-64639-1 22-64639-1 22-64640-1 22-64640-1 22-64641-1 22-64641-1 22-64641-1 22-64641-1 22-64648-1 22-64648-1 22-64648-1 22-64648-1 22-64648-1 22-64648-1 22-64650-1 22-64650-1 22-64650-1 22-64650-1 22-64650-1 22-64650-1 22-64690-1 22-64690-1 22-64690-1 22-64690-1 22-64690-1 22-64690-1 22-64690-1 22-64690-1 22-64690-1 22-64690-1 22-64690-1 22-64690-1 22-64690-1 22-64690-1 22-64690-1 22-64905-803 22-64905-803 22-64905-803 22-64905-803 22-64905-803 22-64905-803 22-64905-803 22-64905-803 22-64905-803 22-64905-803	11111111111111111111111111111111111111	1-779 1-778 3-692 3-692 3-692 1-716 3-762 1-716 3-762 1-716 3-762 1-716 3-762 1-716 3-762 1-716 3-762 1-716 3-762 1-716 3-762 1-716 3-762 1-684 3-629 3-629 3-629 3-629 3-629 3-797 1-8	



LIST INDEX ILLUSTRATED PARTS CATALOG

PART NUMBER	CHAPTER FIGURE AND INDEX NUMBER	OTY. PER ACFT.	PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND	OTY. PER ACFT
22-64906-1 22-64907-1 22-64907-1 22-64907-1 22-64907-1 22-64907-3 22-64912 22-64913 22-64915 22-64916 22-64918 22-64919 22-64920 22-64921 22-64922 22-64922 22-64923 22-64929-1 22-64929-1 22-64929-809 22-64929-811 22-64931 22-64931 22-64931 22-64931 22-64931 22-64931 22-64931 22-64931 22-64931 22-64931 22-64931 22-64931 22-64938-1 22-64938-1 22-64938-1 22-64938-1 22-64938-1 22-64938-1 22-64938-1 22-64938-1 22-64949 22-64949 22-64949 22-64949 22-64949 22-64949 22-64949 22-64949 22-64955 22-64951 22-64955 22-64961-1 22-64962-1 22-64964-1 22-64964-1 22-64964-1 22-64964-1 22-64964-1 22-64966-1	3-869 3-869		22-64975 22-64977-1 22-64978-1 22-64978-1 22-64978-2 22-74982 22-64984-801 22-64984-801 22-64985-1 22-64985 22-64989 22-64999 22-64991 22-64992 22-64993 22-65507 22-65507 22-65506 22-66506 22-66506 22-66508 22-66510 22-66511 22-66512 22-66514-805 22-66515-1 22-66515-1 22-66516 22-66601 22-66602 22-66602 22-66603 22-66606 22-66606 22-66607 22-66608 22-66608 22-66609 22-66608 22-66608 22-66609 22-66608 22-66609 22-66608 22-66609 22-66609 22-66600	11-11-11-11-11-11-11-11-11-11-11-11-11-	7-824 7-827 7-828 7-825 7-828 7-825 7-813 7-813 5-813 7-813 5-814 7-814 7-826 7-826 7-826 2-787 2-793 1-843 3-843 1-843 3-843 1-843 1-843 1-843 1-843 1-843 1-860 1-662 1-662 1-662 1-662 1-662 1-661 1-661 1-661 1-661 1-661 1-671 1-671 1-671 1-672 2-674 2-675 1-661 1-671 1-672 2-674 1-679 1-671 1-671 1-671 1-671 1-671 1-672 1-671 1-672 1-671 1-671 1-672 1-673 1-679	



ELECTRICAL HARNESSES FLIGHT COMPARTMENT



SECTION V


Chapter 94 ELECTRICAL HARNESSES


FLIGHT COMPARTMENT ELECTRICAL HARNESSES




ELECTRICAL HARNESSES FLIGHT COMPARTMENT

ILLUSTRATED PARTS CATALOG

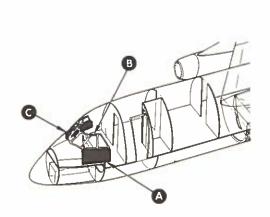

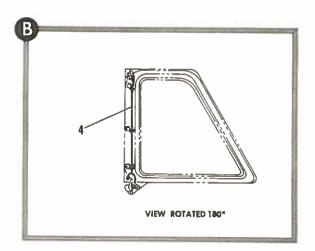

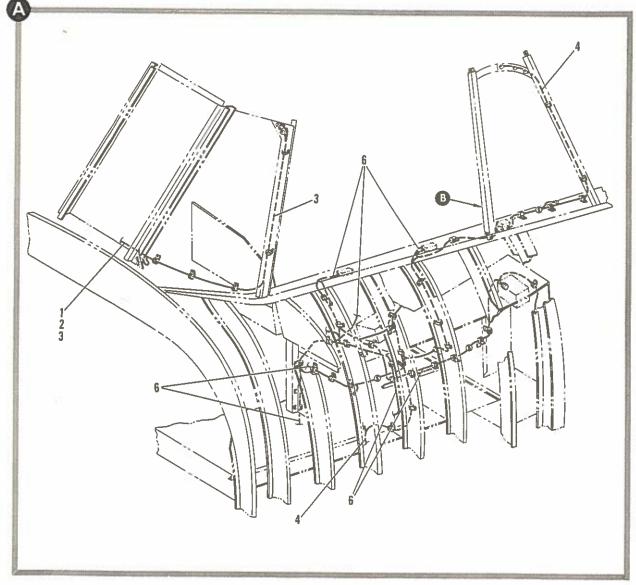

22.04.94.01.002.1

22.04.94.01.002-2


Apr. 28/61 PILOT AND COPILOT CONSOLE ELECTRICAL HARNESSES FIGURE 1 (SHEET 2 OF 2)



FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO	GE DE	UNITS
INDEX NO.			FROM	то	ASSEMBLY
	22-61863 22-61864 22-61791 PT06E18-11S MS3100R10SL4P 22-61865-1 22-61865-3 PT06E18-11S 22-61533	1 2 3 4 5 6 PILOT AND COPILOT CONSOLE ELECTRICAL HARNESSES SEE 22-61001 HARNESS ASSEMBLY, CENTER WINDSHIELD TO CONTROL BOX HARNESS ASSEMBLY, COPILOT WINDSHIELD TO CONTROL BOX HARNESS ASSEMBLY, PILOT WINDSHIELD TO CONTROL BOX CONNECTOR, CONVAIR 92-40325-044 -V77820- RECEPTACLE, PILOT WINDSHIELD HARNESS ASSEMBLY, WINDSHIELD CONTROL RELAYS TO PERMANENT SPLICE HARNESS ASSEMBLY, WINDSHIELD CONTROL RELAYS TO PERMANENT SPLICE CONNECTOR, CONVAIR 92-40325-044 -V77820- HARNESS ASSEMBLY, CONSOLE LIGHT CONTROL TO FLOOD LIGHTS LH	1 1 1 1 1 1 8 8 1 1	7	ASSEMBLY 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
	36151 36153	. TERMINAL, CONVAIR 98-90905-001 -V00779- - TERMINAL, CONVAIR 98-90805-003 -V00779-			10
	320559	. SPLICE, CONVAIR 98-34001-003 -V00779-	'		



FIGURE AND	PART NUMBER	NOMENCLATURE	USA	GE DE	UNITS
NDEX NO.	FART NUMBER		FROM	TO	PER ASSEMBI
1 - 7	22-61868	1 2 3 4 5 6 HARNESS ASSEMBLY, COPILOT SLIDING WINDOW FO	1	26006	1
, ,	22 01000	PERMANENT SPLICE	'		'
- 8	22-61532	. HARNESS ASSEMBLY, CONSOLE LIGHT CONTROL	1 1		1
	24.62	TO FLOOD LIGHTS RH			
	36153 320559	TERMINAL, CONVAIR 98-90805-003 -V00779-			21
	22-61536	- HARNESS ASSEMBLY, FUEL TANK CONTROL PANEL 1			
, I		TO PERMANENT SPLICE	'		
	320553	TERMINAL, CONVAIR 98-90805-020 -V00779-	1 1		17
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		1 1
	36151 1-821-1	. TERMINAL, CONVAIR 98-90805-001 -V00779- . CONNECTOR, CONVAIR 92-47000-026 -V95712-			7
	165-61	. CONNECTOR, CONVAIR 92-40058-009 -V02660-	i		i i
	22-61537	. HARNESS ASSEMBLY, FUEL CONTROL PANEL 3	i		i
		TO PERMANENT SPLICE			
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	!		1
	36151 320553	- TERMINAL, CONVAIR 98-90805-001 -V00779- - TERMINAL, CONVAIR 98-90805-020 -V00779-			9
I	165-61	. CONNECTOR, CONVAIR 92-40058-009 -V02660-	i		'i
	1-817-1	. CONNECTOR, CONVAIR 92-47000-020 -V93712-	- i		l i
- 11	22-61538	- HARNESS ASSEMBLY, FUEL CONTROL PANEL TANK 2	1 1		1
	3.1.0.	TO PERMANENT SPLICE			_
	36151 320553	. TERMINAL, CONVAIR 98-90805-001 -V00779-			7
	36153	- TERMINAL CONVAIR 98-90805-003 -V00779-			19
	165-61	- CONNECTOR, CONVAIR 92-40058-009 -V02660-	i		i i
	1-820-1	CONNECTOR, CONVAIR 92-47000-025 -V95712-	i		
- 12	22-61555	- HARNESS ASSEMBLY, FUEL CONTROL PANEL TANK 4	1		1
	1-822-1	TO PERMANENT SPLICES - CONNECTOR, CONVAIR 92-47000-027 -V95712-	1 1		Ι,
	36153	- CONNECTOR, CONVAIR 92-47000-027 -V93712-			2
	320553	- TERMINAL, CONVAIR 98-90805-020 -V00779-	- i		I ii
	36151	TERMINAL, CONVAIR 98-90305-001 -V00779-	1 1		8
	165-61	CONNECTOR, CONVAIR 92-40058-009 -V02660-	1 1		1
-			W.		
		Tr			
			1 1		
			i		
		\$1			
1					
- 1					

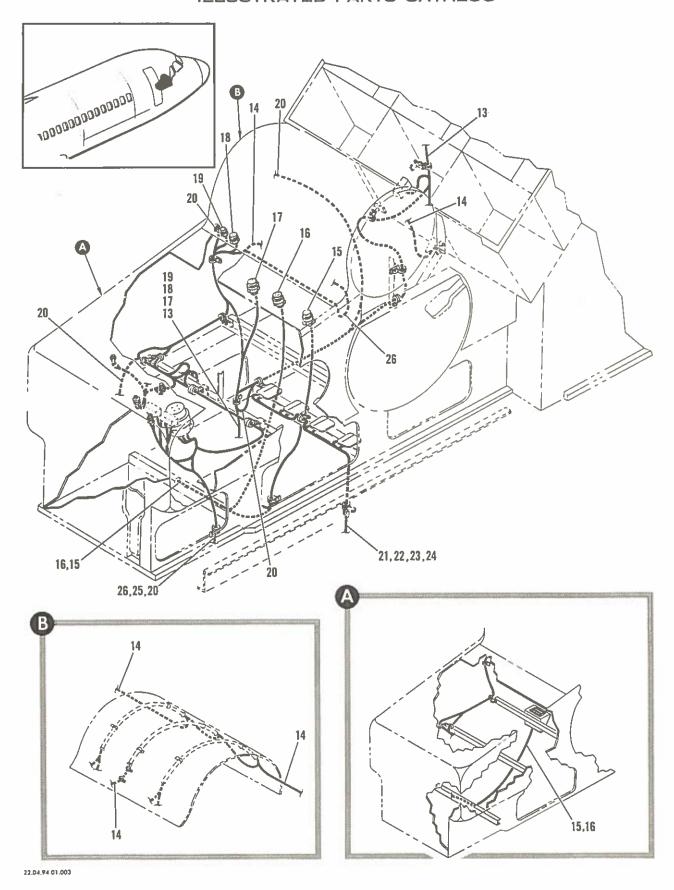



94-1 Page 6 PILOT AND COPILOT PEDESTAL ELECTRICAL HARNESSES Apr. 28/61 FIGURE 2



FIGURE AND	PART NUMBER	NOMENCLATURE		GE DE	UNITS
NDEX NO.		1 2 3 4 5 6	FROM	то	ASSEMBL
	<u> </u>	PILOT AND COPILOT PEDESTAL ELECTRICAL			
		HARNESSES SEE 22-61001			
- 13	22-61678	. HARNESS ASSEMBLY. FWD PEDESTAL PANEL TO	1 1		
- 13	22-01010	PERMANENT SPLICE			
	320553	. TERMINAL, CONVAIR 98-90805-020 -V00779-	1		8
	36151	. TERMINAL. CONVAIR 98-90805-001 -V00779-	1		2
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
- 14	22-61859	. HARNESS ASSEMBLY, PEDESTAL PANEL LIGHTS TO	1		ו ו
		AFT PEDESTAL RADIO TERMINAL STRIP	1	-	l 1
- 15	22-61731-1	. HARNESS ASSEMBLY, AUTOPILOT CONTROLLER TO PERMANENT SPLICE	'	l	'
	DD50S	. CONNECTOR, CONVAIR 92-50222-001 -V71468-	1	l	1
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	l i	l	2
- 16	22-61732-1	. HARNESS ASSEMBLY, AUTOPILOT CONTROLLER TO	i	ļ	1
***		AUTOPILOT RACK PERMANENT SPLICE	l	1	1
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
- 20	22-61615-803	. HARNESS ASSEMBLY, AFT PEDESTAL CONTROL	A		1
		PANEL TO PERMANENT SPLICE		_	
	22-61615-1	. HARNESS ASSEMBLY, AFT PEDESTAL CONTROL	2	В	1
	700567	PANEL TO PERMANENT SPLICE TERMINAL, CONVAIR 98-90805-020 -V00779-	1		
	320553 36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	i	1	1 5
	36151	. TERMINAL, CONVAIR 98-90805-001 -V00779-	i		1 15
- 21	22-61663	- HARNESS ASSEMBLY, POWER LEVER SWITCH	i		1
		ENGINE 1 TO PERMANENT SPLICE			
- 22	22-61665	. HARNESS ASSEMBLY, POWER LEVER SWITCH	1		1
		ENGINE 2 TO PERMANENT SPLICE			1.
- 23	22-61666	. HARNESS ASSEMBLY, POWER LEVER SWITCH	1		'
	1	ENGINE 3 TO PERMANENT SPLICE	1		1
- 24	22-61664	- HARNESS ASSEMBLY, POWER LEVER SWITCH ENGINE 4 TO PERMANENT SPLICE	1 '	1	1 '
	320553	. TERMINAL, CONVAIR 98-90805-020 -V00779-	1		1 2
- 25	22-61571	. HARNESS ASSEMBLY, POWER LEVEL SWITCHES 3	l i		li
- 23	22-01371	AND 4 TO PERMANENT SPLICE			1
	320553	. TERMINAL, CONVAIR 98-90805-020 -V00779-	1		1 8
- 26	22-61907	. HARNESS ASSEMBLY, PERMANENT SPLICE TO FLAP	1		1
		SELECTOR HANDLE LIMIT SWITCH STA 250			
					1
			1		1
	1	A AIRPLANES 1, 9 AND ON		1	
			1	1	
			l		
				1	
				1	
			- 1		1
			1		Ì
				1	
				1	
				1	
	1			1	
		I .			



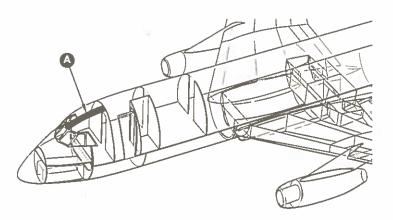

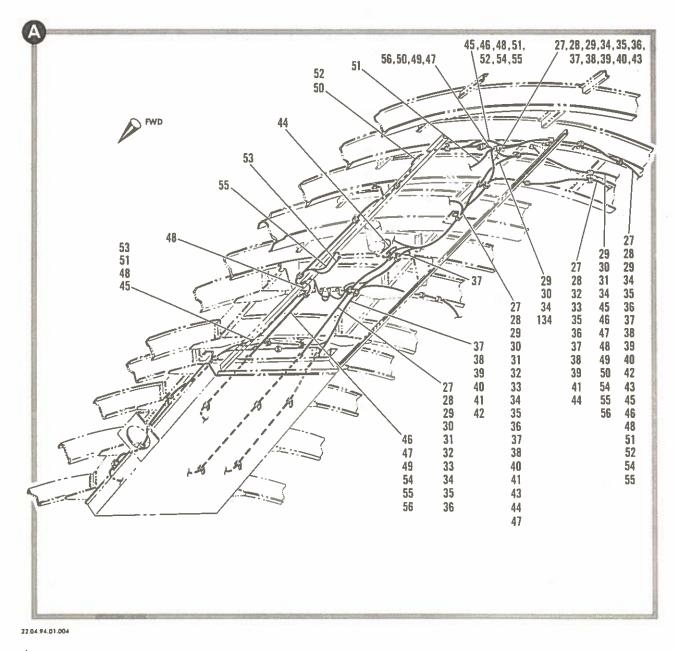

94-1 Page 8 PILOT OVERHEAD ELECTRICAL HARNESSES FIGURE 3

Apr. 28/61 A



FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO	GE DE	UNITS
NDEX NO.		1 2 3 4 5 6	FROM	TO	ASSEMB
	1	PILOT OVERHEAD ELECTRICAL HARNESSES			
,		SEE 22-61001	1 1		
- 27	22-61505-1	- HARNESS ASSEMBLY, STARTER AND EXTERIOR	1 1		
	24151	LIGHT PANEL TO PERMANENT SPLICE	1 1		1:
	36151 36153	. TERMINAL, CONVAIR 98-90805-001 -V00779-	;		
	320553	. TERMINAL, CONVAIR 98-90805-020 -V00779-	- i		l i
- 28	22-61515	. HARNESS ASSEMBLY, OVERHEAD ENGINE BLEED	i		
		CONTROL PANEL TO PERMANENT SPLICE			_
	320553 36153	. TERMINAL, CONVAIR 98-90805-020 -V00779-			2
- 29	22-61535	- HARNESS ASSEMBLY, ENGINE 1 STARTER SWITCH	1 1		
	22 01333	TO STARTER RELAY	1 ' 1		
	36151	- TERMINAL, CONVAIR 98-90805-001 -V00779-	1		
- 30	22-61679	- HARNESS ASSEMBLY, ENGINE 1 BLEED AIR VALVE	1		
7.1	22 /1/00	SWITCH TO PERMANENT SPLICE	1		
- 31	22-61680	. HARNESS ASSEMBLY, ENGINE 3 BLEED AIR VALVE SWITCH TO PERMANENT SPLICE	'		
- 32	22-61681	- HARNESS ASSEMBLY, ENGINE 2 BLEED AIR VALVE	1		
and the		SWITCH TO PERMANENT SPLICE	'		
- 33	22-61682	. HARNESS ASSEMBLY, ENGINE 4 BLEED AIR VALVE	1 1		
	1	SWITCH TO PERMANENT SPLICE			
	36157	. TERMINAL, CONVAIR 98-90805-008 -V00779-	1		
- 34	320562 22-61686	. SPLICE, CONVAIR 98-34001-001 -V00779- . HARNESS ASSEMBLY, ENGINE 3 STARTER SWITCH			
- 34	24-01000	TO PERMANENT SPLICE	'		
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1 1		
- 35	22-61687	- HARNESS ASSEMBLY, ENGINE 2 STARTER SWITCH	1 1		
7.	22 43402	TO STARTER RELAY			
- 36	22-61688	- HARNESS ASSEMBLY, ENGINE 4 STARTER SWITCH TO STARTER RELAY			
	36151	. TERMINAL, CONVAIR 98-90805-001 -V00779-	1 1		
- 37	22-61506	. HARNESS ASSEMBLY, OVERHEAD INTERIOR LIGHT	i		
		PANEL TO PERMANENT SPLIGE			
	22-61379	TERMINAL, GROUND	1 1		
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-			,
	36151 320553	. TERMINAL, CONVAIR 98-90805-001 -v00779- . TERMINAL, CONVAIR 98-90805-020 -v00779-		,	
	36149	. TERMINAL. CONVAIR 98-90805-027 -V00779-	i	İ	i
]	
			ļ		
					1
		11			1
					
	1	•			1

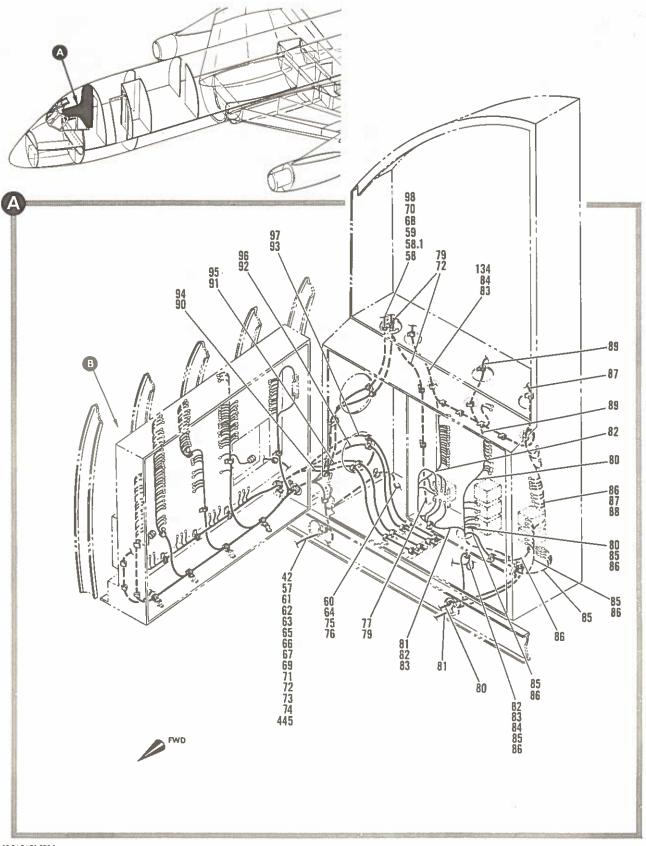


FIGURE	DART MUMBER	NOMENCLATURE	USA		UNITS
INDEX NO.	FAKI NUMBER		FROM	то	ASSEMBL
AND	PART NUMBER 22-61509 320559 36151 36153 320553 32-61512-1 320553 36151 22-61534-1 320553 320574 36153 320574 36153 322-61520 36153 22-61520 36153 22-61520 36153 22-61847 36151 36153 320559 320562 22-61508-1	NOMENCLATURE 1 2 3 4 5 6 • HARNESS ASSEMBLY, ANTI-ICE AND DEFOG SHITCH TO PERMANENT SPLICE • SPLICE, CONVAIR 98-34001-003 -V00779- • TERMINAL, CONVAIR 98-90805-001 -V00779- • TERMINAL, CONVAIR 98-90805-020 -V00779- • TERMINAL, CONVAIR 98-90805-020 -V00779- • HARNESS ASSEMBLY, OVERHEAD EXCESS HEAT AND ISOLATION PANEL TO PERMANENT SPLICE • TERMINAL, CONVAIR 98-90805-020 -V00779- • TERMINAL, CONVAIR 98-90805-020 -V00779- • HARNESS ASSEMBLY, OVERHEAD EXTERIOR LIGHT PANEL TO PERMANENT SPLICE • TERMINAL, CONVAIR 98-90805-020 -V00779- • TERMINAL, CONVAIR 98-90805-010 -V00779- • TERMINAL, CONVAIR 98-90805-001 -V00779- • TERMINAL, CONVAIR 98-90805-003 -V00779- • TERMINAL, CONVAIR 98-90805-003 -V00779- • HARNESS ASSEMBLY, TANK 1 FUEL PUMP NON-ESSENTIAL POWER TO PERMANENT SPLICE • TERMINAL, CONVAIR 98-90805-003 -V00779- • HARNESS ASSEMBLY, WARNING HORN AND BELL TO PERMANENT SPLICE • TERMINAL, CONVAIR 98-90805-003 -V00779- • HARNESS ASSEMBLY, WARNING HORN AND BELL TO PERMANENT SPLICE • TERMINAL, CONVAIR 98-90805-003 -V00779- • TERMINAL, CONVAIR 98-90805-003 -V00779- • TERMINAL, CONVAIR 98-90805-003 -V00779- • SPLICE, CONVAIR 98-90805-003 -V00779- • SPLICE, CONVAIR 98-90805-003 -V00779- • SPLICE, CONVAIR 98-90805-003 -V00779- • SPLICE, CONVAIR 98-90805-003 -V00779- • SPLICE, CONVAIR 98-90805-003 -V00779- • SPLICE, CONVAIR 98-90805-003 -V00779- • SPLICE, CONVAIR 98-90805-003 -V00779- • LIGHT PANEL TO PERMANENT SPLICE	FROM 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	то	PER ASSEMBL 1 5 10 1 1 1 3 4 2 1 1 2 6 2 1 3 1 1 1 2 4 1 1 1 2 1 1 1 1 1 1 1 1 1 1 1
- 45	36153 320559 320562	. TERMIVAL, CONVAIR 98-90805-003 -V00779 SPLICE, CONVAIR 98-34001-003 -V00797 SPLICE, CONVAIR 98-34001-001 -V00779 HARNESS ASSEMBLY, OVERHEAD ENGINE ANTI-ICE	1 1	7	



FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNITS
INDEX NO.		1 2 3 4 5 6	FROM	то	ASSEMBLY
		1 2 3 4 3 0	A		1
3 - 46	22-61511-1	. HARNESS ASSEMBLY, WING ANTI-ICE MALFUNCTION			
		LIGHTS TO PERMANENT SPLICE		7	١,
	22-61511	 HARNESS ASSEMBLY, WING ANTI-ICE MALFUNCTION LIGHTS TO PERMANENT SPLICE 	2		1
	320567	. TERMINAL, CONVAIR 98-90805-015 -V00779-	1 1		3
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	- i i		1
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1 1		2
	320553	TERMINAL, CONVAIR 98-90805-020 -V00779-			29
- 47	22-61518	 HARNESS ASSEMBLY, LEADING EDGE STRUCTURE TEMPERATURE CONTROLLER TO PERMANENT 	1 1		1
		SPLICE			
	PT06E16-BS	CONNECTOR, CONVAIR 92-40325-043 -V06840-	1 1		1
	PT06E16-23S	CONNECTOR, CONVAIR 92-40325-055 -V06840-	1 1		1
	36153	TERMINAL: CONVAIR 98-90805-003 -V00779-	1 1		1
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1		2
- 48	22-61554-1	. HARNESS ASSEMBLY, PITOT HEATER SWITCHES TO	1 1	İ	1
	320553	PERMANENT SPLICE . TERMINAL, CONVAIR 98-90805-020 -V00779-	1 1		12
	36151	. TERMINAL, CONVAIR 98-90805-001 -V00779-	_ i		ii
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-	i		3
- 50	22-61739	. HARNESS ASSEMBLY, ENGINEER FLOOD LIGHT	1		1
		TO FLOOD LIGHT CONTROL			
6.1	36153	TERMINAL, CONVAIR 98-90805-003 -V00779- . HARNESS ASSEMBLY, OVERHEAD INTERIOR CONTROL			6
- 51	22-61507	LIGHT PANEL TO PERMANENT SPLICE	'		'
	320562	SPLICE, CONVAIR 98-34001-001 -V00779-	1 1		9
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-	i		1
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1		- 11
_	320553	- TERMINAL, CONVAIR 98-90805-020 -V00779-			3
- 52	22-61519	- HARNESS ASSEMBLY, PILOT MAP LIGHT CONTROL	1 1		1
	36153	TO PERMANENT SPLICE TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		1 1
- 53	22-61513	. HARNESS ASSEMBLY, OVERHEAD ESSENTIAL BUS	i		i
-		SELECTOR PANEL TO PERMANENT SPLICE			
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1 1		6
	320553	TERMINAL, CONVAIR 98-90805-020 -V00779-	1 1		1
- 54	36153 22-61510-1	TERMINAL, CONVAIR 98-90805-003 -V00779- . HARNESS ASSEMBLY, OVERHEAD ANTI-ICE CONTROL		0	1
- 54	22-01310-1	PANEL TO PERMANENT SPLICE	' '	*	
	22-61510-805	. HARNESS ASSEMBLY, OVERHEAD ANTI-ICE CONTROL	10		1
		PANEL TO PERMANENT SPLICE			
	36157	TERMINAL, CONVAIR 98-90805-008 -V00779-		1	4
	320567	- TERMINAL, CONVAIR 98-90805-015 -V00779			13
	320553 36151	- TERMINAL, CONVAIR 98-90805-020 -V00779- - TERMINAL, CONVAIR 98-90805-001 -V00779-	¦		10
- 55	22-61514	- HARNESS ASSEMBLY, VNE MNE WARNING SWITCH	i		l i
23	122 01311	TO PERMANENT SPLICE			
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		5
	36151	- TERMINAL, CONVAIR 98-90805-001 -V00779-	1	1	3
	024048-0000	CONTACT, CONVAIR 92-63901-012 -V71468-			5
- 56	EX06-14S5S 22-61521	CONNECTOR, CONVAIR 92-40332-005 -V71468- . HARNESS ASSEMBLY, PERMANENT SPLICE BOX			
- 50	42-01321	TO NLG	'		'
	21EN65-6	SWITCH, MFR TO SPEC CONT 22-06480-3	1 1		1
		-V74059-			
	590001-117-0450	CONDUIT: CONVAIR 92-30000-036 -V00624-	1	1	1
		A AIRPLANES 1, 8 AND ON			-
		W WIVETHUES IN D WAR ALL			
	1		1	1	1





22.04.94.01.005-1

94-1 Page 12

AC DISTRIBUTION AND DC EMERGENCY BOX ELECTRICAL HARNESSES FIGURE 4 (SHEET 1 OF 2)

Apr. 28/61

73 72 71 70 69 62 60 59 58.1 58 93 92 91 90 42 58 69 98 445 42 58 58.1 69 42 63 71 57 64 72 58 65 73 58.1 66 74 59 67 75 60 68 76 61 69 98 62 70 445 92 57 58 58.1 59 60 61 62 59 63 64 65 66 67 22.04.94.01.003-2

Apr. 28/61

AC DISTRIBUTION AND DC EMERGENCY BOX ELECTRICAL HARNESSES FIGURE 4 (SHEET 2 OF 2)



FIGURE	DART MUMPER	NOMENCLATURE	USA		UNITS
AND NDEX NO.	PART NUMBER	1 2 3 4 5 6	FROM	TO	ASSEMBL
- 57 - 58 - 59 - 60 - 61 - 62 - 63	22-61852-1 320559 PT06E14-19S 36153 22-61823-1 36153 320574 36161 22-61822-1 36153 320574 36161 320559 22-61669-807 36161 22-61760-1 36153 22-61762-1 36153 22-61762-1 36153 22-61844-1 36153 YAEV6C-L 225-0017-000 EX06-16S1S 024049-0000 024048-0000 YAEV6C-L1	AC DISTRIBUTION AND DC EMERGENCY BOX ELECTRICAL HARNESSES SEE 22-61001 HARNESS ASSEMBLY, AC POWER CONTROL RELAY 4 TO PERMANENT SPLICE SPLICE, CONVAIR 98-34001-003 -V00779- CONNECTOR CONVAIR 92-40325-011 -V77820- TERMINAL, CONVAIR 98-90605-003 -V00779- HARNESS ASSEMBLY, AC NON-ESSENTIAL POWER DISTRIBUTION BOX TO PERMANENT SPLICE TERMINAL, CONVAIR 98-90805-010 -V00779- TERMINAL, CONVAIR 98-90805-016 -V00779- TERMINAL, CONVAIR 98-90805-016 -V00779- TERMINAL, CONVAIR 98-90805-010 -V00779- TERMINAL, CONVAIR 98-90805-010 -V00779- TERMINAL, CONVAIR 98-90805-016 -V00779- TERMINAL, CONVAIR 98-90805-016 -V00779- TERMINAL, CONVAIR 98-90805-016 -V00779- TERMINAL, CONVAIR 98-90805-016 -V00779- TERMINAL, CONVAIR 98-90805-016 -V00779- HARNESS ASSEMBLY, AC POWER DISTRIBUTION BOX TO PERMANENT SPLICE TERMINAL, CONVAIR 98-90805-016 -V00779- HARNESS ASSEMBLY, AC POWER DISTRIBUTION BOX TO PERMANENT SPLICE TERMINAL, CONVAIR 98-90805-016 -V00779- HARNESS ASSEMBLY, TANK 4 FUEL PUMP NON-ESSENTIAL POWER TO PERMANENT SPLICE TERMINAL, CONVAIR 98-90805-003 -V00779- HARNESS ASSEMBLY, TANK 3 FUEL PUMP NON-ESSENTIAL POWER TO FUEL RELAYS TERMINAL, CONVAIR 98-90805-003 -V00779- HARNESS ASSEMBLY, TANK 3 FUEL PUMP NON-ESSENTIAL POWER TO FUEL RELAYS TERMINAL, CONVAIR 98-90805-003 -V00779- HARNESS ASSEMBLY, FLIGHT ENGINEER STATION TO TRANSFORMER RECTIFIER UNIT 3 TERMINAL, CONVAIR 98-90805-003 -V00779- TERMINAL, CONVAIR 98-90805-003 -V00779- TERMINAL, CONVAIR 98-90805-003 -V00779- TERMINAL, CONVAIR 98-90805-003 -V00779- TERMINAL, CONVAIR 98-90805-005 -V09922- PLUG, CONVAIR 98-90805-005 -V09922- PLUG, CONVAIR 98-90806-005 -V09922- PLUG, CONVAIR 98-90806-005 -V09922- TERMINAL, CONVAIR 98-90806-005 -V09922- TERMINAL, CONVAIR 98-90806-005 -V09922- TERMINAL, CONVAIR 98-90806-005 -V09922- TERMINAL, CONVAIR 98-90806-005 -V09922- TERMINAL, CONVAIR 98-90806-005 -V09922-		10	1 3 3 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
	NA A				



FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNITS
INDEX NO.		1 2 3 4 5 6	FROM	то	ASSEMBLY
4 - 64	22-61597 320553	HARNESS ASSEMBLY, EMERGENCY FUEL PUMP LIGHTS ENGINE 2 TO MASTER WARNING RELAY LIGHTS ENGINE 2 TO MASTER WARNING RELAY LIGHTS ENGINE 2 TO MASTER WARNING RELAY	= ,		1 9
- 65	36151 22-61766-1	. TERMINAL, CONVAIR 98-90805-001 -V00779- . HARNESS ASSEMBLY, TANK 3 FUEL PUMPS	1 1		1
- 66	22-61764-1	ESSENTIAL POWER TO PERMANENT SPLICE - HARNESS ASSEMBLY; TANK 4 FUEL PUMPS ESSENTIAL POWER TO FUEL RELAYS STA 306	7 1		1
- 67	36153 22-61613-1	. TERMINAL, CONVAIR 98-90805-003 -V00779- HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO RELAY INSTALLATION	1		6 1
	320574 36153 36161 320562	. TERMINAL, CONVAIR 98-90805-010 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-016 -V00779 SPLICE, CONVAIR 98-34001-001 -V00779-	1 1 1		6 14 6 6
- 68	22-61690-1	- HARNESS ASSEMBLY. PERMANENT SPLICE TO ENGINE 3 RELAYS	1		1
- 69	36153 22-61763-1	TERMINAL, CONVAIR 98-90805-003 -V00779- HARNESS ASSEMBLY, TANK 2 FUEL PUMP NON-ESSENTIAL POWER TO PERMANENT SPLICE	1		AR 1
70	36153 22-61691-1	TERMINAL, CONVAIR 98-90805-003 -V00779- . HARNESS ASSEMBLY, PERMANENT SPLICE TO ENGINE 2 RELAYS	1		6
2 *	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1		AR




USAGE UNITS **FIGURE** CODE **PART NUMBER** NOMENCLATURE PER AND TO FROM ASSEMBL Y INDEX NO. 2 3 4 5 6 HARNESS ASSEMBLY. TANK 1 FUEL PUMPS - 71 22-61765-1 ESSENTIAL POWER TO FUEL RELAYS STA 306 HARNESS ASSEMBLY, TANK 2 FUEL PUMP ESSENTIAL POWER TO FUEL RELAYS STA 306 TERMINAL, CONVAIR 98-90805-003 -V00779-1 1 - 72 22-61767-1 36153 - HARNESS ASSEMBLY, FLIGHT ENGINEER STATION TO TRANSFORMER RECTIFIER UNIT 1 ١ - 73 22-61843-1 TO TRANSFORMER RECTIFIER UNIT | CONNECTOR, CONVAIR 92-40332-001 -V71468CONNECTOR, CONVAIR 92-40332-007 -V71468PLUG, CONVAIR 96-91200-007 -V71468TERMINAL, CONVAIR 98-90806-003 -V00779TERMINAL, CONVAIR 98-90806-006 -V09922TERMINAL, CONVAIR 98-90806-005 -V09922CONTACT, CONVAIR 92-63901-011 -V71468CONTACT, CONVAIR 92-63901-012 -V71468-EX06-10SL3S EXO6-16SLS 1 225-0017-000 4 36153 3 YAEV6C-L VAFAC-L 1 3 024049-0000 024048-0000 4 . HARNESS ASSEMBLY; AC POWER CONTROL RELAY 1 TO PERMANENT SPLICE 1 1 22-61849-1 - 74 2 . TERMINAL, CONVAIR 98-90805-003 -V00779-1 36153 CONNECTOR, CONVAIR 92-40325-011 -V77820-5 PT06E14-19S . HARNESS ASSEMBLY, RADIO JUNCTION BOX SPLICE 1 1 - 77 22-61792-1 TO STA 323 1 1 22-61792-5 HARNESS ASSEMBLY, RADIO JUNCTION BOX SPLICE - 78 TO STA 323 10 TERMINAL, CONVAIR 98-90814-001 -V00779-320580 - HARNESS ASSEMBLY, RELAY INSTALLATION Α - 79 22-61619-807 TO STA 323 2 6 1 22-61619-1 HARNESS ASSEMBLY, RELAY INSTALLATION TO STA 323 7 1 . HARNESS ASSEMBLY, RELAY INSTALLATION 7 22-61619-805 TO STA 323 . HARNESS ASSEMBLY. RELAY INSTALLATION 8 8 1 22-61619-801 TO STA 323 . TERMINAL: CONVAIR 98-90805-003 -V00779-. TERMINAL: CONVAIR 98-90805-006 -V00779-16 36152 320572 2 . . CONNECTOR, CONVAIR 92-40325-008 -V06840-. TERMINAL, CONVAIR 98-90805-001 -V00779-PT06E10-6S 10 36151 - HARNESS ASSEMBLY. EMERGENCY DC BUS TO 1 - 80 22-61614 **BATTERY BUS** TERMINAL, CONVAIR 98-90805-016 -V00779-6 36161 . HARNESS ASSEMBLY, DC POWER DISTRIBUTION BOX 22-61889 - 81 TO PERMANENT SPLICE 3 TERMINAL: CONVAIR 98-90805-003 -V00779-1 36153 A AIRPLANES 1, 9 AND ON





FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO	GE DE	UNITS
NDEX NO.	- The transfer	1 2 3 4 5 6	FROM	TO	ASSEMB
- 82	22-61834-1	- HARNESS ASSEMBLY, PILOT ESSENTIAL DC POWER DISTRIBUTION BOX TO STA 375	1		1
	36153 320574	PERMANENT SPLICE . TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-010 -V00779-	1 1		3
- 83	22-61846	HARNESS ASSEMBLY. FLIGHT ENGINEER STATION TO TRANSFORMER RECTIFIER UNIT 4	i		
	EX06-16S1S 024049-0000	- CONNECTOR, CONVAIR 92-40332-007 -V71468- - CONTACT, CONVAIR 92-63901-011 -V71468-			1
- 64	024048-0000 225-0017-000 22-61830-1	CONTACT, CONVAIR 92-63901-012 -V71468- PLUG, CONVAIR 96-91200-007 -V71468- . HARNESS ASSEMBLY, PILOT ESSENTIAL BUS TO	ļį	7	
-	22-61830-5	PERMANENT SPLICE - HARNESS ASSEMBLY, PILOT ESSENTIAL BUS TO	В		
	36153 320574	PERMANENT SPLICE . TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-010 -V00779-	1		
- 85	22-61611	- HARNESS ASSEMBLY, FLIGHT ENGINEER STATION SPLICE TO DC DISTRIBUTION BOX	1]
- 86	36153 22-61612	. TERMINAL, CONVAIR 98-90805-003 -V00779 HARNESS ASSEMBLY, DC DISTRIBUTION BOX TO ESSENTIAL BUS RELAY	1 1		19
	36153 320573	- TERMINAL, CONVAIR 98-90805-003 -V00779- - TERMINAL, CONVAIR 98-90805-007 -V00779-	1 1		
- 87	22-61811 36153	BOX TO PERMANENT SPLICE TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		
	320574 36161	. TERMINAL, CONVAIR 98-90805-010 -V00779- . TERMINAL, CONVAIR 98-90805-016 -V00779-			
i- 88	22-61814 320574	DC EMERGENCY CIRCUIT BREAKER PANEL TERMINAL, CONVAIR 98-90805-010 -V00779-	;		
	36161 320562 320570	- TERMINAL, CONVAIR 98-90805-016 -V00779- - SPLICE, CONVAIR 98-34001-001 -V00779- - SPLICE, CONVAIR 98-34001-002 -V00779-	1		
- 89	22-61810 320574	- HARNESS ASSEMBLY, EMERGENCY DC DISTRIBUTION BOX TO PERMANENT SPLICE - TERMINAL, CONVAIR 98-90805-010 -V00779-	1		
	36161	- TERMINAL, CONVAIR 98-90805-016 -V00779-	1		



FIGURE	PART NUMBER	NOMENCLATURE	USA CO	GE DE	UNITS
INDEX NO.		1 2 3 4 5 6	FROM	то	ASSEMBL'
4 - 90	22-61805-3	- HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO GENERATOR 1 BUS TIE	1		1
- 91	22-61807-3	HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO	1		1
- 92	22-61806-3	- HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO GENERATOR 3 BUS TIE	1		1
- 93	22-61804-3	- HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO GENERATOR 4 BUS TIE	1		1
	36161	- TERMINAL, GENERATOR CONVAIR 98-90805-016 -V00779-	1		18
- 94	22-61805-5	- HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO EXTERNAL AC POWER	1		1
- 95	22-61807-5	- HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO EXTERNAL AC POWER	1		1
- 96	22-61806-5	HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO EXTERNAL AC POWER	1		1
- 97	22-61804-5	- HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO EXTERNAL AC POWER	1		1
	320574	. TERMINAL, EXTERNAL AC POWER CONVAIR 98-90805-010 -V00779-	1		6
	YEAV6C-L4	. TERMINAL, EXTERNAL AC POWER CONVAIR 98-90806-007 -V02198-	1		3
	YEAV6C-L2	. TERMINAL, EXTERNAL AC POWER CONVAIR 98-90806-008 -V02198-	1		3
	1				
		11			




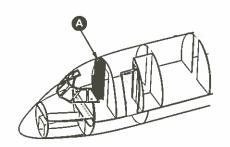

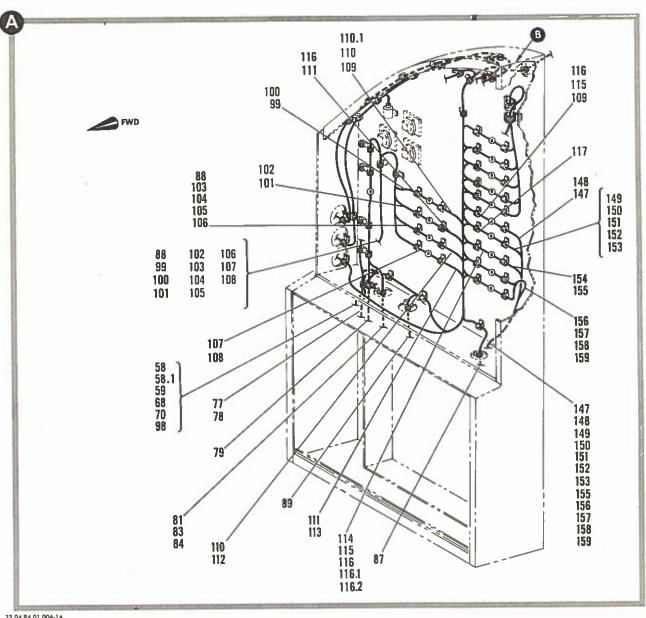

22.04.94.01.006-1A

CONVAIR 88 ILLUSTRATED PARTS CATALOG

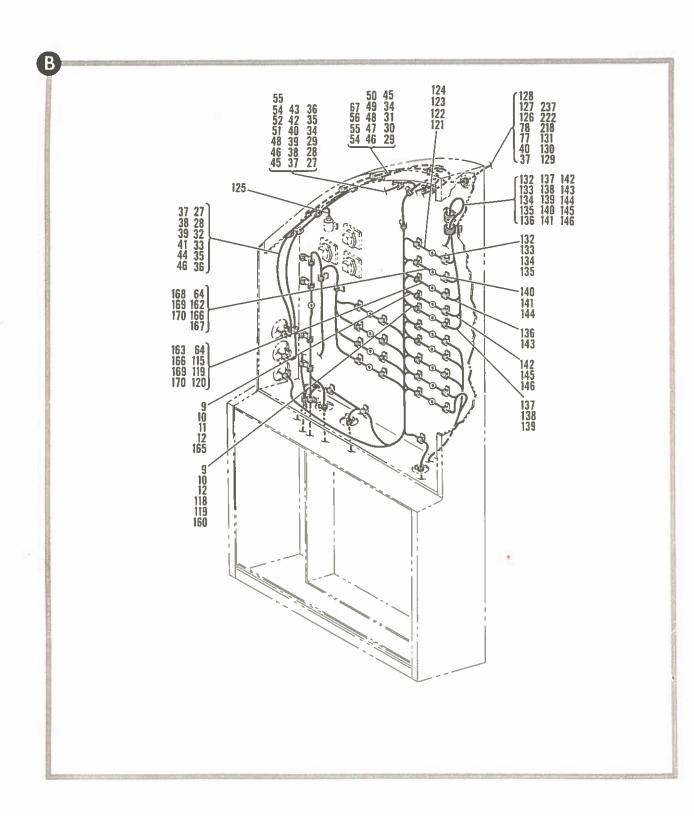

22 04.94.01.006-2



FIGURE	D. 107 A. H. 11 F. 15	NO VENCE ATURE	USA	GE DE	UNITS
AND INDEX NO.	PART NUMBER	NOMENCLATURE	FROM	то	PER ASSEMBLY
5		CIRCUIT BREAKER PANEL ELECTRICAL HARNESSES	+		
		SEE 22-61001			
- 98	22-61689-1	- HARNESS ASSEMBLY. PERMANENT SPLICE TO ENGINE 1 RELAYS	1		1
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		AR
	36161	TERMINAL. CONVAIR 98-90805-016 -V00779-	i		AR
- 99	22-61720-1	- HARNESS ASSEMBLY, OUTBO AC PILOT ESSENTIAL	1		1
		CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	١,		10
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779- . SPLICE, CONVAIR 98-34001-003 -V00779-	1		15 15
-100	320559 22-61719-1	- HARNESS ASSEMBLY, OUTBD AC ESSENTIAL			1
		CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		i
	36153	TERMINAL: CONVAIR 98-90805-003 -V00779-	1 1		16
	320574	. TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1 1
	320562 320559	. SPLICE, CONVAIR 98-34001-001 -V00779- . SPLICE, CONVAIR 98-34001-003 -V00779-	l i		16
-101	22-61600-1	. HARNESS ASSEMBLY, OUTBO DC EMERGENCY	i		1
		CIRCUIT BREAKER PANEL TO PERMANENT SPLICE			
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	!		16
	36161	. TERMINAL, CONVAIR 98-90805-016 -V00779- . TERMINAL, CONVAIR 98-90805-010 -V00779-	1 1		2 4
	320574 320570	SPLICE, CONVAIR 98-34001-002 -V00779-	i		2
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-	i		16
	320562	SPLICE, CONVAIR 98-34001-001 -V00779-	1 1	_	4
-102	22-61833-1	. HARNESS ASSEMBLY, PILOT ESSENTIAL PERMANENT	1	7	1
	22-61833-5	SPLICE TO OUTBD CIRCUIT BREAKER PANEL HARNESS ASSEMBLY, PILOT ESSENTIAL PERMANENT	₈		1
	22-01033-3	SPLICE TO OUTBO CIRCUIT BREAKER PANEL	"		'
	320562	SPLICE, CONVAIR 98-34001-001 -V00779-	1		2
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-			3
	320574	- TERMINAL, CONVAIR 98-90805-010 -V00779-			1 4
	36153 36153	. TERMINAL, CONVAIR 98-90805-003 -V00779- . TERMINAL, CONVAIR 98-90805-003 -V00779-	l i	ŀ	7
	320574	. TERMINAL, CONVAIR 98-90805-010 -V00779-	l i		3
-103	22-61826-1	- HARNESS ASSEMBLY, AC ESSENTIAL PERMANENT	1		3
		SPLICE TO OUTBO CIRCUIT BREAKER PANEL	١,		3
	320570 320559	. SPLICE, CONVAIR 98-34001-002 -V00779- . SPLICE, CONVAIR 98-34001-003 -V00779-	1 1		1
	YSEV6C-L	. SPLICE, CONVAIR 98-34001-007 -V00779-	i		i
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
	36161	- TERMINAL, CONVAIR 98-90805-016 -V00779-	1 1	_	12
-104	22-61817	- HARNESS ASSEMBLY, PERMANENT SPLICE TO OUTBD	1 1	7	1
	22-61817-807	CIRCUIT BREAKER PANEL HARNESS ASSEMBLY, PERMANENT SPLICE TO OUTBD	la		1
	22 01011 001	CIRCUIT BREAKER PANEL	"	ŀ	
	320574	TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	36161	TERMINAL, CONVAIR 98-90805-016 -V00779-	!		8
	320562	- SPLICE, CONVAIR 98-34001-001 -V00779- - SPLICE, CONVAIR 98-34001-002 -V00779-	1		1 2
-105	320570 22-61829	. HARNESS ASSEMBLY, AC NON-ESSENTIAL	l i		1
, 0,5		PERMANENT SPLICE TO OUTBD CIRCUIT BREAKER			'
	1	PANEL			
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		3
-106	320559 22-61609-1	. SPLICE, CONVAIR 98-34001-003 -V00779- . HARNESS ASSEMBLY, REMOTE COMPASS CIRCUIT	;		1
-100	SE 01007-1	BREAKERS TO PERMANENT SPLICE	'		
	AN75381	SPLICE: CONVAIR 98-34000-001	1		2
	AN753B2	CONDUCTOR, CONVAIR 98-34000-003	1		<u>t</u>
	36153 320574	. TERMINAL, CONVAIR 98-90805-003 -V00779- . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		4 2



FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNITS
INDEX NO.	I AKI NOMBEK	************	FROM	TO	ASSEMBLY
5 -107	22-61717-1	1 2 3 4 5 6 L. HARNESS ASSEMBLY, OUTBD DC ESSENTIAL		7	1
J -101	22-61717-5	CIRCUIT BREAKER PANEL TO PERMANENT SPLICE HARNESS ASSEMBLY, OUTBD DC ESSENTIAL	8		1
100	22-61718-1	CIRCUIT BREAKER PANEL TO PERMANENT SPLICE - HARNESS ASSEMBLY. OUTBD DC ESSENTIAL			1
-108		CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	`		
	320559	. SPLICE, CONVAIR 98-34001-003 -V00779- . SPLICE, CONVAIR 98-34001-002 -V00779-			6 2
	320570 320562	. SPLICE, CONVAIR 98-34001-001 -V00779-	1 1		ì
	36161	TERMINAL, CONVAIR 98-90805-016 -V00779-			2
	320574	. TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		6
-109	22-61608-1	- HARNESS ASSEMBLY, INBD AC ESSENTIAL CIRCUIT BREAKER PANEL PERMANENT SPLICE TO PERMANENT SPLICE	1		1
	320574	- TERMINAL CONVAIR 98-90805-010 -V00779-	!		2
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-110	22-61701-3	HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT SPLICE TO AUTOPILOT RACK PERMANENT SPLICE LH			
	22-61701-1	- HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT SPLICE TO AUTOPILOT RACK PERMANENT SPLICE LH	2	8	1
-110.1	22-61780	- HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT SPLICE AC ESSENTIAL OUTBD TO	1		1
		PERMANENT SPLICE	Ι,		L.
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779- - HARNESS ASSEMBLY, LANDING GEAR GROUND			i
-111	22-61667-1	SAFETY RELAYS TO CIRCUIT BREAKER PANEL PERMANENT SPLICE	'		'
-112	22-61752	- HARNESS ASSEMBLY, PERMANENT SPLICE TO PERMANENT SPLICE STA 375	5	6	1
-113	22-61607-807	- HARNESS ASSEMBLY, OUTBD DC ESSENTIAL CIRCUIT BREAKER PANEL PERMANENT SPLICE TO PERMANENT SPLICE	A		1
	22-61607-1	- HARNESS ASSEMBLY OUTBO DC ESSENTIAL CIRCUIT BREAKER PANEL PERMANENT SPLICE	2	8	1
-114	22-61697	TO PERMANENT SPLICE - HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT SPLICE TO PERMANENT SPLICE	1		1
-115	22-61661	- HARNESS ASSEMBLY; FIRE CONTROL PANEL PERMANENT SPLICE TO DIMMING RELAY BOX 2	1	10	1
	22-61661-1	. HARNESS ASSEMBLY. FIRE CONTROL PANEL PERMANENT SPLICE TO DIMMING RELAY BOX 2	11		1
		A AIRPLANES 1. 9 AND ON			
		-5			
	03				



FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNITS
NDEX NO.		1 2 3 4 5 6	FROM	TO	ASSEMB
-116	22-61603-1	- HARNESS ASSEMBLY, DC EMERGENCY			
		CIRCUIT BREAKER PANEL PERMANENT SPLICE			1
		TO PERMANENT SPLICE OUTBD			
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		1
	320563	- TERMINAL, CONVAIR 98-90805-012 -V00779-			1
-114 1	320559	- SPLICE, CONVAIR 98-34001-003 -V00779-			2
-110.1	22-61819-5	- HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT SPLICE TO PERMANENT SPLICE	A		1
	22-61819-1	- HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT	2	7	Ι.
	22 01017 1	SPLICE TO PERMANENT SPLICE	4	ı	'
-116-2	22-61820	- HARNESS ASSEMBLY. ANTI-ICE RELAY NUMBER 4	1 1		
		TO PERMANENT SPLICE	1 ' 1		1
-117	22-61740	. HARNESS ASSEMBLY, AC PILOT ESSENTIAL			
		CIRCUIT BREAKER PANEL PERMANENT SPLICE	'		
		TO PERMANENT SPLICE INBD			
-118 22-61606	- HARNESS ASSEMBLY. AC PILOT ESSENTIAL	1 1			
		CIRCUIT BREAKER PANEL PERMANENT SPLICE			
		TO PERMANENT SPLICE UPPER			
-119	22-61755	- HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT	1 1		1
		SPLICE TO PERMANENT SPLICE			
-120	22-61692	. HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT	1 1		
. 101	22 (1000	SPLICE TO ENGINE 4 RELAYS			
-121	22-61882	- HARNESS ASSEMBLY, ENGINE 3 CIRCUIT BREAKER	1		
		PANEL PERMANENT SPLICE TO PERMANENT			Ì
-122	22-61883	SPLICE STA 375	1.1	i	
-122	22-01003	- HARNESS ASSEMBLY, ENGINE 1 CIRCUIT BREAKER	1		
		PANEL PERMANENT SPLICE TO PERMANENT SPLICE STA 375			
-123	22-61884	. HARNESS ASSEMBLY. ENGINE 4 CIRCUIT BREAKER	$ \cdot $		l
	1.007	PANEL PERMANENT SPLICE TO PERMANENT	'		
		SPLICE STA 375			l
-124	22-61885	- HARNESS ASSEMBLY, ENGINE 2 CIRCUIT BREAKER	1 1		
		PANEL PERMANENT SPLICE TO PERMANENT	'	İ	1
		SPLICE STA 375			
-125	22-61610	- HARNESS ASSEMBLY, CABIN ALTITUDE PRESSURE	1 1		-
		SENSOR TO RELAY INSTALLATION PERMANENT			
		SPLICE			
	225-0017-000	- PLUG: CONVAIR 96-91200-007 -V71468-	1 1		'
	024048-0000	CONTACT, CONVAIR 92-63901-012 -V71468-	1 1		:
101	EX06-14575	- CONNECTOR, CONVAIR 92-40332-006 -V71468-	1 1		
-126	22-61892	- HARNESS ASSEMBLY, OVERHEAD PANEL FLOOD	1 1	1	
	200550	LIGHT TO PERMANENT SPLICE			
	320559	- SPLICE, CONVAIR 98-34001-003 -V00779-	!		
-127	36153 22-62620-803	- TERMINAL, CONVAIR 98-90805-003 -V00779-	!		
-121	22-02020-003	- HARNESS ASSEMBLY, CIRCUIT BREAKER PANEL			
	36153	PERMANENT SPLICE TO FWD LAVATORY HEATER - TERMINAL, CONVAIR 98-90805-003 -V00779-	1, 1		
-128	22-63504-801	- TEXHINAL, CONVAIR VO-VUOUS-UUS -VUUTTY HARNESS ASSEMBLY, STEWARDESS FWD SWITCH			
	22 75574 001	PANEL TO PERMANENT SPLICE	'		
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		1:
	36151	- TERMINAL, CONVAIR 98-90805-001 -V00779-	i		11
	36157	. TERMINAL, CONVAIR 98-90805-008 -V00779-	i	Į.	'
	320559	- SPLICE, CONVAIR 98-34001-003 -V00779-	i	[i
	320562	- SPLICE, CONVAIR 98-34001-001 -V00779-	\perp i \perp		
	PTO6EB-4S	CONNECTOR, CONVAIR 92-40325-006 -V06840-	i	- 1	· '
	320559	- SPLICE, CONVAIR 98-34001-003 -V00779-	i	1	
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	i	- 1	12
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	i		1
		A AIRPLANES 1. 8 AND ON			
]	
		W.		i	
8					
			1	- 1	
			1 1		



FIGURE AND	PART NUMBER	NOMENCLATURE	USA		UNITS
INDEX NO.		1 2 3 4 5 6	FROM	TO	ASSEMBL
5 -130	22-63508-801	- MARNESS ASSEMBLY. STEWARDESS FWD SWITCH PANEL PERMANENT SPLICE TO REAR SPAR PERMANENT SPLICE	1		1
-131	36161 22-63514-801	. TERMINAL, CONVAIR 98-90805-016 -V00779- HARNESS ASSEMBLY, FHD COAT COLSET SWITCH TO PERMANENT SPLICE	1		AR 1
	36153 320559	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1		5
-132	22-61878	- HARNESS ASSEMBLY, ENGINE 3 CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	i		i
-133	22-61879	- HARNESS ASSEMBLY, ENGINE 2 CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
-134	22-61880	- HARNESS ASSEMBLY: ENGINE 4 CIRCUIT BREAKER PANEL TO PERMANENT SPLICE			1
-135	22-61881	- HARNESS ASSEMBLY, ENGINE 1 CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
-136	320559 22-61705	SPLICE, CONVAIR 98-34001-003 -V00779- . HARNESS ASSEMBLY, UPPER DC EMERGENCY	1	8	1
	320559	CIRCUIT BREAKER PANEL TO PERMANENT SPLICE . SPLICE, CONVAIR 98-34001-003 -V00779-	1 1		25
-137	36153 22-61706	. TERMINAL, CONVAIR 98-90805-003 -V00779- . HARNESS ASSEMBLY, UPPER AC ESSENTIAL			25
	36153	CIRCUIT BREAKER PANEL TO PERMANENT SPLICE - TERMINAL, CONVAIR 98-90805-003 -V00779-	!		21
-138	320559 22-61707	SPLICE: CONVAIR 98-34001-003 -V00779- - HARNESS ASSEMBLY: UPPER AC NON-ESSENTIAL	1 1		20
-	36153	CIRCUIT BREAKER PANEL TO PERMANENT SPLICE . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		11
-139	320559 22-61708	- SPLICE, CONVAIR 98-34001-003 -V00779- HARNESS ASSEMBLY, UPPER AC PILOT ESSENTIAL			17
	36153	CIRCUIT BREAKER PANEL TO PERMANENT SPLICE . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		AF
-140	320559 22-61709	SPLICE, CONVAIR 98-34001-003 -V00779- . HARNESS ASSEMBLY, UPPER DC EMERGENCY CIRCUIT BREAKER TO FLIGHT ENGINEER		10	Af
	22-61709-1	PERMANENT SPLICE HARNESS ASSEMBLY, UPPER DC EMERGENCY CIRCUIT BREAKER TO FLIGHT ENGINEER	11		1
	36153	PERMANENT SPLICE TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		20
-141	320559 22-61812	SPLICE, CONVAIR 98-34001-003 -V00779 HARNESS ASSEMBLY, PERMANENT SPLICE TO UPPER DC EMERGENCY CIRCUIT BREAKER PANEL		10	-
	22-61812-1	. HARNESS ASSEMBLY, PERMANENT SPLICE TO UPPER DC EMERGENCY CIRCUIT BREAKER PANEL	11		
	320570 320562	. SPLICE, CONVAIR 98-34001-002 -V00779-	1 1		
	36161 320574	. TERMINAL, CONVAIR 98-90805-016 -V00779-	l i		17
-142	22-61815	. HARNESS ASSEMBLY, PERMANENT SPLICE TO UPPER DC ESSENTIAL CIRCUIT BREAKER PANEL	i		'
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1		Ai
	36161 320570 320559	- SPLICE, CONVAIR 98-34001-002 -V00779- - SPLICE, CONVAIR 98-34001-003 -V00779-	j		Al
				Į	



FIGURE
INDEX NO.
AND
PART NUMBER 22-61824-1 320570 320559 36153 36151 22-61827-1 36153 320574 36161 320562 320559 22-61831-1 22-61831-3 36153 320574 320562 320559 22-61602 36161 320574 36153 22-61713-1




FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNITS
INDEX NO.	TAIL TOMBER		FROM	то	ASSEMBLY
	22-61715-1 320559 320570 320562 36161 320574 36153 22-61601-5 22-61601 320574 36153 320559 320562 22-61813-1 320562 320574 22-61825-1 22-61828-1	NOMENCLATORE 1 2 3 4 5 6 HARNESS ASSEMBLY, INBD AC ESSENTIAL CIRCUIT BREAKER PANEL TO FLIGHT ENGINEER PERMANENT SPLICE SPLICE, CONVAIR 98-34001-002 -V00779- SPLICE, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-90805-016 -V00779- TERMINAL, CONVAIR 98-90805-010 -V00779- TERMINAL, CONVAIR 98-90805-010 -V00779- HARNESS ASSEMBLY, INBD AC PILOT ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE HARNESS ASSEMBLY, INBD AC PILOT ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE TERMINAL, CONVAIR 98-90805-010 -V00779- TERMINAL, CONVAIR 98-90805-010 -V00779- SPLICE, CONVAIR 98-34001-003 -V00779- SPLICE, CONVAIR 98-34001-001 -V00779- HARNESS ASSEMBLY, PERMANENT TO INBD DC EMERGENCY CIRCUIT BREAKER PANEL SPLICE, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- HARNESS ASSEMBLY, AC ESSENTIAL PERMANENT SPLICE TO INBD CIRCUIT BREAKER PANEL HARNESS ASSEMBLY, AC NON-ESSENTIAL PERMANENT SPLICE TO INBD CIRCUIT BREAKER	FROM 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	8	
-153	36161 320570 22-61832-1 36153 320574 320562 320559	TARMINAL, CONVAIR 98-90805-016 -V00779 SPLICE, CONVAIR 98-34001-002 -V00779- HARNESS ASSEMBLY, PILOT ESSENTIAL PERMANENT SPLICE TO INBO CIRCUIT BREAKER PANEL . TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-34001-001 -V00779 SPLICE, CONVAIR 98-34001-003 -V00779- A AIRPLANES 1, 9 AND ON	1 1 1 1		6 2 1 11 7 3 3




FIGURE	PART NUMBER	NOMENCLATURE	USA		UNITS
INDEX NO.		1 2 3 4 5 6	FROM	TO	ASSEMBLY
5 -154	22-61711-1	- HARNESS ASSEMBLY, INBO DC ESSENTIAL CIRCUIT BREAKER PANEL TO FLIGHT ENGINEER PERMANENT SPLICE . HARNESS ASSEMBLY, INBO DC ESSENTIAL	11	10	1
	320559	CIRCUIT BREAKER PANEL TO FLIGHT ENGINEER PERMANENT SPLICE . SPLICE, CONVAIR 98-34001-003 -V00779-	1		12
	320570	SPLICE, CONVAIR 98-34001-002 -V00779-			1
	320562 36161	. SPLICE, CONVAIR 98-34001-001 -V00779- . TERMINAL: CONVAIR 98-90805-016 -V00779-			1
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-			12
-155	320574 22-61712	. TERMINAL, CONVAIR 98-90805-010 -V00779- HARNESS ASSEMBLY, INBD DC EMERGENCY CIRCUIT BREAKER PANEL TO PERMANENT SPLICE			1
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-			28
	320562 320574	. SPLICE, CONVAIR 98-34001-001 -V00779- . TERMINAL, CONVAIR 98-90805-010 -V00779-			் <u>1</u> 4
-156	22-61710-1	- HARNESS ASSEMBLY, INBD DC ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	i		្សាំ
	320559	- SPLICE, CONVAIR 98-34001-003 -V00779-	1 !		19
	320570 320562	. SPLICE, CONVAIR 98-34001-002 -V00779- . SPLICE, CONVAIR 98-34001-001 -V00779-			2 2
	36161	TERMINAL, CONVAIR 98-90805-016 -V00779-	_ i i		2
	320574	- TERMINAL, CONVAIR 98-90805-010 -V00779-			2 19
-157	36153 22-61714	. TERMINAL, CONVAIR 98-90805-003 -V00779- HARNESS ASSEMBLY, INBD AC ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE			1
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		21
-158	320559 22-61716-1	SPLICE, CONVAIR 98-34001-003 -V00779- HARNESS ASSEMBLY, INBD AC NON-ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		21
-159	36153 22-61816-1	- TERMINAL, CONVAIR 98-90805-003 -V00779- - HARNESS ASSEMBLY, PERMANENT SPLICE TO INBD	1		6
	320562	DC ESSENTIAL CIRCUIT BREAKER PANEL - SPLICE, CONVAIR 98-34001-001 -V00779-	;		2
	320570 320559	- SPLICE, CONVAIR 98-34001-002 -V00779-			1
	36161	TERMINAL, CONVAIR 98-90805-016 -V00779-			5
	320574 36153	. TERMINAL, CONVAIR 98-90805-010 -V00779-			5
-160	22-61750	- HARNESS ASSEMBLY, PERMANENT SPLICE TO CIRCUIT BREAKER PERMANENT SPLICE			1
		Ш		i	





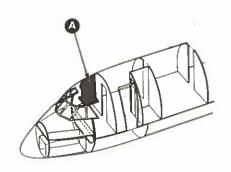

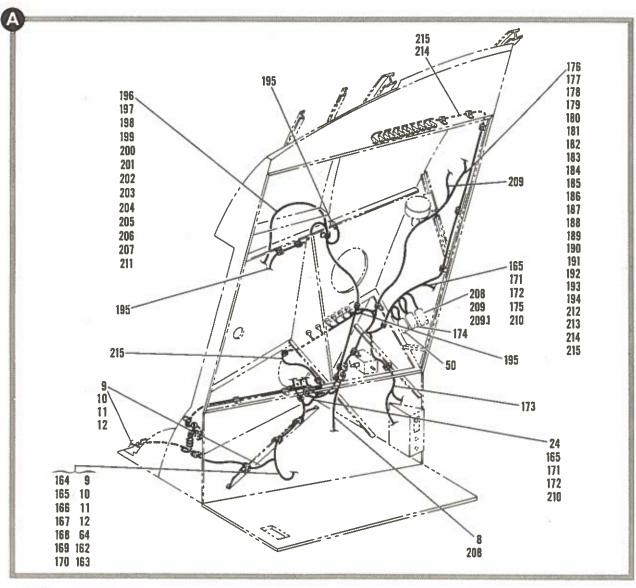

22.04.94.01.007A

94-1 Page 30

FLIGHT ENGINEER ELECTRICAL HARNESSES FIGURE 6

Feb. 10/62 A-2



FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNITS
IDEX NO.	TAKI HOMBEK		FROM	το	ASSEMB
		1 2 3 4 5 6			
		FLIGHT ENGINEER ELECTRICAL HARNESSES SEE 22-61001			(0)
-162	22-61539	. HARNESS ASSEMBLY. TANK JETTISON SWITCHES			1
-102	22-01337	TO PERMANENT SPLICE LH	'		'
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1 1		. 6
-163	22-61540	. HARNESS ASSEMBLY. FUEL TANK VALVE	i		
		SWITCHES TO PERMANENT SPLICE RH			l
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1 1		2
	320553	TERMINAL, CONVAIR 98-90805-020 -V00779-	1		2.
-164	22-61541	- HARNESS ASSEMBLY, FUEL TANK VALVE	1 1		
		SWITCHES TO PERMANENT SPLICE LH			
	36153	TERMINAL: CONVAIR 98-90805-003 -V00779-	1		
	36151	. TERMINAL, CONVAIR 98-90805-001 -V00779-	1		2:
	320553	TERMINAL, CONVAIR 98-90805-020 -V00779-	1		16
-165	22-61542-1	. HARNESS ASSEMBLY, FUEL CONTROL PANEL TO	1		
		PERMANENT SPLICE			
31	36151	TERMINAL: CONVAIR 98-90805-001 -V00779-	1		AF
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		Al
	EX06-14525	CONNECTOR, CONVAIR 92-40332-004 -V71468-	1		
	024049-0000	CONTACT, CONVAIR 92-63901-011 -V71468-	1		
(10)	024048-0000	CONTACT, CONVAIR 92-63901-012 -V71468-	1		
	225-0017-000	- PLUG. CONVAIR 96-91200-007 -V71468-	1 1		
-166	22-61556	- HARNESS ASSEMBLY. EMERGENCY FUEL PUMP	1		
		LIGHTS ENGINE 1 TO MASTER WARN RELAY			
1	320553	TERMINAL, CONVAIR 98-90805-020 -V00779-	1 1		
-167	22-61598	. HARNESS ASSEMBLY, EMERGENCY CROSS FEED] 1		
		INTRANSIT LIGHTS TO PERMANENT SPLICE	1 1		
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1 1		'
	320553	TERMINAL, CONVAIR 98-90805-020 -V00779-	- [1		1
-168	22-61673	. HARNESS ASSEMBLY, TANK JETTISON SWITCHES	1 1		
		TO PERMANENT SPLICE RH			
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1 1		
-169	22-61674	. HARNESS ASSEMBLY. EMERGENCY FUEL PUMP	1		T.
		LIGHTS ENGINE 3 TO MASTER WARN RELAY			374
	320553	. TERMINAL, CONVAIR 98-90805-020 -V00779-	1		
-170	22-61675	. HARNESS ASSEMBLY, EMERGENCY FUEL PUMP	1		1
*		LIGHTS ENGINE 4 TO MASTER WARNING BOX 4			1
		PERMANENT SPLICE	- 1 - 3		
	320553	TERMINAL, CONVAIR 98-90805-020 -V00779-	1 1		:
-171	22-61753	- HARNESS ASSEMBLY. FUEL TEMPERATURE SELECTOR	i i		
		SWITCH ENGINE 1 TO PERMANENT SPLICE			000
-172	22-61779	. HARNESS ASSEMBLY. FUEL TEMPERATURE SELECTOR	1 1		
•••		SWITCH ENGINE 2 TO PERMANENT SPLICE	'		
-173	22-61670-801	. HARNESS ASSEMBLY, ENGINEER LIGHT CONTROL	1 1		1
		TO PERMANENT SPLICE	'		
	320553	. TERMINAL. CONVAIR 98-90805-020 -V00779-	1		
	320574	. TERMINAL, CONVAIR 98-90805-010 -V00779-	- i i i		
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1 i		1
	36151	- TERMINAL CONVAIR 98-90805-001 -V00779-	i		1
	36157	. TERMINAL, CONVAIR 98-90805-008 -V00779-	i		i
	12131	TERMINALS CONVAIR 70-70003-000 -400717-	'		
			- 1 - 3		
					1
					1
					1
					1
		1/1			
	r	I and the second			1
	1				



FIGURE AND	PART NUMBER	NOMENCLATURE	US/ CO	GE DE	UNITS
INDEX NO.	The state of the s	1 2 3 4 5 6	FROM	TO	ASSEMBL Y
6 -174	22-61738	- HARNESS ASSEMBLY, ENGINEER FLOOD LIGHT	1		1
	7,117	CONTROL TO PERMANENT SPLICE	_ ;		_
-175	36153 22-61604	- TERMINAL, CONVAIR 98-90805-003 -V00779- HARNESS ASSEMBLY, FUEL TEMPERATURE SELECTOR			7
'''	22 01004	SWITCH ENGINE 4 TO PERMANENT SPLICE	' '		'
-176	22-61501-1	. HARNESS ASSEMBLY. AC VOLTMETER SELECTOR	1 1		1
	74353	SWITCH TO PERMANENT SPLICE			_
	36151 36153	- TERMINAL, CONVAIR 98-90805-001 -V00779- - TERMINAL, CONVAIR 98-90805-003 -V00779-			5
	PT06E8-45	CONNECTOR, CONVAIR 92-40325-006 -V77820-	i i		2
-177	22-61502-1	. HARNESS ASSEMBLY, AC LOAD METER	1		1
	PT06E8-4S	GENERATOR 1 TO RELAY 1 STA 306 - CONNECTOR CONVAIR 92-40325-006 -V77820-	1		1
	36151	. TERMINAL, CONVAIR 98-90805-001 -V00779-	l i l		l i
-178	22-61544	. HARNESS ASSEMBLY, DC POWER PANEL TO	i		i
	24453	PERMANENT SPLICE			
	36153 36151	. TERMINAL, CONVAIR 98-90805-003 -V00779- . TERMINAL, CONVAIR 98-90805-001 -V00779-			2 16
	320553	. TERMINAL, CONVAIR 98-90805-020 -V00779-	l il		10
	PT06E8-4S	CONNECTOR. CONVAIR 92-40325-006 -V77820-	i		1
-179	22-61545	- HARNESS ASSEMBLY, DC INSTRUMENTS TO	1 1		1
	36153	PERMANENT SPLICE . TERMINAL. CONVAIR 98-90805-003 -V00779-	,		1
	36151	. TERMINAL, CONVAIR 98-90805-001 -V00779-			10
	PT06EB-4S	CONNECTOR, CONVAIR 92-40325-006 -V77820-			5
-180	22-61546-1	- HARNESS ASSEMBLY, LOAD REDUCTION BUS SWITCH TO PERMANENT SPLICE	1		l
	36151	. TERMINAL. CONVAIR 98-90805-001 -V00779-			15
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	i		2
	320553	- TERMINAL, CONVAIR 98-90805-020 -V00779-			32
-181	22-61547	- HARNESS ASSEMBLY, GENERATOR 1 CONTROL SWITCHES TO PERMANENT SPLICE	1		1
	320553	TERMINAL, CONVAIR 98-90805-020 -V00779-	lıl		12
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	i		1
100	36151	- TERMINAL, CONVAIR 98-90805-001 -V00779-	!		18
-182	22-61548	- HARNESS ASSEMBLY, GENERATOR 2 CONTROL SWITCHES TO PERMANENT SPLICE	1		1
1	320553	. TERMINAL, CONVAIR 98-90805-020 -V00779-	1 1		18
	36151	- TERMINAL, CONVAIR 98-90805-001 -V00779-	1		15
-183	22-61549	- HARNESS ASSEMBLY. GENERATOR 3 CONTROL	1 1		1
	36151	SWITCHES TO PERMANENT SPLICE TERMINAL, CONVAIR 98-90805-001 -V00779-	,		16
	320553	. TERMINAL, CONVAIR 98-90805-020 -V00779-	l il		17
-184	22-61550	- HARNESS ASSEMBLY, GENERATOR 4 CONTROL	= 1		1
	36151	SWITCH TO PERMANENT SPLICE TERMINAL, CONVAIR 98-90805-001 -V00779-	,		10
	320553	. TERMINAL, CONVAIR 98-90805-020 -V00779-			19 16
1			'		
					ļ
			l i		
			<u> </u>		
1					
			L l	_	



FIGURE PAND PA	ART NUMBER	NOMENCLATURE	USA CO		UNITS
NDEX NO.		1 2 3 4 5 6	FROM	то	ASSEMB
-185 22-	61551	- HARNESS ASSEMBLY, ENGINE 1 OIL INDICATORS	1		- 1
		TO REAR SPAR	l . I		Ι.
	6-14555	CONNECTOR, CONVAIR 92-40332-005 -V71468-	!]
	17-1	- CONNECTOR CONVAIR 92-47000-020 -V95712-	!		!
	-61	CONNECTOR, CONVAIR 92-40058-009 -V02660-	1]
	6-14S2S 048-0000	CONNECTOR, CONVAIR 92-40332-004 -V71468- CONTACT, CONVAIR 92-63901-012 -V71468-	;		8
	049-0000	CONTACT, CONVAIR 92-63901-012 -V71468-	i		
	-0017-000	. PLUG. CONVAIR 96-91200-007 -V71468-	i		1
361		TERMINAL, CONVAIR 98-90805-003 -V00779-	l i l		1 :
	61552	. HARNESS ASSEMBLY, ENGINE 4 OIL INDICATORS	i] 3
+		TO REAR SPAR	i I		
	6-14555	CONNECTOR, CONVAIR 92-40332-005 -V71468-	1		'
	117-1	CONNECTOR, CONVAIR 92-47000-020 -V95712-			
	-61	CONNECTOR, CONVAIR 92-40058-009 -V02660-	1		1
	6-14525	- CONNECTOR, CONVAIR 92-40332-004 -V71468-	!]]
1	048-0000	- CONTACT, CONVAIR 92-63901-012 -V71468-	1		
1	049-0000	CONTACT, CONVAIR 92-63901-011 -V71468- PLUG, CONVAIR 96-91200-007 -V71468-	;		:
361	-0017-000	TERMINAL, CONVAIR 98-90805-003 -V00779-	;		;
1	61553-1	- HARNESS ASSEMBLY, WATER PUMP SWITCH TO	i		'
	-1000	PERMANENT SPLICE	'	100	5
-168 22-	61595	. HARNESS ASSEMBLY. CONSTANT SPEED DRIVE	1 1	*.	1
		DISCONNECT SWITCHES ENGINE 2 TO	181		
		PERMANENT SPLICE	- 0		
361		TERMINAL, CONVAIR 98-90805-008 -V00779-	1		AF
	553	TERMINAL, CONVAIR 98-90805-020 -V00779-	!		AF
-189 22-	61626	- HARNESS ASSEMBLY. ENGINE 3 OIL INDICATORS	1		
-190 22-	61627	TO REAR SPAR DISCONNECT HARNESS ASSEMBLY, ENGINE 2 OIL INDICATORS	1		1
		TO REAR SPAR DISCONNECT			
I -	6-14555	CONNECTOR, CONVAIR 92-40332-005 -V71468-	!]]
[-	6-14525	CONNECTOR, CONVAIR 92-40332-004 -V71468-			
	-61 117-1	CONNECTOR. CONVAIR 92-40058-009 -V02660- CONNECTOR. CONVAIR 92-47000-020 -V95712-			!
	049-0000	CONTACT. CONVAIR 92-63901-011 -V71468-	i		
[048-0000	CONTACT. CONVAIR 92-63901-012 -V71468-	l il		8
	-0017-000	PLUG. CONVAIR 96-91200-007 -V71468-	l il]
361		- TERMINAL, CONVAIR 98-90805-003 -V00779-	i		
-191 22-	61672	. HARNESS ASSEMBLY, CONSTANT SPEED DRIVE	[-1]		1
		DISCONNECT SWITCHES ENGINE 3 TO			
	-	PERMANENT SPLICE			
	1567	. TERMINAL, CONVAIR 98-90805-015 -V00779-			AF
520	1553	- TERMINAL, CONVAIR 98-90805-020 -V00779-	'		Al
					50
					N ³
		V:			
}					
1					100
			1	ı	1



FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNITS
INDEX NO.	TARTHOMBER	1 2 3 4 5 6	FROM	TO	ASSEMBL
5 -192	22-61860-1	I. HARNESS ASSEMBLY, AC LOAD METERS GENERATOR	1		1
41.		2 TO RELAY STA 306			
	PT06E8-4S	- CONNECTOR. CONVAIR 92-40325-006 -V06840-	1 1		2
-193	22-61861-1	. HARNESS ASSEMBLY. AC LOAD METERS GENERATOR	1 1		1
101	22 / 19/2 1	3 TO RELAY STA 306 . HARNESS ASSEMBLY. AC LOAD METERS GENERATOR	_ 1		1
-194	22-61862-1	4 TO RELAY STA 306	·		l '
	36151	. TERMINAL, CONVAIR 98-90805-001 -V00779-	1		1
	PT06E8-4S	CONNECTOR, CONVAIR 92-40325-006 -V06840-	i		1
-195	22-61790	. HARNESS ASSEMBLY, CABIN AIR PRESSURE	1 1		1
		CONTROL TO PERMANENT SPLICE			
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1	10	3
-196	22-61525	- HARNESS ASSEMBLY, HYDRAULIC CONTROL PANEL TO PERMANENT SPLICE	' '	10	'
	22-61525-1	. HARNESS ASSEMBLY, HYDRAULIC CONTROL PANEL	111		1
	22-01323-1	TO PERMANENT SPLICE	''		
	024048-0000	CONTACT, CONVAIR 92-63901-012 -V71468-	1		6
	024049-0000	CONTACT, CONVAIR 92-63901-011 -V71468-	1 1		2
	225-0017-000	PLUG. CONVAIR 96-91200-007 -V71468-	1 1		2
	320553	TERMINAL, CONVAIR 98-90805-020 -V00779-	1 1		18
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-			3
	EX06-14525	CONNECTOR. CONVAIR 92-40332-004 -V71468-	!	10	2
-197	22-61526	. HARNESS ASSEMBLY, HYDRAULIC EMERGENCY	1	10	1
		SHUTOFF VALVE ENGINE 1 SWITCH TO			
	100 (150)	PERMANENT SPLICE	111		1
	22-61526-1	- HARNESS ASSEMBLY; HYDRAULIC EMERGENCY SHUTOFF VALVE ENGINE 1 SWITCH TO	''		'
		PERMANENT SPLICE			
	320553	. TERMINAL, CONVAIR 98-90805-020 -V00779-	1 1		5
	320567	. TERMINAL, CONVAIR 98-90805-015 -V00779-	i		3
	36157	- TERMINAL, CONVAIR 98-90805-008 -V00779-	i		2
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	i		1 3
	320562	SPLICE, CONVAIR 98-34001-001 -V00779-	i		
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-	1 1		1
-198	22-61543	. HARNESS ASSEMBLY, HYDRAULIC FLUID QUANTITY	1 1		1
		INDICATOR TO PERMANENT SPLICE			
	PT06E14-19S	- CONNECTOR, CONVAIR 92-40325-011 -V06840-	1 1		1
-199	22-61622	- HARNESS ASSEMBLY, TURBO COMPRESSOR	1		1
		INDICATOR DISCONNECT TO PERMANENT SPLICE			Ι.
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-] []		1
	PTODEB-45	CONNECTOR, CONVAIR 92-50288-010 -V06840-	1 1		2
	PT00E10-6S	CONNECTOR, CONVAIR 92-50288-011 -V06840-		7	1 1
-200	22-61623-1	. HARNESS ASSEMBLY, UPPER AIR CONDITIONING	'	'	1 '
	22-61623-3	PANEL TO PERMANENT SPLICE HARNESS ASSEMBLY. UPPER AIR CONDITIONING	8		1 1
	22-01023-3	PANEL TO PERMANENT SPLICE	"		
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1		11
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	l i		':
	320553	. TERMINAL, CONVAIR 98-90805-020 -V00779-	i		2
-201	22-61624-803	. HARNESS ASSEMBLY. CABIN TEMPERATURE	A		
		CONTROLS TO PERMANENT SPLICE			
	22-61624-1	. HARNESS ASSEMBLY. CABIN TEMPERATURE	2	6	1
		CONTROLS TO PERMANENT SPLICE		_	
	22-61624-5	. HARNESS ASSEMBLY. CABIN TEMPERATURE	7	7	
		CONTROLS TO PERMANENT SPLICE			
	EX06-10SL4S	CONNECTOR, CONVAIR 92-40332-002 -V71468-			
	024048-0000	CONTACT, CONVAIR 92-63901-012 -V71468-			A
	36151 320553	. TERMINAL, CONVAIR 98-90805-001 -V00779- . TERMINAL, CONVAIR 98-90805-20 -V00779-			A
	260035	* * CULTINES CONANTY 40-40003-50 -400111-	'		"
		A AIRPLANES 1. 8 AND ON			
		THE PERSON AND ADDRESS OF THE PERSON ADDRESS OF THE PERSON AND ADDRESS OF THE PERSON AND ADDRESS OF THE PERSON AND ADDRESS OF THE PERSON AND ADDRESS OF THE PERSON AND ADDRESS OF THE PERSON AND ADDRESS OF THE PERSON ADDRESS OF THE PERSON ADDRESS OF THE PERSON ADDRESS OF THE PERSON ADDRESS OF THE PERSON ADDRESS OF THE PERSON ADDRESS OF THE PERSON ADDRESS OF THE PERSON ADDRESS OF THE PERSON ADDRESS OF THE PE			
				[
					I .



DEX NO. 1 2 3 4 5 6	FIGURE AND	PART NUMBER	NOMENCLATURE		GE DE	UNITS
-202 22-61625-1	NDEX NO.	I AKI HOMBEK		FROM	TO	PER ASSEMBL
CONTROL SMITCH TO PERMANENT SPLICE	000	00 (1405 1	<u> </u>			
22-61625-803	-202	22-61625-1	I TO THE TOTAL T	1	7	1
-203 22-61683				l		
-203 22-61683		22-61625-803		8		1
SHUTOFF VALVE SWITCH ENGINE 2 TO PERMANENT SPLICE 22-61683-1 - HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 2 TO PERMANENT SPLICE 320559 - SPLICE, CONVAIR 98-34001-003 -V0779- 320562 - SPLICE, CONVAIR 98-34001-001 -V00779- 1 320563 - TERMINAL, CONVAIR 98-90805-020 -V00779- 1 36157 - TERMINAL, CONVAIR 98-90805-015 -V00779- 1 36151 - TERMINAL, CONVAIR 98-90805-019 -V00779- 1 -204 -204 -204 -205 -206 -206 -206 -207 -208 -208 -208 -208 -209 -209 -209 -209 -209 -209 -209 -209		1				1
PERMANENT SPLICE	-203	22-61683		1	10	1
ARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 2 TO PERMANENT SPLICE				-		
SHUTOFF VALVE SWITCH ENGINE 2 TO PERMANENT SPLICE						
PERMANENT SPLICE SPLICE, CONVAIR 98-34001-003 -V0779- 1 320562 SPLICE, CONVAIR 98-34001-001 -V00779- 1 320563 TERMINAL, CONVAIR 98-90805-020 -V00779- 1 320567 TERMINAL, CONVAIR 98-90805-015 -V00779- 1 36151 TERMINAL, CONVAIR 98-90805-008 -V00779- 1 36151 TERMINAL, CONVAIR 98-90805-001 -V00779- 1 1 10 10 10 10 10 10		22-61683-1		13	ļ	1
320559 SPLICE, CONVAIR 98-34001-003 -V0779- 1 20562 SPLICE, CONVAIR 98-34001-001 -V00779- 1 320553 SPLICE, CONVAIR 98-90805-020 -V00779- 1 320567 SERMINAL, CONVAIR 98-90805-015 -V00779- 1 36157 SERMINAL, CONVAIR 98-90805-015 -V00779- 1 36151 SERMINAL, CONVAIR 98-90805-008 -V00779- 1 36151 SHUTOFF VALVE SWITCH ENGINE 3 TO PERMANENT SPLICE HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 3 TO PERMANENT SPLICE HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 3 TO PERMANENT SERMINAL, CONVAIR 98-90805-020 -V00779- 1 320562 SPLICE, CONVAIR 98-90805-008 -V00779- 1 320562 SPLICE, CONVAIR 98-34001-001 -V00779- 1 10 10 10 10 10 10 10				· [.		
320562 320553				i 1		Į
320553 320567 320562 320567 320562 320567 320562 320567 320562 320562 320562 320562 320563 320563 320564 320564 320564 320565 320565 320565 320565 320566 320566 320566 320566 320566 320566 320566 320567 320566 320566 320567 320568 320567 320568 320569 320569 320569 320569 320560 320600 3206000 3206000000000000000000				1 1		1
320567		320562	SPLICE, CONVAIR 98-34001-001 -V00779-	1 1		2
320567		320553	TERMINAL, CONVAIR 98-90805-020 -V00779-	1 1		3
36157 36151 -204 22-61684 -3 TERMINAL, CONVAIR 98-90805-008 -V00779- 36151 -204 22-61684 -3 TERMINAL, CONVAIR 98-90805-001 -V00779- 32-61684-3 HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 3 TO PERMANENT SPLICE 22-61684-3 TERMINAL, CONVAIR 98-90805-020 -V00779- 320553 TERMINAL, CONVAIR 98-90805-015 -V00779- 320567 TERMINAL, CONVAIR 98-90805-015 -V00779- 320562 SPLICE, CONVAIR 98-34001-001 -V00779- 320562 TERMINAL, CONVAIR 98-34001-001 -V00779- 320562 HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 4 TO PERMANENT SPLICE 22-61685-1 HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 4 TO PERMANENT SPLICE 320567 TERMINAL, CONVAIR 98-90805-015 -V00779- 320574 TERMINAL, CONVAIR 98-90805-016 -V00779- 320559 TERMINAL, CONVAIR 98-90805-010 -V00779- 320559 TERMINAL, CONVAIR 98-90805-010 -V00779- 320562 SPLICE, CONVAIR 98-90805-010 -V00779- 320569 SPLICE, CONVAIR 98-90805-010 -V00779- 320569 SPLICE, CONVAIR 98-34001-003 -V00779- 1 SPLICE, CONVAIR 98-34001-003 -V00779- 1 SPLICE, CONVAIR 98-34001-001 -V00779- 1 SPLICE, CONVAIR		320567	TERMINAL. CONVAIR 98-90805-015 -V00779-	i		Ŀ
36151		36157		i		l i
-204 22-61684						l i
SHUTOFF VALVE SWITCH ENGINE 3 TO PERMANENT SPLICE HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 3 TO PERMANENT 320553 . TERMINAL, CONVAIR 98-90805-020 -V00779- 36157 . TERMINAL, CONVAIR 98-90805-015 -V00779- 1 320562 . SPLICE, CONVAIR 98-90805-008 -V00779- 1 22-61685 HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 4 TO PERMANENT SPLICE 22-61685-1 HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 4 TO PERMANENT SPLICE 320567 . TERMINAL, CONVAIR 98-90805-015 -V00779- 36161 . TERMINAL, CONVAIR 98-90805-016 -V00779- 320559 . TERMINAL, CONVAIR 98-90805-001 -V00779- 320559 . SPLICE, CONVAIR 98-90805-001 -V00779- 320562 . SPLICE, CONVAIR 98-34001-003 -V00779- 1 320562	-20h				10	Ιi
PERMANENT SPLICE HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 3 TO PERMANENT TERMINAL, CONVAIR 98-90805-020 -V00779- TERMINAL, CONVAIR 98-90805-015 -V00779- TERMINAL, CONVAIR 98-90805-008 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-90805-016 -V00779- TERMINAL, CONVAIR 98-90805-016 -V00779- TERMINAL, CONVAIR 98-90805-016 -V00779- TERMINAL, CONVAIR 98-90805-010 -V00779- TERMINAL, CONVAIR 98-90805-010 -V00779- TERMINAL, CONVAIR 98-90805-010 -V00779- TERMINAL, CONVAIR 98-90805-010 -V00779- TERMINAL, CONVAIR 98-90805-010 -V00779- TERMINAL, CONVAIR 98-90805-010 -V00779- TERMINAL, CONVAIR 98-34001-003 -V00779- TERMINAL, CONVAIR 98-34001-003 -V00779- TERMINAL, CONVAIR 98-34001-003 -V00779- TERMINAL, CONVAIR 98-34001-003 -V00779- TERMINAL, CONVAIR 98-34001-003 -V00779- TERMINAL, CONVAIR 98-34001-003 -V00779- TERMINAL, CONVAIR 98-34001-003 -V00779- TERMINAL, CONVAIR 98-34001-003 -V00779- TERMINAL, CONVAIR 98-34001-003 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779-	204	22 01004		'	10	f
Carry Carr				i		
SHUTOFF VALVE SWITCH ENGINE 3 TO PERMANENT 320553		22-41404 1				
PERMANENT . TERMINAL, CONVAIR 98-90805-020 -V00779- 1 320567 . TERMINAL, CONVAIR 98-90805-015 -V00779- 1 320562 . SPLICE, CONVAIR 98-34001-001 -V00779- 1 1 1 1 1 1 1 1 1		22-01004-1		1 11		1
320553		1				
320567 - TERMINAL, CONVAIR 98-90805-015 -V00779- 1 320562 - SPLICE, CONVAIR 98-34001-001 -V00779- 1 1 10 SHUTOFF VALVE SWITCH ENGINE 4 TO PERMANENT SPLICE - HARNESS ASSEMBLY, HYDRAULIC EMERGENCY 1 1 10 SHUTOFF VALVE SWITCH ENGINE 4 TO PERMANENT SPLICE - TERMINAL, CONVAIR 98-90805-015 -V00779- 1 320567 - TERMINAL, CONVAIR 98-90805-016 -V00779- 1 320574 - TERMINAL, CONVAIR 98-90805-010 -V00779- 1 320559 - SPLICE, CONVAIR 98-90805-001 -V00779- 1 320562 - SPLICE, CONVAIR 98-34001-003 -V00779- 1 320562 - SPLICE, CONVAIR 98-34001-003 -V00779- 1 320562						
36157 TERMINAL, CONVAIR 98-90805-008 -V00779- 320562 SPLICE, CONVAIR 98-34001-001 -V00779- 1			- TERMINAL, CONVAIR 98-90805-020 -V00779-	1 1 1		14
36157 320562 -205 -205 -206 -206 -206 -207 -208 -208 -209 -209 -209 -209 -209 -209 -209 -209						3
-205 320562 . SPLICE, CONVAIR 98-34001-001 -V00779- 1 10 SHUTOFF VALVE SWITCH ENGINE 4 TO PERMANENT SPLICE . HARNESS ASSEMBLY, HYDRAULIC EMERGENCY 11 SHUTOFF VALVE SWITCH ENGINE 4 TO PERMANENT SPLICE . TERMINAL, CONVAIR 98-90805-015 -V00779- 1 320567 . TERMINAL, CONVAIR 98-90805-016 -V00779- 1 320574 . TERMINAL, CONVAIR 98-90805-010 -V00779- 1 320575 . TERMINAL, CONVAIR 98-90805-010 -V00779- 1 320559 . SPLICE, CONVAIR 98-34001-003 -V00779- 1 320562 . SPLICE, CONVAIR 98-34001-001 -V00779- 1			TERMINAL, CONVAIR 98-90805-008 -V00779-	1 1		2
-205 22-61685 HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 4 TO PERMANENT SPLICE HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 4 TO PERMANENT SPLICE 320567 TERMINAL, CONVAIR 98-90805-015 -V00779- 1 320574 TERMINAL, CONVAIR 98-90805-016 -V00779- 1 320574 TERMINAL, CONVAIR 98-90805-010 -V00779- 1 320559 SPLICE, CONVAIR 98-34001-003 -V00779- 1 320562 SPLICE, CONVAIR 98-34001-001 -V00779- 1 1 1 1 1 1 1 1 1		320562	SPLICE, CONVAIR 98-34001-001 -V00779-	1 1		3
SHUTOFF VALVE SWITCH ENGINE 4 TO PERMANENT SPLICE 22-61685-1 HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 4 TO PERMANENT SPLICE 320567 TERMINAL, CONVAIR 98-90805-015 -V00779- TERMINAL, CONVAIR 98-90805-016 -V00779- TERMINAL, CONVAIR 98-90805-010 -V00779- TERMINAL, CONVAIR 98-90805-001 -V00779- TERMINAL, CONVAIR 98-34001-003 -V00779- TERMINAL, CONVAIR 98-34001-003 -V00779- TERMINAL, CONVAIR 98-34001-001 -V00779-	-205				10	ī
PERMANENT SPLICE 22-61685-1 - HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 4 TO PERMANENT SPLICE 320567 - TERMINAL, CONVAIR 98-90805-015 -V00779- 1 320574 - TERMINAL, CONVAIR 98-90805-010 -V00779- 1 36151 - TERMINAL, CONVAIR 98-90805-001 -V00779- 1 320559 - SPLICE, CONVAIR 98-34001-003 -V00779- 1 320562				'		
22-61685-1 HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 4 TO PERMANENT SPLICE 320567 TERMINAL, CONVAIR 98-90805-015 -V00779- 1 320574 TERMINAL, CONVAIR 98-90805-010 -V00779- 1 36151 TERMINAL, CONVAIR 98-90805-010 -V00779- 1 320559 SPLICE, CONVAIR 98-34001-003 -V00779- 1 320562 SPLICE, CONVAIR 98-34001-001 -V00779- 1						
SHUTOFF VALVE SWITCH ENGINE 4 TO PERMANENT SPLICE 320567 - TERMINAL, CONVAIR 98-90805-015 -V00779- 1 36161 - TERMINAL, CONVAIR 98-90805-016 -V00779- 1 320574 - TERMINAL, CONVAIR 98-90805-010 -V00779- 1 36151 - TERMINAL, CONVAIR 98-90805-001 -V00779- 1 320559 - SPLICE, CONVAIR 98-34001-003 -V00779- 1 320562 - SPLICE, CONVAIR 98-34001-001 -V00779- 1		22-61685-1		1 ,, 1		1
PERMANENT SPLICE 320567 - TERMINAL, CONVAIR 98-90805-015 -V00779- 1 36161 - TERMINAL, CONVAIR 98-90805-016 -V00779- 1 320574 - TERMINAL, CONVAIR 98-90805-010 -V00779- 1 36151 - TERMINAL, CONVAIR 98-90805-001 -V00779- 1 320559 - SPLICE, CONVAIR 98-34001-003 -V00779- 1 320562 - SPLICE, CONVAIR 98-34001-001 -V00779- 1		22 01003-1		''		'
320567				88		
36161 . TERMINAL, CONVAIR 98-90805-016 -V00779- 1 320574 . TERMINAL, CONVAIR 98-90805-010 -V00779- 1 36151 . TERMINAL, CONVAIR 98-90805-001 -V00779- 1 320559 . SPLICE, CONVAIR 98-34001-003 -V00779- 1 320562 . SPLICE, CONVAIR 98-34001-001 -V00779- 1		320547		.		_
320574		1		1 1		1
36151		1	The state of the s	1 " 1		2
320559						1
320559				1 ' 1		3
		320559		1		1
		320562	- SPLICE, CONVAIR 98-34001-001 -V00779-	1 1		2
		320634		1 11		1
			The second secon	'		Ι ΄
		1				
				1 1		



FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNITS
NDEX NO.			FROM	TO	ASSEMB
-206	22-61596-803	1 2 3 4 5 6 L HARNESS ASSEMBLY, FLIGHT ENGINEER AIR	A		1
-200	22-01340-003	CONDITIONING PANEL TO PERMANENT SPLICE	- 1		
	22-61596-1	- HARNESS ASSEMBLY. FLIGHT ENGINEER AIR	2	6	1
	22-01370-1	CONDITIONING PANEL TO PERMANENT SPLICE	-	_	1
	22-61596-5	- HARNESS ASSEMBLY. FLIGHT ENGINEER AIR	7	7	1 1
	22 -0.370 3	CONDITIONING PANEL TO PERMANENT SPLICE	'	•	}
-207	22-61793	. HARNESS ASSEMBLY. AIR FLOW INDICATOR TO	1 1		1 1
201		PERMANENT SPLICE			'
	PT06E8-4S	- CONNECTOR, CONVAIR 92-40325-006 -V06840-	1 1		1 1
	EX06-14525	CONNECTOR, CONVAIR 92-40332-004 -V71468-	1		1 1
	225-0017-000	- PLUG, CONVAIR 96-91200-007 -V71468-	1 1		1
	024049-0000	CONTACT, CONVAIR 92-63901-011 -V71468-	1 1		2
	024048-0000	CONTACT, CONVAIR 92-63901-012 -V71468-	1 1		2
-208	22-61928	. HARNESS ASSEMBLY. ENGINEER FLOOD LIGHT	1 1		1
		CONTINUE TO AC JUNCTION BOX FLOOD LIGHT			
-209	22-61929	. HARNESS ASSEMBLY, ENGINEER FLOOD LIGHT	1 1	10	1
		CONTINUE TO CIRCUIT BREAKER FLOOD LIGHT			
	22-61929-1	. HARNESS ASSEMBLY, ENGINEER FLOOD LIGHT	11		1
		CONTINUE TO CIRCUIT BREAKER FLOOD LIGHT			
-209.1	22-61728-1	- HARNESS ASSEMBLY, AUTUPILOT DISENGAGE	1 1		1
		SWITCHES TO PERMANENT SPLICE			
-210	22-61754	. HARNESS ASSEMBLY. FUEL TEMPERATURE SELECTOR	1 1		1 1
		SWITCH ENGINE 3 TO PERMANENT SPLICE			
-211	22-61582	. HARNESS ASSEMBLY. FLIGHT ENGINEER LWR AIR	1 1		1
		CONDITIONING PANEL TO PERMANENT SPLICE			1
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-] 1] 13
	320553	TERMINAL, CONVAIR 98-90805-020 -V00779-	1 1		13
	36151	. TERMINAL, CONVAIR 98-90805-001 -V00779-	1 1		11
-212	22-61941	. HARNESS ASSEMBLY, CONSTANT SPEED DRIVE	1		1 1
		SWITCH ENGINE 1 TO PERMANENT SPLICE			
-213	22-61940	- HARNESS ASSEMBLY, CONSTANT SPEED DRIVE	1 1		1
		SWITCH ENGINE 4 TO PERMANENT SPLICE			
	320553	TERMINAL, CONVAIR 98-90805-020 -V00779-	1 1	i	AF
	320567	TERMINAL, CONVAIR 98-90805-015 -V00779-	1 1 1		AF
-214	22-61900	. HARNESS ASSEMBLY, PERMANENT SPLICE TO	1 1		1 1
	ļ	SAFETY PIN WARNING LIGHTS			
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		1
	320553	TERMINAL, CONVAIR 98-90805-020 -V00779-	1		13
-215	22-61901	- HARNESS ASSEMBLY, DOOR OPEN WARNING LIGHTS	1		1 '
	1	TO DIMENSION RELAY BOX 7	1		
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		1
	320553	- TERMINAL, CONVAIR 98-90805-020 -V00779-	1		37
		A AIRPLANES 1. 8 AND ON			
			:		
	:			Д	
	=<				


ELECTRICAL HARNESSES FWD ENTRANCE



SECTION V

Chapter 94 ELECTRICAL HARNESSES


FWD ENTRANCE ELECTRICAL HARNESSES

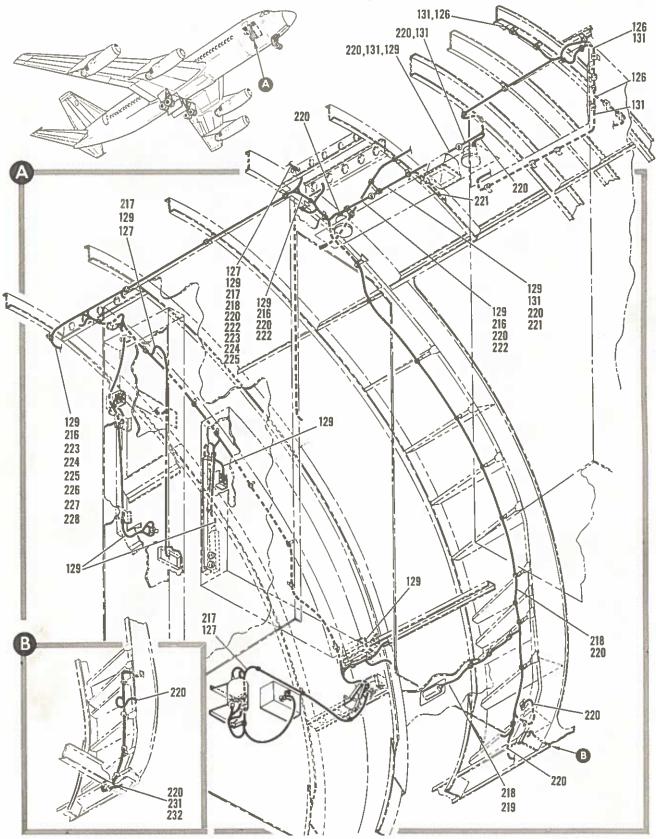

22.04.94.02.001-1

94-2 Page 2 FWD ENTRANCE ELECTRICAL HARNESSES STA 301 TO 413 FIGURE 1 (SHEET 1 OF 2)

Feb. 10/62 A-2

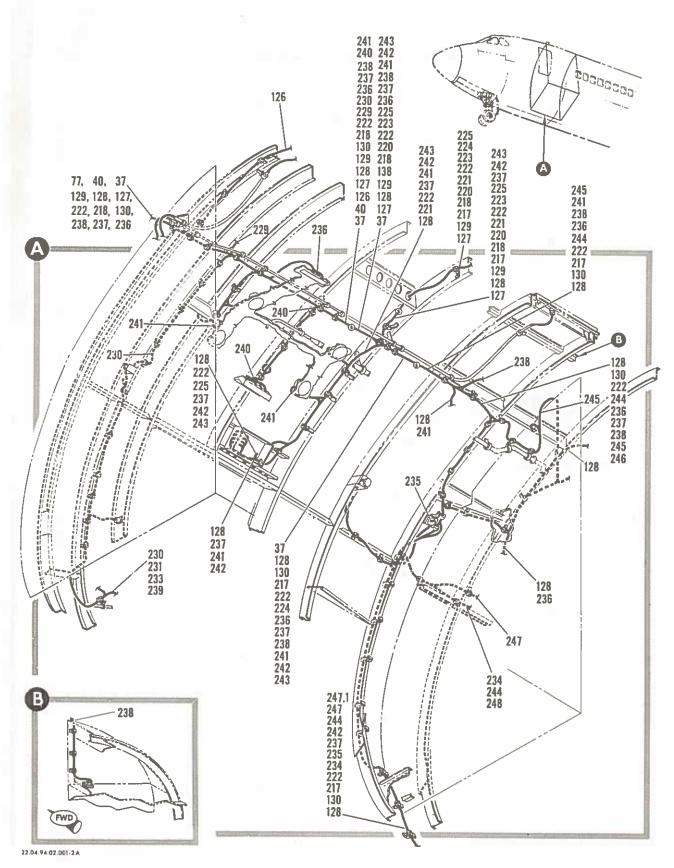

Feb. 10/62 A-2 FWD ENTRANCE ELECTRICAL HARNESSES STA 301 TO 413 FIGURE 1 (SHEET 2 OF 2)

94-2 Page 3



AND	PART NUMBER	NOMENCLATURE		DE	UNITS
NDEX NO.	PARINOMBER		FROM	то	ASSEMBLY
108		1 2 3 4 5 6			
1	1	FWD ENTRANCE ELECTRICAL HARNESSES			
	00 43553	STA 301 TO 413 SEE 22-63000 - HARNESS ASSEMBLY. FWD DOOR PERMANENT SPLICE	1 1		1
-216	22-63553	TO PERMANENT SPLICE LH	'		•
217	22 42421	. HARNESS ASSEMBLY, FWD LAVATORY HEATER TO	1 1		1
-217	22-62621	REAR SPAR PERMANENT SPLICE LH	1 '		
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-	1 1		2
-218	22-63562-1	. HARNESS ASSEMBLY, FWD LOADING RAMP	1 1		ī
2.0		DISCONNECT TO PERMANENT SPLICE LH			
	PT06E12-3S	CONNECTOR, CONVAIR 92-40325-015 -V06840-	1 1		1
-219	22-63560-1	. HARNESS ASSEMBLY, FWD LOADING RAMP	1		3
	+	RECEPTACLE TO DISCONNECT LH			
	PT00E12-3P	CONNECTOR. CONVAIR 92-50288-012 -V06840-	1		1
	320574	TERMINAL, CONVAIR 98-90805-010 -V00779-	1 1		1
-220	22-63564	- HARNESS ASSEMBLY, FWD ENTRANCE	٠ ا		,
	7,157	LIGHTS TO PERMANENT SPLICE LH . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		10
	36153	. TERMINAL, CONVAIR 98-90805-020 -V00779-	i		6
	320553 320559	. SPLICE, CONVAIR 98-34001-003 -V00779-	i		2
-221	22-63531	- ARNESS ASSEMBLY, FWD ENTRANCE	i		i
-221	22 03331	DOOR SIGN TO PERMANENT SPLICE LH	,		'
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		1
	320553	TERMINAL, CONVAIR 98-90805-020 -V00779-	1 1		6
-222	22-63569	. HARNESS ASSEMBLY, FWD STEWARDESS	1		1
		PERMANENT SPLICE TO DIODES LH			
	320562	SPLICE, CONVAIR 98-34001-001 -V00779-	1 1		1
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		1
-223	22-63500	. HARNESS ASSEMBLY, OVERHEAD PERMANENT	1		1
		SPLICE TO UPPER ANTI-COLLISION LIGHT LH	1 1		1
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779- . PLUG, CONVAIR 92-40325-006 -V06840-	-		1
-224	PT06E8-4S 22-63554	. HARNESS ASSEMBLY, FWD WARNING SIGN SPLICE	i		
-224	22-83334	TO CENTER SPLICE LH	'		
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-	1 1		3
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	i		10
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1		20
-225	22-63607	. HARNESS ASSEMBLY, FWD STEWARDESS PANEL	1 1		1
		PERMANENT SPLICE TO PASSENGER CALL			
		SWITCH PERMANENT SPLICE SEAT 1 LH			١.
-226	22-63607-1	. HARNESS ASSEMBLY. FWD STEWARDESS PANEL	1		1
	1	PERMANENT SPLICE TO PASSENGER CALL			
	700515	SWITCH PERMANENT SPLICE SEAT 1 TO 4 LH . SPLICE, CONVAIR 98-34001-001 -V00779-	1 1		1
	320562	. SPLICE, CONVAIR 98-34001-003 -V00779-	i		2
-227	320559 22-63607-3	- ARNESS ASSEMBLY. FWD STEWARDESS PANEL	l i		ĺ
-221	22-03001-3	PERMANENT SPLICE TO PASSENGER CALL	'		'
		SWITCH PERMANENT SPLICE SEAT 8 LH			
	320562	SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-	i		3
-228	22-63607-5	. HARNESS ASSEMBLY. FWD STEWARDESS PANEL	1		F
	1	PERMANENT SPLICE TO PASSENGER CALL			
		SWITCH PERMANENT SPLICE SEAT 10 TO 15 LH			
	320562	SPLICE, CONVAIR 98-34001-001 -V00779-	1 1		1
	320570	SPLICE, CONVAIR 98-34001-002 -V00779-	1 1		2
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-	1		1
		V. '			
			-		
		6			
	+				
			ļ		1
		T. Control of the Con	1		4
			ĺ		
			ĺ		



FIGURE	D. DT. N. H. L. D. ED.	NOMENCI ATURE	USA	DE	UNITS
AND IDEX NO.	PART NUMBER	NOMENCLATURE	FROM	то	ASSEMB
		1 2 3 4 5 6	1		1
-229	22-63512	- HARNESS ASSEMBLY, FWD EXIT SIGN TO	'		'
220	22-62554-1	PERMANENT SPLICE RH - HARNESS ASSEMBLY, PERMANENT SPLICE	1		1 1
-230	22-02554-1	TO BUFFET 1 RH			1 '
	PT 00E 12-3S	. CONNECTOR, CONVAIR 92-50288-021 -V06840-	1		1
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-231	22-61899-1	. HARNESS ASSEMBLY. ELECTRONIC AND ELECTRICAL	1		1
		COMPARTMENT ACCESS DOOR SWITCH TO			1
		PERMANENT SPLICE RH	1 1		} {
	320559	- SPLICE: CONVAIR 98-34001-003 -V00779- - TERMINAL: CONVAIR 98-90805-001 -V00779-	1 1		3
-232	36151 22-61568-1	- HARNESS ASSEMBLY, GENERATOR AND BUS TIE	l i		'
-232	22-01300-1	CONTACTOR 4 TO PERMANENT SPLICE RH	'		
	320570	- SPLICE, CONVAIR 98-34001-002 -V00779-	1	1	
	320559	- SPLICE, CONVAIR 98-34001-003 -V00779-	1	i	1.0
	320562	. SPLICE, CONVAIR 98-34001-001 -V00779-	1		"
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1 !
	PT06E18-32P	CONNECTOR, CONVAIR 92-40325-019 -V06840-	1 1		
-234	22-63556	- HARNESS ASSEMBLY, LOUNGE WARNING SIGNS	1		
	7/157	PERMANENT SPLICE TO FWD WARNING SIGNS RH . TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		-
	36153 36151	. TERMINAL, CONVAIR 98-90805-001 -V00779-			.
-235	22-62553-1	- HARNESS ASSEMBLY: PERMANENT SPLICE TO	l i	10	
-231	22.02333-1	BUFFET 2 RH	`		
	22-62553-805	. HARNESS ASSEMBLY, PERMANENT SPLICE TO	11		'
		BUFFET 2 RH			
	PT00E16-8S	CONNECTOR, CONVAIR 92-50288-023 -V06840-	!		
-236	22-63518	- HARNESS ASSEMBLY. STEWARDESS FWD	1		
		CHIME TO PERMANENT SPLICE RH	1		
	320562	- SPLICE: CONVAIR 98-34001-001 -V00779- - SPLICE: CONVAIR 98-34001-003 -V00779-	1 1		1
	320559	SPLICE, CONVAIR 98-90805-003 -V00779-	1 1		100
-237	36153 22-63581	- HARNESS ASSEMBLY, STEWARDESS FWD PANEL	l i		
-231	24-03301	WARNING SIGNS TO PERMANENT SPLICE RH	'		
	320559	. SPLICE, CONVAIR 98-34001-003 -V00779-	1 1		1 .
	36151	_ TERMINAL. CONVAIR 98-90805-001 -V00779-	1		
	36153	- TERMINAL - CONVAIR 98-90805-003 -V00779-	1		
	320553	. TERMINAL, CONVAIR 98-90805-020 -V00779-	1 1	1	3
-238	22-63609	. HARNESS ASSEMBLY, COAT CLOSET	1 1	l	
		SWITCH TO LIGHT BALLAST RH	1		
	36153	TERMINAL. CONVAIR 98-90805-003 -V00779-	'		1
			-		- 61
			ł		
		(i			63
		S S			
		N/	1		
	1				
				1	
				1	
					1
			1]	1
				1	
	F			1	



FIGURE AND	PART NUMBER	NOMENCLATURE	USA	GE DE	UNITS
INDEX NO.	I AKI NOMBEK	1 2 3 4 5 6	FROM	TO	ASSEMBLY
1 -240	22-63532	- HARNESS ASSEMBLY, FWD SERVICE	1		1
-241	320562 36153 22-63544	DOOR SIGN TO PERMANENT SPLICE RH - SPLICE, CONVAIR 98-34001-001 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 HARNESS ASSEMBLY, FWD BUFFET	1 1		1 7 1
-242	36153 22-63586	AFT LIGHTS TO PERMANENT SPLICE RH . TERMINAL, CONVAIR 98-90805-003 -V00779 HARNESS ASSEMBLY, FWD STEWARDESS BOX DIODES TO PERMANENT SPLICE RH	1		14
-244	320559 36153 22-63566	. SPLICE, CONVAIR 98-34001-003 -V00779- . TERMINAL, CONVAIR 98-90805-003 -V00779- . HARNESS ASSEMBLY, EMERGENCY	1 1		4 6 1
-245	22-63557	EXIT TO FWD STEWARDESS PANEL RH - HARNESS ASSEMBLY, FWD STEWARDESS PANEL PERMANENT SPLICE TO LOUNGE	1		1
-246	320570 320559 36153 22-63621	WARNING SIGNS PERMANENT SPLICE RH SPLICE, CONVAIR 98-34001-002 -V00779- SPLICE, CONVAIR 98-34001-003 -V00779- TERMINAL, CONVAIR 98-90805-003 -V00779- HARNESS ASSEMBLY, CABIN VALANCE LIGHT TO	1 1 1 1 1		2 3 1
	22-62623	BALLAST RH - HARNESS ASSEMBLY, PERMANENT SPLICE TO REAR SPAR FEED THRU PERMANENT SPLICE ENGINE 1	1		1
-248	320559 22-63523 320562 320559	STA 375 SPLICE, CONVAIR 98-34001-003 -V00779- HARNESS ASSEMBLY, WINDOW LIGHTS RH SPLICE, CONVAIR 98-34001-001 -V00779- SPLICE, CONVAIR 98-34001-003 -V00779-	1 1 1 1 1		8 1 3

ELECTRICAL HARNESSES CABIN




SECTION V

Chapter 94 ELECTRICAL HARNESSES

CABIN ELECTRICAL HARNESSES



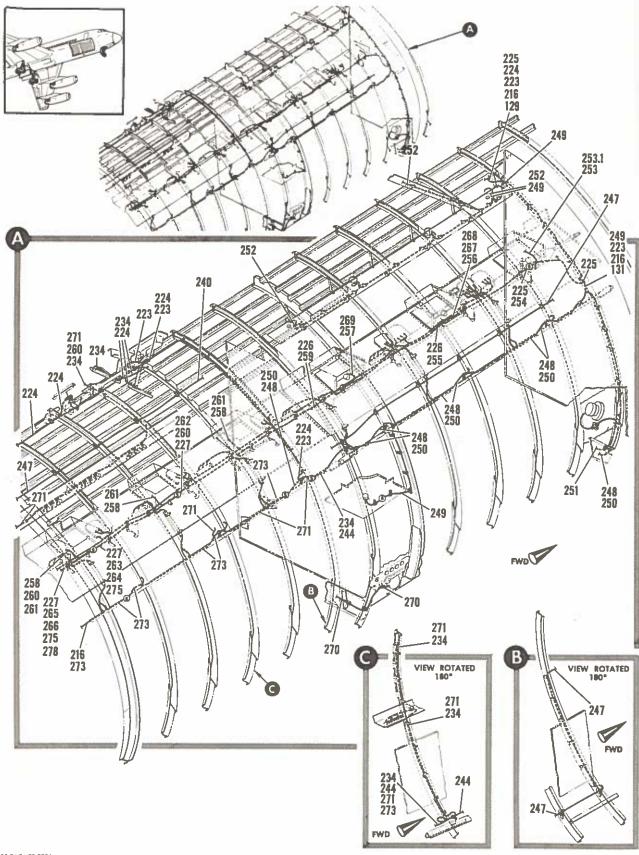

22.04.94.03.002A

94-3 Page 2

PASSENGER COMPARTMENT STA 390 TO 640 ELECTRICAL HARNESSES FIGURE 1

Feb. 10/62 A-2




1 2 3 4 5 6	TO ASSEMI
PASSENGER CONPARTMENT STA 390 TO 640 ELECTRICAL HARNESSES SEE 22-63001 HARNESS ASSEMBLY, LOUNGE TABLE LAMP TO PERMANENT SPLICE 320559	1 2
ELECTRICAL HARNESSES SEE 22-63001	1 2
-249 22-63521	1 2
PERMANENT SPLICE SPLICE, CONVAIR 98-34001-003 -V00779- 1	1 2
36153	1 2
-250 22-63522 HARNESS ASSEMBLY, WINDOW LIGHTS STA 432 TO 546 LH	1 2
STA 432 TO 546 LH	1 2
320562 36153 -251 22-62570-1 -252 -253 -254 -251 -251 -251 -251 -251 -252 -253-1 -253 -253 -253 -253 -253 -253 -253 -254 -254 -254 -254 -254 -254 -251 -251 -251 -251 -252 -253-10 -253 -253 -253 -253 -253 -253 -253 -253	2
-251 22-62570-1	2
-251 22-62570-1	2
TO PERMANENT SPLICE 320559 36153 DM9609-19S -252 22-63519 HARNESS ASSEMBLY, OVERHEAD LOUNGE LIGHTS 36153 -253 22-63558 HARNESS ASSEMBLY, PASSENGER CALL SHITCH TO PERMANENT SPLICE SEAT 1 LH HARNESS ASSEMBLY, PASSENGER CALL SHITCH TO PERMANENT SPLICE SEAT 1 RH 36151 -TERMINAL, LH CONVAIR 98-90805-001 -V00779- 36151 -TERMINAL, LH CONVAIR 98-90805-001 -V00779- TERMINAL, LH CONVAIR 98-90805-001 -V00779- TERMINAL, RH CONVAIR 98-90805-001 -V00779- TERMINAL, RH CONVAIR 98-90805-001 -V00779- TERMINAL, RH CONVAIR 98-90805-001 -V00779- TERMINAL, RH CONVAIR 98-90805-001 -V00779- TERMINAL, CONVAIR 98-90805-008 -V00779- TERMINAL, CONVAIR 98-90805-008 -V00779- TERMINAL, CONVAIR 98-90805-008 -V00779- TERMINAL, CONVAIR 98-90805-008 -V00779- TERMINAL, CONVAIR 98-90805-008 -V00779- TERMINAL, CONVAIR 98-90805-010 -V00779- TERMINAL, CONVAIR 98-90805-01	2
320559 36153	2
. TERMINAL, CONVAIR 98-90805-003 -V00779 CONNECTOR, CONVAIR 92-40058-024 -V17419 CONNECTOR, CONVAIR 92-40058-024 -V17419 HARNESS ASSEMBLY, OVERHEAD LOUNGE LIGHTS . TERMINAL, CONVAIR 98-90805-003 -V00779 HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 1 LH . HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 1 RH . TERMINAL, LH CONVAIR 98-90805-001 . TERMINAL, RH CONVAIR 98-90805-001 . V00779 TERMINAL, RH CONVAIR 98-90805-001 . V00779 TERMINAL, READING LIGHT STA 423 LH . HARNESS ASSEMBLY, READING LIGHT STA 423 RH . TERMINAL, CONVAIR 98-9805-008 -V00779 TERMINAL, CONVAIR 98-9805-008 -V00779 TERMINAL, CONVAIR 98-9805-010 -V00779 . TERMINAL, CONVAIR 98-9805-010 -V00779 . TERMINAL, CONVAIR 98-9805-010 -V00779 . TERMINAL, CONVAIR 98-9805-010 -V00779 . TERMINAL, CONVAIR 98-9805-010 -V00779 . HARNESS ASSEMBLY, READING LIGHT PERMANENT . SPLICE SEAT 1 TO 2 LH . HARNESS ASSEMBLY, READING LIGHT PERMANENT . SPLICE SEAT 1 TO 2 LH . HARNESS ASSEMBLY, READING LIGHT PERMANENT . THE MINAL SEAT I TO 2 LH . HARNESS ASSEMBLY, READING LIGHT PERMANENT . THE MINAL SEAT I TO 2 LH . HARNESS ASSEMBLY, READING LIGHT PERMANENT . THE MINAL SEAT I TO 2 LH . HARNESS ASSEMBLY, READING LIGHT PERMANENT . THE MINAL SEAT I TO 2 LH . HARNESS ASSEMBLY, READING LIGHT PERMANENT . THE MINAL SEAT I TO 2 LH . HARNESS ASSEMBLY, READING LIGHT PERMANENT . THE MINAL SEAT I TO 2 LH . HARNESS ASSEMBLY, READING LIGHT PERMANENT . THE MINAL SEAT I TO 2 LH . HARNESS ASSEMBLY, READING LIGHT PERMANENT . THE MINAL SEAT I TO 2 LH . HARNESS ASSEMBLY, READING LIGHT PERMANENT . THE MINAL SEAT I TO 2 LH . HARNESS ASSEMBLY, READING LIGHT PERMANENT . THE MINAL SEAT I TO 2 LH . HARNESS ASSEMBLY, READING LIGHT PERMANENT . THE MINAL SEAT I TO 2 LH . HARNESS ASSEMBLY, READING LIGHT PERMANENT . THE MINAL SEAT I TO 2 LH . HARNESS ASSEMBLY, READING LIGHT PERMANENT . THE MINAL SEAT I TO 2 LH . HARNESS ASSEMBLY, READING LIGHT PERMANENT . THE MINAL SEAT I TO 2 LH . HARNESS ASSEMBLY SEAT I TO 2 LH . HARNESS ASSEMBLY SEAT I TO 2 LH	2
DM9609-19S . CONNECTOR, CONVAIR 92-40058-024 -V17419- -252 22-63519 . HARNESS ASSEMBLY, OVERHEAD LOUNGE LIGHTS 36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1 HARNESS ASSEMBLY, PASSENGER CALL SWITCH 22-63573 . HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 1 LH 36151 . TERMINAL, LH CONVAIR 98-90805-001 . TO PERMANENT SPLICE SEAT 1 RH 36151 . TERMINAL, LH CONVAIR 98-90805-001 . TERMINAL, RH CONVAIR 98-90805-001 . TERMINAL, RH CONVAIR 98-90805-001 . TERMINAL, RH CONVAIR 98-90805-001 . TERMINAL, CONVAIR 98-90805-001 . TERMINAL, CONVAIR 98-90805-008 -V00779 TERMINAL, CONVAIR 98-90805-008 -V00779 TERMINAL, CONVAIR 98-90805-010 -V00779 TERMINAL, CONVAIR 98-905-010 -V00779 TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINA	2
-252 22-63519 . HARNESS ASSEMBLY, OVERHEAD LOUNGE LIGHTS 36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1	2
-253 22-63558 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1	2
-253 22-63558 HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 1 LH	
TO PERMANENT SPLICE SEAT 1 LH 22-63573 . HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 1 RH . TERMINAL, LH CONVAIR 98-90805-001	
TO PERMANENT SPLICE SEAT 1 RH 36151 . TERMINAL, LH CONVAIR 98-90805-001	
36151 . TERMINAL, LH CONVAIR 98-90805-001 V00779- -253.1 22-63577 . HARNESS ASSEMBLY, READING LIGHT STA 423 LH TERMINAL, CONVAIR 98-9805-008 -V00779- -254 22-63591 . TERMINAL, CONVAIR 98-9805-008 -V00779 TERMINAL, CONVAIR 98-9805-010 -V00779 TERMINAL, CONVAIR 98-9805-010 -V00779 TERMINAL, CONVAIR 98-9805-010 -V00779 TERMINAL, CONVAIR 98-9805-010 -V00779 TERMINAL, CONVAIR 98-9805-010 -V00779 TERMINAL, CONVAIR 98-9805-010 -V00779 TERMINAL, CONVAIR 98-9805-010 -V00779 TERMINAL, CONVAIR 98-9805-010 -V00779 TERMINAL, CONVAIR 98-9805-010 -V00779 TERMINAL, CONVAIR 98-9805-010 -V00779 TERMINAL, CONVAIR 98-9805-010 -V00779 TERMINAL, CONVAIR 98-90805-001	
36151 - TERMINAL, RH CONVAIR 98-90805-001 1	
-V00779253.1 22-63577	
-253.1 22-63577 HARNESS ASSEMBLY, READING LIGHT STA 423 LH 1 22-63578 HARNESS ASSEMBLY, READING LIGHT STA 423 RH 1 36157 TERMINAL, CONVAIR 98-9805-008 -V00779- 1 320574 TERMINAL, CONVAIR 98-9805-010 -V00779 1 22-63591 TERMINAL, CONVAIR 98-9805-010 -V00779 1 SPLICE SEAT 1 TO 2 LH 22-63590 HARNESS ASSEMBLY, READING LIGHT PERMANENT 1 HARNESS ASSEMBLY, READING LIGHT PERMANENT 1	
22-63578	
36157 . TERMINAL, CONVAIR 98-9805-008 -V00779- 1 320574 . TERMINAL, CONVAIR 98-9805-010 -V00779 1 -254 22-63591 . HARNESS ASSEMBLY, READING LIGHT PERMANENT 1 SPLICE SEAT 1 TO 2 LH 22-63590 . HARNESS ASSEMBLY, READING LIGHT PERMANENT 1	
320574 - TERMINAL, CONVAIR 98-9805-010 -V00779 1 -254 22-63591 - HARNESS ASSEMBLY, READING LIGHT PERMANENT 1 SPLICE SEAT 1 TO 2 LH 22-63590 - HARNESS ASSEMBLY, READING LIGHT PERMANENT 1	
-254 22-63591 . HARNESS ASSEMBLY, READING LIGHT PERMANENT 1 SPLICE SEAT 1 TO 2 LH 22-63590 . HARNESS ASSEMBLY, READING LIGHT PERMANENT 1	
SPLICE SEAT 1 TO 2 LH 22-63590 . HARNESS ASSEMBLY, READING LIGHT PERMANENT 1	
22-63590 . HARNESS ASSEMBLY, READING LIGHT PERMANENT 1	- 1
SPLICE SEAT 1 TO 2 RH	
320562 . SPLICE, CONVAIR 98-34001-001 -V00779- 1	
-255 22-63591-1 . HARNESS ASSEMBLY, READING LIGHT PERMANENT 1	100
SPLICE SEAT 2 TO 3 LH	i
22-63590-1 . HARNESS ASSEMBLY. READING LIGHT PERMANENT 1	ŀ
SPLICE SEAT 2 TO 3 RH	
320562 . SPLICE, CONVAIR 98-34001-001 -V00779-	1
-256 22-63559 . HARNESS ASSEMBLY, PASSENGER CALL SWITCH	
TO PERMANENT SPLICE SEAT 2 LH	
EE 03314 P INMINESS ASSETTED A PAGE OF THE PAGE OF T	
TO PERMANENT SPLICE SEAT 2 RH 36151 . TERMINAL, CONVAIR 98-90805-001 -V00779-	
36151 . TERMINAL, CONVAIR 98-90805-001 -V00779- 1 -257 22-63572 . HARNESS ASSEMBLY, PASSENGER CALL SWITCH 1	1
TO PERMANENT SPLICE SEAT 3 LH	
36157 . TERMINAL, CONVAIR 98-90805-008 -V00779-	1
22-63575 . HARNESS ASSEMBLY, PASSENGER CALL SWITCH	
TO PERMANENT SPLICE SEAT 3 RH	
36151 - TERMINAL, CONVAIR 98-90805-001 -V00779- 1	
	ĺ
	1



FIGURE AND	PART NUMBER	NOMENCLATURE		GE DE	UNITS
INDEX NO.		1 2 3 4 5 6	FROM	το	ASSEMBL
1 -258	22-63579	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH	1		11
	22-63576	TO PERMANENT SPLICE SEAT 4 TO 7 LH - HARNESS ASSEMBLY, PASSENGER CALL SWITCH			4
		TO PERMANENT SPLICE SEAT 4 TO 7 RH		1	1
	36151	- TERMINAL, RH CONVAIR 98-90805-001	1		5
-259	22-63591-3	- HARNESS ASSEMBLY, READING LIGHT TO	1		1
	22-63590-3	PERMANENT SPLICE SEAT 3 TO 4 LH			
		• HARNESS ASSEMBLY, READING LIGHT TO PERMANENT SPLICE SEAT 3 TO 4 RH	1		1
-260	320574	- TERMINAL, CONVAIR 98-90805-010 -V00779-	1 1		1 1
-200	22-03001	- HARNESS ASSEMBLY, PERMANENT SPLICE CALL SWITCH SEAT 4 TO 5 LH	1		1
	22-63600	- HARNESS ASSEMBLY, PERMANENT SPLICE CALL SWITCH SEAT 4 TO 5 RH	1		1
	320562	. SPLICE, CONVAIR 98-34001-001 -V00779-	1		3
-261	22-63587	. HARNESS ASSEMBLY, READING LIGHT TO	+ i		19
	13400	PERMANENT SPLICE SEAT 4 TO 22 LH			
	22-63588	- HARNESS ASSEMBLY, READING LIGHT TO PERMANENT SPLICE SEAT 4 TO 22 RH	1 1		19
	320574	TERMINAL, LH CONVAIR 98-90805-010	1		6
	320574	-V00779- - TERMINAL: RH CONVAIR 98-90805-010	1		žį.
	36157	-v00779- - TERMINAL, LH CONVAIR 98-90805-008			14
	36157		1	ı	9
-262	22-63593	-V00779 HARNESS ASSEMBLY, READING LIGHT TO	1		1
	22-63592	PERMANENT SPLICE SEAT 4 TO 5 LH - HARNESS ASSEMBLY, READING LIGHT TO	,		1
	323288	PERMANENT SPLICE SEAT 4 TO 5 RH . PLUG, CONVAIR 96-89500-002 -V00779-			
	320562	. SPLICE, RH CONVAIR 98-34001-001 -V00779-			1 3
-263	22-63593-1	- HARNESS ASSEMBLY, READING LIGHTS TO	i		1
	22-63592-1	PERMANENT SPLICE SEAT 5 TO 6 LH - HARNESS ASSEMBLY, READING LIGHTS TO	1		1
	320562	PERMANENT SPLICE SEAT 5 TO 6 RH - SPLICE, LH CONVAIR 98-34001-001 -V00779-	1		8
	320562	- SPLICE, RH CONVAIR 98-34001-001 -V00779-	1 1		3
-264	22-63601-1	- HARNESS ASSEMBLY, PERMANENT SPLICE CALL SWITCH SEAT 5 TO 6 LH	1 1		1
	22-63600-1	- HARNESS ASSEMBLY, PERMANENT SPLICE CALL SHITCH SEAT 5 TO 6 RH	1 1		1
	320562	SPLICE, LH CONVAIR 98-34001-001 -V00779-	1		6
	320562	SPLICE, RH CONVAIR 98-34001-001 -V00779-	1 1		3

FIGURE AND	PART NUMBER	NOMENCLATURE		AGE ODE	UNITS PER
INDEX NO.		1 2 3 4 5 6	FROM	то	ASSEMBLY
2		FUSELAGE FWD UNDER FLOOR ELECTRONIC HARNESSES OVER WING AREA AND ABOVE WHEEL WELL SEE 22-33003			
-157	22-33811	- HARNESS ASSEMBLY, AIR CONDITIONING TO PRESSURE FEED THRU A LH	1		1
	22-33810	HARNESS ASSEMBLY, AIR CONDITIONING TO PRESSURE FEED THRU C RH	1.7		1
-158	22-33751	- HARNESS ASSEMBLY, COAX AIR CONDITIONING COMPARTMENT DISCONNECT TO HYDRAULIC COMPARTMENT DISCONNECT ADF 1	1	2	1
	22-33751-803	- HARNESS ASSEMBLY, COAX AIR CONDITIONING COMPARTMENT DISCONNECT TO HYDRAULIC COMPARTMENT DISCONNECT ADF 1	3		1
-159	22-33751-801	- HARNESS ASSEMBLY, COAX AIR CONDITIONING COMPARTMENT DISCONNECT TO HYDRAULIC	1	2	1
	22-33751-805	COMPARTMENT DISCONNECT ADF 2 - HARNESS ASSEMBLY. COAX AIR CONDITIONING COMPARTMENT DISCONNECT TO HYDRAULIC	3		1
-160	UG88C-U 22-33890	COMPARTMENT DISCONNECT ADF 2 CONNECTOR, CONVAIR 92-47001-007 HARNESS ASSEMBLY, AIR CONDITIONING	1		2
-161	22-33957	COMPARTMENT TO SPLICE - HARNESS ASSEMBLY, RADIO COMPARTMENT SPLICE TO HYDRAULIC COMPARTMENT SPLICE HF 1	1		1
-162	320559 22-33968	SPLICE, CONVAIR 98-3%001-003 -V00779- HARNESS ASSEMBLY, RADIO COMPARTMENT SPLICE			13 1
-163	320562 22-33887	TO HYDRAULIC COMPARTMENT SPLICE HF 2 - SPLICE, CONVAIR 98-34001-001 -V00779- HARNESS ASSEMBLY, RADIO COMPARTMENT SPLICE	1 1		26 1
	320570 320559	TO HYDRAULIC COMPARTMENT SPLICE PUBLIC ADDRESS - SPLICE, CONVAIR 98-34001-002 -V00779-	1	YA	2
	323975	- SPLICE, CONVAIR 98-34001-003 -V00779- - SPLICE, CONVAIR 98-34009-003 -V00779-	1		22
				=	
i	i				
:			İ		
	5			İ	
					Ì



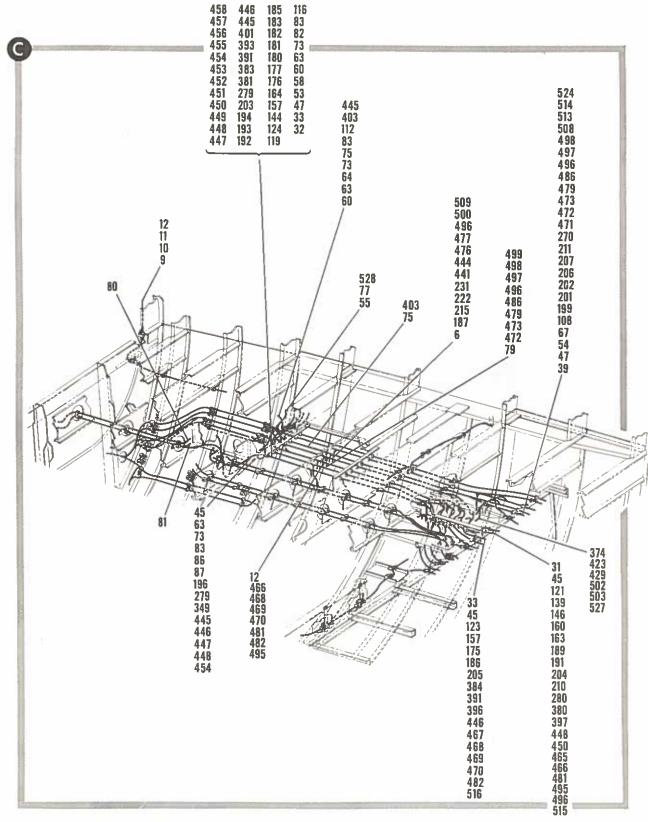


22.04.94.05.002-2

Apr. 28/61

UNDERFLOOR STA 250 TO 375 RH ELECTRICAL HARNESSES FIGURE 1 (SHEET 2 OF 4)

94-5 Page 3

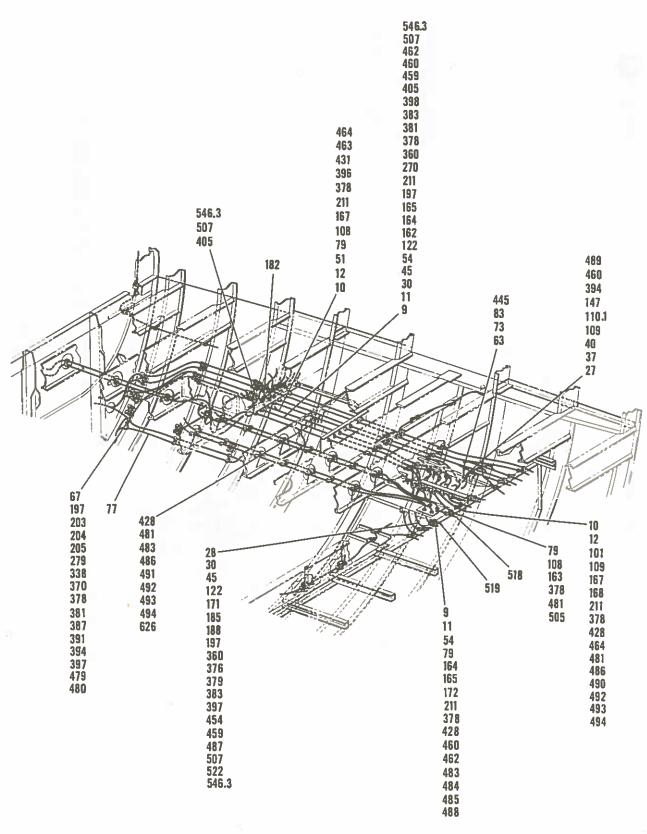

22.04.94.05.002-3

94-5 Page 4 UNDERFLOOR STA 250 TO 375 RH ELECTRICAL HARNESSES FIGURE 1 (SHEET 3 OF 4)

Apr. 28/61 A ELECTRICAL HARNESSES ELECTRONIC AND




SECTION V

Chapter 94 ELECTRICAL HARNESSES

ELECTRONIC AND ELECTRICAL COMPARTMENT ELECTRICAL HARNESSES


ELECTRICAL HARNESSES ELECTRONIC AND ELECTRICAL COMPT

ILLUSTRATED PARTS CATALOG

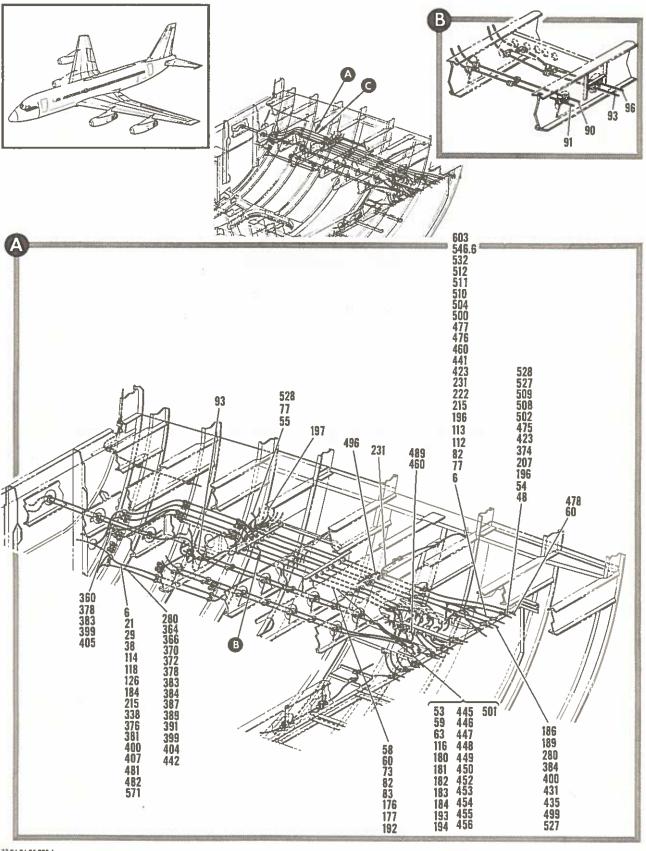

22.04.94.05.002-1

94-5 Page 2 UNDERFLOOR STA 250 TO 375 RH ELECTRICAL HARNESSES Apr. 28/61 FIGURE 1 (SHEET 1 OF 4)

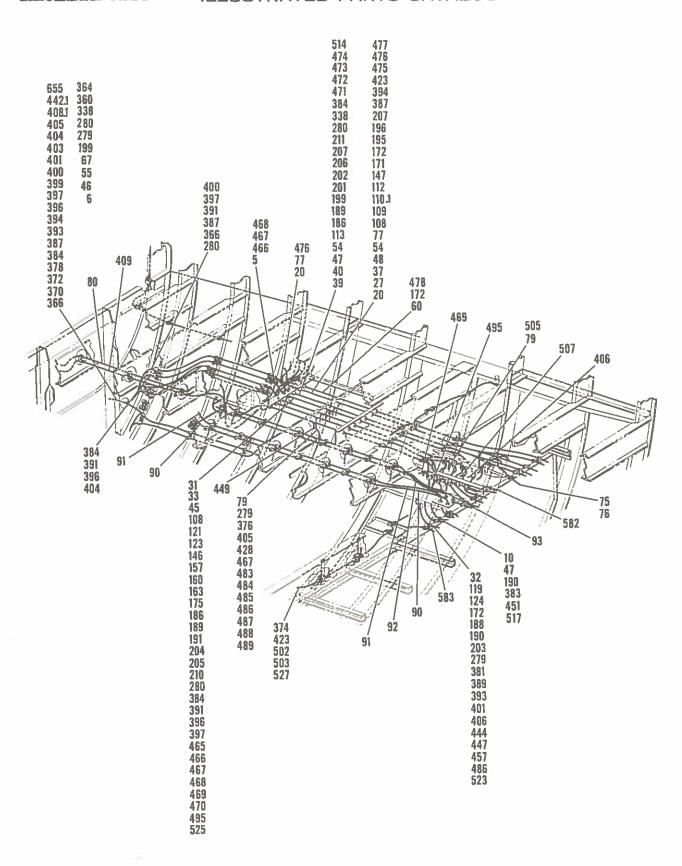



ELECTRICAL HARNESSES ELECTRONIC AND

FIGURE AND	PART NUMBER	NOMENCLATURE		GE DE	UNIT
IDEX NO.		112112112112	FROM	то	ASSEME
	<u> </u>	1 2 3 4 5 6			-
		UNDERFLOOR STA 250 TO 375 RH ELECTRICAL HARNESSES SEE 22-61004			
-445	22-61845-1	. HARNESS ASSEMBLY, FLIGHT ENGINEER STATION	1		1 _1
-443	22-01043-1	TO TRANSFORMER RECTIFIER UNIT 2	'		
	YAEV63L	- TERMINAL CONVAIR 98-90806-006 -V09922-	lı		3
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	; ;		ì
	320559	- CONDUCTOR, CONVAIR 98-34001-003 -V00779-	i		
	225-0017-000	PLUG. CONVAIR 92-91200-007 -V71468-	i		
	024048-0000	CONNECTOR, CONVAIR 92-63901-012 -V71468-	i		
	024049-0000	CONNECTOR, CONVAIR 92-63901-011 -V71468-	lii		
	EX06-16S1S	CONNECTOR, CONVAIR 92-40332-007 -V71468-	i		
-446	22-61798-1	. HARNESS ASSEMBLY, CONTROLLER REGULATOR 4	l i l		
		TO PERMANENT SPLICE	`		
	PT06E22-55S	CONNECTOR, CONVAIR 92-40325-010 -V77820-	lıi		
	320559	CONDUCTOR - CONVAIR 98-34001-003 -V00779-	l i l		'
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	l i i		
	JN10-104	. FILTER. CONVAIR 93-78604-001 -V80183-	l i l		
-447	22-61769-1	. HARNESS ASSEMBLY. CONTROLLER REGULATOR 2	l i i		
~~~	122 01107	TO PERMANENT SPLICE	'		
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	l i i		
	PT06E22-55S	CONNECTOR . CONVAIR 92-40325-010 -V77820-	i		
	JN10-104	. FILTER, CONVAIR 93-78604-001 -V80183-	i		
-448	22-61768-1	- HARNESS ASSEMBLY. CONTROLLER REGULATOR 3	i		
7.70		TO PERMANENT SPLICE	'		1
	36153	. TERMINAL: CONVAIR 98-90805-003 -V00779-	l 1 !		
	320559	CONDUCTOR. CONVAIR 98-34001-003 -V00779-	lil		
	PT06E22-55S	CONNECTOR, CONVAIR 92-40325-010 -V77820-	lii		
	JN10-104	- FILTER CONVAIR 93-78604-001 -V80183-	l i l		1
-449	22-61795-1	- HARNESS ASSEMBLY. RELAY	i		
* * *		INSTALLATION TO PERMANENT SPLICE STA 306			1
-450	22-61580	. HARNESS ASSEMBLY, MASTER WARNING BOX 3	1		
. = -		TO PERMANENT SPLICE			
	PT06E22-55S	CONNECTOR. CONVAIR 92-40325-010 -V77820-	1		
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	i		1
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	i		
-451	22-62522	. HARNESS ASSEMBLY, STRUCTURE TEMPERATURE	i		
		PERMANENT SPLICE TO FRONT SPAR FEED THRU			
		PANEL A	]		1
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1		
-452	22-61858	- HARNESS ASSEMBLY, COPILOT POWER FAIL	[ i		
		RELAYS TO PERMANENT SPLICE			
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1		
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1		1
		"			
					1
					1
					1
				1	
				}	
					1
					1
					1
	i contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of the contract of		1	1	1
			1		



FIGURE AND	PART NUMBER	NOMENCLATURE	00	GE DE	UNITS
NDEX NO.		1 2 3 4 5 6	FROM	TO	ASSEME
-453	22-61857	. HARNESS ASSEMBLY, PILOT POWER FAIL RELAYS			
		TO PERMANENT SPLICE			
	36151	- TERMINAL, CONVAIR 98-90805-001 -V00779-	1 1		1 .
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1	1	
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1		
-454	22-61799-1	- HARNESS ASSEMBLY, CONTROLLER REGULATOR 1	1		
	PT06E22-55S	. CONNECTOR, CONVAIR 92-40325-010 -V77820-	1 1		
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	lil	!	
	320559	- CONDUCTOR, CONVAIR 98-34001-003 -V00779-	l i l		
-455	22-61850	. HARNESS ASSEMBLY, PILOT ESSENTIAL 28 VOLT	i		
		LIGHTING TRANSFORMER RELAY TO PERMANENT			
		SPLICE	١		
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	!		
1.54	320574	. TERMINAL, CONVAIR 98-90805-010 -V00779-	1		
-456	22-61633-1	- HARNESS ASSEMBLY, INSTRUMENT BUS TO INSTRUMENT POWER TRANSFER RELAY	'		
-457	22-62517-1	. HARNESS ASSEMBLY, FEED THRU PANEL H TO	1 1		
451		INSTRUMENT PANEL STATION	'		
	320570	CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	i		1
-458	22-62506	. HARNESS ASSEMBLY, FEED THRU PANEL W TO	i		
		PERMANENT SPLICE			
	320559	- CONDUCTOR, CONVAIR 98-34001-003 -V00779-	!		1
-459	22-61821	- HARNESS ASSEMBLY, ANTI-ICE RELAY 1 TO	1		
-460	22-62508-3	PERMANENT SPLICE - HARNESS ASSEMBLY, FEED THRU PANEL W TO	1		
-460	22-02300-3	LANDING LIGHT RELAY LH	'		
	320559	- CONDUCTOR - CONVAIR 98-34001-003 -V00779-	l ıl		
-461	22-62508-5	. HARNESS ASSEMBLY, FEED THRU PANEL W TO	i		
		PERMANENT SPLICE			1
-462	22-62533-1	- HARNESS ASSEMBLY, FEED THRU PANEL F TO	] 1 ]		
	100550	DIMMING RELAY BOX	.		1
1, 21.	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-			
-464	22-62548-1	- HARNESS ASSEMBLY, FEED THRU PANEL M TO DIMMING RELAY BOXES	'		
	320559	CONDUCTOR . CONVAIR 98-34001-003 -V00779-	l 1 l		
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	i		
-465	22-62518-1	. HARNESS ASSEMBLY, FEED THRU PANEL P TO	i		
		INSTRUMENT PANEL STATION			
	320562	CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		
	320570	CONDUCTOR, CONVAIR 98-34001-002 -V00779-			
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1		1
-466	22-62526	- HARNESS ASSEMBLY, FEED THRU PANEL R TO	1		
	320562	FLIGHT ENGINEER STATION - CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		
	320570	CONDUCTOR, CONVAIR 98-34001-001 -900779-	¦		
	320559	. CONDUCTOR, CONVAIR 98-34001-003 -V00779-	l il		1
-467	22-62528-1	- HARNESS ASSEMBLY, FEED THRU PANEL N TO	i		"
		INSTRUMENT PANEL STATION			
	320562	CONDUCTOR, CONVAIR 95-34001-001 -V00779-	1		
	320570	CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1 1		
	320559	- CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1		1
-468	22-62516-1	- HARNESS ASSEMBLY, FEED THRU PANEL Q TO	1		
	320562	FLIGHT ENGINEER STATION - CONDUCTOR, CONVAIR 98-34001-001 -V00779-			
	320570	- CONDUCTOR: CONVAIR 98-34001-002 -V00779-	i		
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	l i		1
-469	22-62530	. HARNESS ASSEMBLY, FEED THRU PANEL N TO	i		'
		RELAY INSTALLATION STA 306			
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1

FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO	GE DE	UNIT
NDEX NO.	17KI HOMBER	1 2 3 4 5 6	FROM	то	ASSEMI
-470	22-61581	- HARNESS ASSEMBLY, MASTER WARNING BOX 4 TO PERMANENT SPLICE	1	10	
	22-61581-1	- HARNESS ASSEMBLY, MASTER WARNING BOX 4 TO PERMANENT SPLICE	11		
	PT06E22-55S	. CONNECTOR, CONVAIR 92-40325-010 -V77820-	1 1		
-471	22-61836	- HARNESS ASSEMBLY, FLIGHT DECK PICKUP TO PERMANENT SPLICE	i		
-472	CT06E14S9S 22-62595-803	. CONNECTOR, CONVAIR 92-40334-004 -V71468- HARNESS ASSEMBLY, LANDING GEAR SAFETY RELAY	1 A		
	22-62595-5	TO PLENUM CHAMBER FEED THRU V - HARNESS ASSEMBLY, LANDING GEAR SAFETY RELAY	2	7	
-473	22-61704-1	TO PLENUM CHAMBER FEED THRU V  - HARNESS ASSEMBLY, WATER PUMP RELAY TO AIR	1		
	PT06E8-4S	PUMP MOTOR . CONNECTOR, CONVAIR 92-40325-006 -V77820-	1		
	EX06-10SL4S	CONNECTOR, CONVAIR 92-40332-002 -V71468- CONTACT, CONVAIR 92-63901-012 -V71468-			
	024048-0000 320559	- CONTACT, CONVAIR 92-03901-012 -471400-	;		
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	i		
-474	22-62505	- HARNESS ASSEMBLY, FEED THRU PANEL X TO PERMANENT SPLICE			Ι,
-475	320559 22-62616	CONDUCTOR, CONVAIR 98-34001-003 -V00779- . HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT SPLICE TO REAR SPAR PERMANENT SPLICE	1 1		ן י
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		
	320570	CONDUCTOR, CONVAIR 98-34001-002 -V00779-	j		
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-			
	024048-0000 EX06-12535	CONTACT, CONVAIR 92-63901-012 -V71468- CONNECTOR, CONVAIR 92-40332-003 -V71468-			
		A AIRPLANES 1, 8 AND ON			
			!		
					$\times$
		22			
				İ	



FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNITS
NDEX NO.		1 2 3 4 5 6	FROM	то	ASSEMB
-476	22-62617	HARNESS ASSEMBLY, FLAP ASSYMMETRICAL RELAY     INSTALLATION TO REAR SPAR PERMANENT     SPLICE	1		1
-477	320559 22-62618-1	- CONDUCTOR, CONVAIR 98-34001-003 -V00779- - HARVESS ASSEMBLY, HYDRAULIC MOTOR RELAY TO REAR SPAR PERMANENT SPLICE	1 1		7
	320570 320559 36153	- CONDUCTOR, CONVAIR 98-34001-002 -V00779- - CONDUCTOR, CONVAIR 98-34001-003 -V00779- - TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		16
-47B	22-62597-1 YAEV6C-L1	- HARNESS ASSEMBLY, PLENUM CHAMBER FEED THRU Y TO AC POWER DISTRIBUTION BOX - TERMINAL, CONVAIR 98-90806-005 -V09922-	1		3
-479	22-61577-1 36153	HARNESS ASSEMBLY, LIGHT DIMMING RELAY BOX     6 TO PERMANENT SPLICE     TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		1
-480	320559 PT06E22-55S 22-61586	- CONDUCTOR, CONVAIR 98-34001-003 -V00779- - CONNECTOR, CONVAIR 92-40325-010 -V77820- - HARNESS ASSEMBLY, FIRE CONTROL TO	1 1		20
-481	320553 320559 PT06E14-19P 22-61574-1	DISCONNECT LH  - TERMINAL, CONVAIR 98-90805-020 -V00779-  - CONDUCTOR, CONVAIR 98-34001-003 -V00779-  - CONNECTOR, CONVAIR 92-40325-009 -V77820-  - HARNESS ASSEMBLY, LIGHT DIMMING RELAY BOX 3	1 1		16
-481	36153 320559	TO PERMANENT SPLICE - TERMINAL, CONVAIR 98-90805-003 -V00779 CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1 16
-482	PT06E22-55S 22-61575-1	- CONNECTOR, CONVAIR 92-40325-010 -V77820 HARNESS ASSEMBLY, LIGHT DIMMING RELAY BOX 4 TO PERMANENT SPLICE			15
	320559 36153 PT06E22-55S	- CONDUCTOR, CONVAIR 98-34001-003 -V00779- - TERMINAL, CONVAIR 98-90805-003 -V00779- - CONNECTOR, CONVAIR 92-40325-010 -V08640-			
				:	

FIGURE	PART NUMBER	NOMENCLATURE	USA CO		UNITS
NDEX NO.	TAKI NOMBER		FROM	TO	ASSEMB
	100 (0(0)	1 2 3 4 5 6			,
-483	22-62607	- HARNESS ASSEMBLY, FEED THRU PANEL E TO OUTBD BODST RELAY 2	1		'
	320559	CONDUCTOR. CONVAIR 98-34001-003 -V00779-	_ l _ 1 _ l		] 3
-484	22-62601	. HARNESS ASSEMBLY. FEED THRU PANEL E TO	i		-
		INBD BOOST RELAY 1			
-485	22-62605	. HARNESS ASSEMBLY, FEED THRU PANEL E TO	1		1
		OUTBD BOOST RELAY 1			Ι.
-486	22-61573-1	- HARNESS ASSEMBLY, LIGHT DIMMING RELAY	1		1
	36153	TO PERMANENT SPLICE BOX 2  . TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		
	PT06E22-55S	CONNECTOR. CONVAIR 92-40325-010 -V77820-	i		.
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	i		18
-487	22-6157B	- HARNESS ASSEMBLY, MASTER WARNING BOX 1	1 1		:
		TO PERMANENT SPLICE			
	PT06E22-55S	CONNECTOR, CONVAIR 92-40325-010 -V77820-	1 1		
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		15
-488	320559 22-62603	- CONDUCTOR, CONVAIR 98-34001-003 -V00779- - HARNESS ASSEMBLY, FEED THRU PANEL E TO			13
-400	22-02003	INBO BOOST RELAY 2	'		'
-489	22-62520-1	. HARNESS ASSEMBLY, FRONT SPAR FEED THRU	1		
		PANEL A TO INBO LANDING LIGHT RELAY LH			
	320562	CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1 1		1
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1		۱ ۱
-490	22-62558	. HARNESS ASSEMBLY, FEED THRU PANEL M TO	1		·
-491	22-62600	RELAYS STA 306	1 1		
-471	22-62600	- HARNESS ASSEMBLY, FEED THRU PANEL L TO INBD BOOST RELAY 4	'		
-492	22-62602	. HARNESS ASSEMBLY, FEED THRU PANEL L TO	1		
***		INBD BOOST RELAY 3			
-493	22-62604	. HARNESS ASSEMBLY, FEED THRU PANEL L TO	1 1		1
		OUTBD BOOST RELAY 4			
-# ð #	22-62606	- HARNESS ASSEMBLY, FEED THRU PANEL L TO	1		1
1000	22 42524	OUTBD BOOST RELAY 3  HARNESS ASSEMBLY, FEED THRU PANEL P TO	1		,
-495	22-62524	EQUIPMENT INSTALLATION STA 323	'		'
	320559	CONDUCTOR, CONVAIR 98-34001-003 -VD0779-	1 1		1 1
			- 1		
			- 1		
			ĺ	İ	




FIGURE	DADT MILLIADED	MOMENICIATURE	USA		UNIT
AND IDEX NO.	PART NUMBER	NOMENCLATURE	FROM	TO	ASSEME
		1 2 3 4 5 6	1 NOM	-10	MAGEMI
		PASSENGER COMPARTMENT STA 640 TO 888 ELECTRICAL HARNESSES			
		SEE 22-63002 AND 22-63003			1
-274	22-63601-5	. HARNESS ASSEMBLY. PERMANENT SPLICE	1		
7		CALL SWITCH SEAT 7 TO 8 LH			
	22-63600-5	. HARNESS ASSEMBLY, PERMANENT SPLICE	1 1		
		CALL SWITCH SEAT 7 TO 8 RH			
	320559	- SPLICE, CONVAIR 98-34001-003 -V00779-	]		
-275	22-63593-5	- HARNESS ASSEMBLY, READING LIGHTS TO	1		
	22-63592-5	PERMANENT SPLICE SEAT 7 TO 8 LH - HARNESS ASSEMBLY, READING LIGHTS TO	1 1		
	22-03342-3	PERMANENT SPLICE SEAT 7 TO 8 RH	'		
-276	22-63601-801	- HARNESS ASSEMBLY. PERMANENT SPLICE CALL	_   1 1 1		
210	22 05001 001	SWITCH SEAT 8 TO 9 LH	'		
	22-63600-801	- HARNESS ASSEMBLY, PERMANENT SPLICE CALL	1 1		
		SWITCH SEAT 8 TO 9 RH			
	320562	SPLICE, CONVAIR 98-34001-001 -V00779-	1		
-277	22-63593-801	- HARNESS ASSEMBLY, READING LIGHTS TO	i		1
		PERMANENT SPLICE SEAT 8 TO 7 LH			
	22-63592-801	- HARNESS ASSEMBLY, READING LIGHTS TO	1		
		PERMANENT SPLICE SEAT 8 TO 9 RH			1
	320562	SPLICE, LH CONVAIR 98-34001-001 -V00779-	!		
	320562	SPLICE, RH CONVAIR 98-34001-001 -V00779-	!		
	320574	- TERMINAL, LH CONVAIR 98-90805-010	1		
-278	22-63502-003	" -V00779-	1		
-210	22-63592-803	- HARNESS ASSEMBLY, READING LIGHTS TO SEAT 9 TO GROUND RH	'		1
	320574	. TERMINAL CONVAIR 98-90805-010 -V00779-	1 1		
-281	22-63617	- HARNESS ASSEMBLY, CUAT RACK DISCONNECT			
-01		TO PERMANENT SPLICE			
	PT0E6E8-4P	- CONNECTOR, CONVAIR 92-40325-029 -V77820-	1 1		
-282	22-63520	. HARNESS ASSEMBLY, EMERGENCY EXIT SIGN	i		
_		TO CABIN PERMANENT SPLICE LH			
	22-63530	- HARNESS ASSEMBLY. EMERGENCY EXIT SIGN	1 1		
		TO CABIN PERMANENT SPLICE RH			
	320559	- SPLICE, CONVAIR 98-34001-003 -V00779-			
	36151	. TERMINAL, LH CONVAIR 98-90805-001	1 1		
	44.15.7	-V00779-			
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-			
	320553	- TERMINAL, LH CONVAIR 98-90805-020			
	320553		1 1		
	350333	-V00779-			
-283	22-63540	. HARNESS ASSEMBLY, CABIN COVE LIGHTS	1 1		
200	22 000.70	STA 807 TU 953 LH	'		
	22-63541	. HARNESS ASSEMBLY, CABIN COVE LIGHTS	1 1		
	1	STA 807 TO 953 RH			
	36151	- TERMINAL, CONVAIR 98-90805-001 -V00779-	1 1		3
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		
		· -			



23 4 3 6 0	23 4 3 0 0	FIGURE AND	PART NUMBER	NOMENCLATURE	USA COI		UNITS
-284 22-65889	-284 22-65889	NDEX NO.		1 2 3 4 5 6	FROM	то	ASSEMB
PERMANENT SPLICE STA 659 TO 926 LH	PERMANENT SPLICE STA 659 TO 926 LH	-284	36151 22-63580	- HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 8 TO 14 LH - TERMINAL, CONVAIR 98-90805-001 -V00779 HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 8 TO 14 RH	1 1		5
-286 22-63595	-286 22-63595	-285	22-63527	PERMANENT SPLICE STA 659 TO 926 LH  HARNESS ASSEMBLY, WINDOW LIGHT TO PERMANENT SPLICE STA 659 TO 926 RH	1		35
-287 22-63603	-287 22-63603	-286		- HARNESS ASSEMBLY, READING LIGHTS TO			
TO PERMANENT SPLICE SEAT 9 TO 10 RH	TO PERMANENT SPLICE SEAT 9 TO 10 RH	-287		• HARNESS ASSEMBLY. PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 9 TO 10 LH			
PERMANENT SPLICE SEAT 10 TO 11 LH  HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 10 TO 11 RH  323288	PERMANENT SPLICE SEAT 10 TO 11 LH  HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 10 TO 11 RH  323288	-288		TO PERMANENT SPLICE SEAT 9 TO 10 RH			
323288 320562 320562 -SPLICE, LH CONVAIR 98-34001-001 -V00779- 1 22-63603-1 -289 -289 -289 -289 -289 -289 -289 -289	323288 320562 320562 -SPLICE, LH CONVAIR 98-34001-001 -V00779- 1 22-63603-1 -289 -289 -289 -289 -289 -289 -289 -289			PERMANENT SPLICE SEAT 10 TO 11 LH . HARNESS ASSEMBLY, READING LIGHTS TO	,		
-289 22-63603-1	-289 22-63603-1		320562	. PLUG, LH CONVAIR 96-89500-002 -V00779- . SPLICE, LH CONVAIR 98-34001-001 -V00779-	i		
TO PERMANENT SPLICE SEAT 10 TO 11 RH   320562   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE SEAT 11 TO 12 LH   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SP	TO PERMANENT SPLICE SEAT 10 TO 11 RH   320562   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE SEAT 11 TO 12 LH   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, RH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SPLICE, LH CONVAIR 98-34001-001 -V00779- 1   SP	-289	22-63603-1	- HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 10 TO 11 LH	1		
-290   22-63595-3	-290   22-63595-3		320562	TO PERMANENT SPLICE SEAT 10 TO 11 RH . SPLICE, LH CONVAIR 98-34001-001 -V00779-	1 1		
320562 SPLICE, RH CONVAIR 98-34001-001 -V00779- 1	320562 SPLICE, RH CONVAIR 98-34001-001 -V00779- 1	-290	22-63595-3	• HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 11 TO 12 LH • HARNESS ASSEMBLY, READING LIGHTS TO	'		
TO PERMANENT SPLICE SEAT 11 TO 12 RH  320562 - SPLICE, RH CONVAIR 98-34001-001 -V0G779- 1 -292 22-63595-5 - HARNESS ASSEMBLY, READING LIGHTS TO 1	TO PERMANENT SPLICE SEAT 11 TO 12 RH  320562 - SPLICE, RH CONVAIR 98-34001-001 -V0G779- 1 -292 22-63595-5 - HARNESS ASSEMBLY, READING LIGHTS TO 1	-291	22-63603-3	SPLICE, RH CONVAIR 98-34001-001 -V00779-     HARNESS ASSEMBLY, PASSENGER CALL SWITCH     TO PERMANENT SPLICE SEAT 11 TO 12 LH			
22-63594-3  - HARNESS ASSEMBLY, READING LIGHTS TO  PERMANENT SPLICE SEAT 12 TO 13 RH  320562  - SPLICE, LH CONVAIR 98-34001-001 -V00779-  - SPLICE, RH CONVAIR 98-34001-001 -V00779-  HARNESS ASSEMBLY, PASSENGER CALL SWITCH  TO PERMANENT SPLICE SEAT 12 TO 13 LH  22-63602-5  - HARNESS ASSEMBLY, PASSENGER CALL SWITCH  TO PERMANENT SPLICE SEAT 12 TO 13 RH  320562  - SPLICE, LH CONVAIR 98-34001-001 -V00779-  1	22-63594-3  - HARNESS ASSEMBLY, READING LIGHTS TO  PERMANENT SPLICE SEAT 12 TO 13 RH  320562  - SPLICE, LH CONVAIR 98-34001-001 -V00779-  - SPLICE, RH CONVAIR 98-34001-001 -V00779-  HARNESS ASSEMBLY, PASSENGER CALL SWITCH  TO PERMANENT SPLICE SEAT 12 TO 13 LH  22-63602-5  - HARNESS ASSEMBLY, PASSENGER CALL SWITCH  TO PERMANENT SPLICE SEAT 12 TO 13 RH  320562  - SPLICE, LH CONVAIR 98-34001-001 -V00779-  1	-292	320562	TO PERMANENT SPLICE SEAT 11 TO 12 RH . SPLICE, RH CONVAIR 98-34001-001 -V0C779 HARNESS ASSEMBLY, READING LIGHTS TO	1		
320562 - SPLICE, RH CONVAIR 98-34001-001 -V00779- 1 -293 22-63603-5 - HARNESS ASSEMBLY, PASSENGER CALL SWITCH 1 TO PERMANENT SPLICE SEAT 12 TO 13 LH 22-63602-5 - HARNESS ASSEMBLY, PASSENGER CALL SWITCH 1 TO PERMANENT SPLICE SEAT 12 TO 13 RH 320562 - SPLICE, LH CONVAIR 98-34001-001 -V00779- 1	320562 - SPLICE, RH CONVAIR 98-34001-001 -V00779- 1 -293 22-63603-5 - HARNESS ASSEMBLY, PASSENGER CALL SWITCH 1 TO PERMANENT SPLICE SEAT 12 TO 13 LH 22-63602-5 - HARNESS ASSEMBLY, PASSENGER CALL SWITCH 1 TO PERMANENT SPLICE SEAT 12 TO 13 RH 320562 - SPLICE, LH CONVAIR 98-34001-001 -V00779- 1			- HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 12 TO 13 RH			
22-63602-5 - HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 12 TO 13 RH 320562 - SPLICE, LH CONVAIR 98-34001-001 -V00779- 1	22-63602-5 - HARNESS ASSEMBLY, PASSENGER CALL SWITCH 1 TO PERMANENT SPLICE SEAT 12 TO 13 RH 320562 - SPLICE, LH CONVAIR 98-34001-001 -V00779- 1	-293	320562	- SPLICE, RH CONVAIR 98-34001-001 -V00779- - HARNESS ASSEMBLY, PASSENGER CALL SWITCH	_   i		
				- HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 12 TO 13 RH	1		
			1		1 1		





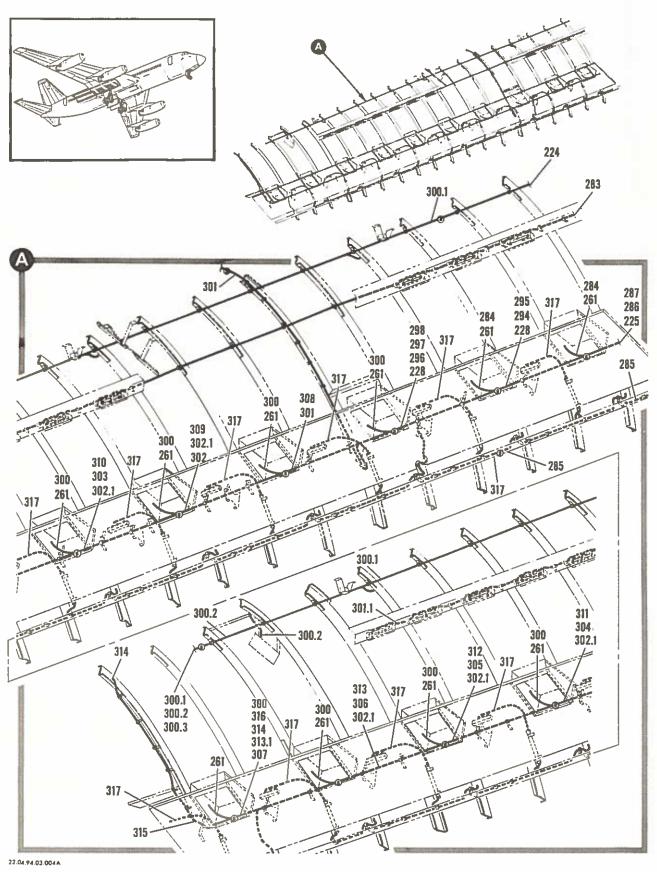

94-3 Page 10

PASSENGER COMPARTMENT
STA 888 TO 1249 ELECTRICAL HARNESSES
FIGURE 3

Feb. 10/62 A-2




22-63595-801 22-63594-5 320562 22-63603-801 22-63602-801 320559 320562 22-63594-801 320562 22-63603-803	PASSENGER COMPARTMENT STA 888 TO 1249 ELECTRICAL HARNESSES SEE 22-63003 HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 13 TO 14 LH HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 13 TO 14 RH SPLICE, RH CONVAIR 98-34001-001 -V00779- HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 13 TO 14 LH HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 13 TO 14 RH SPLICE, LH CONVAIR 98-34001-003 -V00779- SPLICE, RH CONVAIR 98-34001-001 -V00779-	FROM  1  1  1  1	то	ASSEMB
22-63594-5 320562 22-63603-801 22-63602-801 320559 320562 22-63594-801 320562	PASSENGER COMPARTMENT STA 888 TO 1249 ELECTRICAL HARNESSES SEE 22-63003  HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 13 TO 14 LH  HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 13 TO 14 RH  SPLICE, RH CONVAIR 98-34001-001 -V00779- HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 13 TO 14 LH  HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 13 TO 14 RH  SPLICE, LH CONVAIR 98-34001-003 -V00779- SPLICE, RH CONVAIR 98-34001-001 -V00779-	1 1 1		1
22-63594-5 320562 22-63603-801 22-63602-801 320559 320562 22-63594-801 320562	TO PERMANENT SPLICE SEAT 13 TO 14 LH  HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 13 TO 14 RH  SPLICE, RH CONVAIR 98-34001-001 -V00779- HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 13 TO 14 LH  HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 13 TO 14 RH  SPLICE, LH CONVAIR 98-34001-003 -V00779-  SPLICE, RH CONVAIR 98-34001-001 -V00779-	1 1 1		1
320562 22-63603-801 22-63602-801 320559 320562 22-63594-801	TO PERMANENT SPLICE SEAT 13 TO 14 RH  - SPLICE, RH CONVAIR 98-34001-001 -V00779 HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 13 TO 14 LH  - HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 13 TO 14 RH  - SPLICE, LH CONVAIR 98-34001-003 -V00779 SPLICE, RH CONVAIR 98-34001-001 -V00779-	1 1		1
22-63603-801 22-63602-801 320559 320562 22-63594-801	- HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 13 TO 14 LH - HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 13 TO 14 RH - SPLICE, LH CONVAIR 98-34001-003 -V00779 SPLICE, RH CONVAIR 98-34001-001 -V00779-	i		
320559 320562 22-63594-801 320562	HARNESS ASSEMBLY, PASSENGER CALL SWITCH     TO PERMANENT SPLICE SEAT 13 TO 14 RH     SPLICE, LH CONVAIR 98-34001-003 -V00779-     SPLICE, RH CONVAIR 98-34001-001 -V00779-	1		
320562 22-63594-801 320562	SPLICE, RH CONVAIR 98-34001-001 -V00779-	1 1	1	
22-63594-801 320562		1 i		
	- HARNESS ASSEMBLY, READING LIGHTS			
22-63603-803	SPLICE, CONVAIR 98-34001-001 -V00779-	1		
00 44400 000	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 14 TO 15 LH	1		
22-63602-803	- HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 14 TO 16 RH	1		
320562 320562	- SPLICE, LH CONVAIR 98-34001-001 -V00779-			
22-63595-803	- HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 14 TO GROUND LH	i		
320562	- SPLICE, CONVAIR 98-34001-001 -V00779-	1 1		
22-63594-803	. HARNESS ASSEMBLY, READING LIGHTS	i		
22-63549	- HARNESS ASSEMBLY, PASSENGER CALL SWITCH	1		
22-63584	- HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 15 TO 22 RH	1		
22-63555	HARNESS ASSEMBLY, AISLE LIGHT TO STEWARDESS PANEL PERMANENT SPLICE	i		
36151 36157		1 '		370
36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	i	300	
22-63583	- HARNESS ASSEMBLY, STEWARDESS CALL SIGN AFT CABIN TO PERMANENT SPLICE			
320553	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			l 1
22-63622	. HARNESS ASSEMBLY, CABIN VALANCE LIGHT	i		2
22-63605	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH	1	İ	
22-63604	- HARNESS ASSEMBLY, PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 15 TO 16 RH	1		
36153 22-63542	- HARNESS ASSEMBLY, CABIN COVE LIGHT	1		
22-63543	. HARNESS ASSEMBLY, CABIN COVE LIGHT	1		
36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1 1		l t
36153 22-63605-1	. TERMINAL, CONVAIR 98-90805-003 -V00779 HARNESS ASSEMBLY, PASSENGER CALL SWITCH	1 1		
320562	- SPLICE, CONVAIR 98-34001-001 -V00779-	1		
22-63604-1	- HARNESS ASSEMBLY, PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 16 TO 18 RH	i		
The state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the s	320562 320562 320562 320574 22-63594-803 22-63584 36151 22-63555 36151 36157 36153 22-63583 320553 22-63605 22-63605 22-63604 36153 32-63542 22-63543 36151 36153	22-63595-803 - SPLICE, RH CONVAIR 98-34001-001 -V00779 HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 14 TO GROUND LH - SPLICE, CONVAIR 98-34001-001 -V00779 CONDUCTOR, CONVAIR 98-90805-010 -V00779 CONDUCTOR, CONVAIR 98-90805-010 -V00779 HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 15 TO 16 RH - HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 15 TO 22 RH - HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 15 TO 22 RH - TERMINAL, CONVAIR 98-90805-001 -V00779 HARNESS ASSEMBLY, AISLE LIGHT TO - STENARDESS PANEL PERMANENT SPLICE - TERMINAL, CONVAIR 98-90805-001 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 HARNESS ASSEMBLY, PASSENGER CALL SWITCH - PERMANENT SPLICE SEAT 15 TO 16 RH - TERMINAL, CONVAIR 98-90805-003 -V00779 HARNESS ASSEMBLY, CABIN COVE LIGHT - STA 1035 TO 1179 RH - TERMINAL, CONVAIR 98-90805-003 -V00779 HARNESS ASSEMBLY, CABIN COVE LIGHT - STA 1035 TO 1179 RH - TERMINAL, CONVAIR 98-90805-003 -V00779 HARNESS ASSEMBLY, CABIN COVE LIGHT - STA 1035 TO 1179 RH - TERMINAL, CONVAIR 98-90805-003 -V00779 HARNESS ASSEMBLY, PASSENGER CALL SWITCH - PERMANENT SPLICE SEAT 16 TO 17 LH - SPLICE, CONVAIR 98-90805-003 -V00779 HARNESS ASSEMBLY, PASSENGER CALL SWITCH - PERMANENT SPLICE SEAT 16 TO 17 LH - SPLICE, CONVAIR 98-34001-001 -V00779 HARNESS ASSEMBLY, PASSENGER CALL SWITCH - PERMANENT SPLICE SEAT 16 TO 17 LH - SPLICE, CONVAIR 98-34001-001 -V00779 HARNESS ASSEMBLY, PASSENGER CALL SWITCH - PERMANENT SPLICE SEAT 16 TO 17 LH - SPLICE, CONVAIR 98-34001-001 -V00779 HARNESS ASSEMBLY, PASSENGER CALL SWIT	22-63595-803  - SPLICE, RH CONVAIR 98-34001-001 -V00779 HARNESS ASSEMBLY, READING LIGHTS - TO PERMANENT SPLICE SEAT 14 TO GROUND LH - SPLICE, CONVAIR 98-34001-001 -V00779 CONDUCTOR, CONVAIR 98-94001-001 -V00779 CONDUCTOR, CONVAIR 98-90805-010 -V00779 CONDUCTOR, CONVAIR 98-90805-010 -V00779 CONDUCTOR, CONVAIR 98-90805-010 -V00779 CONDUCTOR, CONVAIR 98-90805-010 -V00779 HARNESS ASSEMBLY, PASSENGER CALL SWITCH - TO PERMANENT SPLICE SEAT 15 TO 16 RH - HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO - PERMANENT SPLICE SEAT 15 TO 22 LH - HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO - PERMANENT SPLICE SEAT 15 TO 22 RH - TERMINAL, CONVAIR 98-90805-001 -V00779 TERMINAL, CONVAIR 98-90805-001 -V00779 TERMINAL, CONVAIR 98-90805-001 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TO BALLAST TERMINAL STRIP H - HARNESS ASSEMBLY, CABIN VALANCE LIGHT - TO BALLAST TERMINAL STRIP H - HARNESS ASSEMBLY, PASSENGER CALL SWITCH - PERMANENT SPLICE SEAT 15 TO 16 RH - TERMINAL, CONVAIR 98-90805-003 -V00779 TARMINAL, CONVAIR 98-90805-003 -V00779 TARMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-001 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVA	22-63595-803  - SPLICE, RH CONVAIR 98-34001-001 -V00779- 1



FIGURE	PART NUMBER	NOMENCLATURE	USA		UNITS
INDEX NO.		1 2 3 4 5 6	FROM	TO	ASSEMBL
3 -303	22-63605-3	- HARNESS ASSEMBLY, PASSENGER CALL SWITCH	1		1
	22-63604-3	PERMANENT SPLICE SEAT 17 TO 18 LH - HARNESS ASSEMBLY, PASSENGER CALL SWITCH	1		1
-304	22-63605-5	PERMANENT SPLICE SEAT 17 TO 18 RH - HARNESS ASSEMBLY, PASSENGER CALL SWITCH	1		1
	22-63604-5	PERMANENT SPLICE SEAT 18 TO 19 LH - HARNESS ASSEMBLY, PASSENGER CALL SHITCH	1		1
-305	22-63605-801	PERMANENT SPLICE SEAT 18 TO 19 RH - HARNESS ASSEMBLY, PASSENGER CALL SWITCH	1		1
	22-63604-801	PERMANENT SPLICE SEAT 19 TO 20 LH - HARNESS ASSEMBLY, PASSENGER CALL SWITCH	1		1
-306	22-63605-803	PERMANENT SPLICE SEAT 19 TO 20 RH - HARNESS ASSEMBLY, PASSENGER CALL SWITCH	1		1
	22-63604-803	PERMANENT SPLICE SEAT 20 TO 21 LH - HARNESS ASSEMBLY, PASSENGER CALL SWITCH	1		1
-307	22-63605-805	PERMANENT SPLICE SEAT 20 TO 21 RH - HARNESS ASSEMBLY, PASSENGER CALL SWITCH	1		1
	22-63604-805	PERMANENT SPLICE SEAT 21 TO 22 LH  HARNESS ASSEMBLY, PASSENGER CALL SWITCH	1		1
	320562	PERMANENT SPLICE SEAT 21 TO 22 RH - SPLICE, SEAT 16 TO 17, 18 TO 19, AND	1		6
	320562	20 TO 21 LH CONVAIR 98-34001-001 . SPLICE, SEAT 21 TO 22 LH	1		3
	320562	CONVAIR 98-34001-001 -V00779 SPLICE, SEAT 16 TO 17, AND 19 TO 20 RH	1		3
	320562	CONVAIR 98-34001-001 -V00779 SPLICE, SEAT 17 TO 18, AND 20 TO 21 RH	1		6
	320562	CONVAIR 98-34001-001 -V00779- SPLICE, SEAT 21 TO 22 RH	1		1
	323288	CONVAIR 98-34001-001 -V00779- - PLUG, SEAT 21 TO 22 LH CONVAIR	1		1
	320570	96-89500-002 -V00779- CONDUCTOR, SEAT 21 TO 22 RH	1		2
	320559	CONVAIR 98-34001-002 -V00779- CONDUCTOR, SEAT 16 TO 18 RH	1		2
-308	22-63597	CONVAIR 98-34001-003 -V00779 HARNESS ASSEMBLY, READING LIGHTS PERMANENT	1		1
-309	22-63597-1	SPLICE SEAT 15 TO 16 LH - HARNESS ASSEMBLY, READING LIGHTS PERMANENT	1		1
	22-63596	SPLICE SEAT 16 TO 17 LH - HARNESS ASSEMBLY, READING LIGHTS PERMANENT	1		1
-310	22-63597-3	SPLICE SEAT 16 TO 17 RH - HARNESS ASSEMBLY, READING LIGHTS PERMANENT	1		1
	22-63596-1	SPLICE SEAT 17 TO 18 LH - HARNESS ASSEMBLY, READING LIGHTS PERMANENT	1		1
-311	22-63597-5	SPLICE SEAT 17 TO 18 RH - HARNESS ASSEMBLY, READING LIGHTS PERMANENT	1		1
	22-63596-3	SPLICE SEAT 18 TO 19 LH - HARNESS ASSEMBLY, READING LIGHTS PERMANENT	1		1
		SPLICE SEAT 18 TO 19 RH			



FIGURE AND P	ART NUMBER	NOMENCLATURE	USA	DE	UNITS
NDEX NO.		1 2 3 4 5 6	FROM	TO	ASSEMB
-312 22-		. HARNESS ASSEMBLY, READING LIGHTS PERMANENT	1		1
22-	-63596-5	SPLICE SEAT 19 TO 20 LH - HARNESS ASSEMBLY, READING LIGHTS PERMANENT	1		1
-313 22-	-63597-803	SPLICE SEAT 19 TO 20 RH  HARNESS ASSEMBLY, READING LIGHTS PERMANENT SPLICE SEAT 20 TO 21 LH	1		1
22-	-63596-801	. HARNESS ASSEMBLY, READING LIGHTS PERMANENT SPLICE SEAT 20 TO 21 RH	ן י		1
-313-1 22-	-63596-803	. HARNESS ASSEMBLY, READING LIGHTS PERMANENT SPLICE SEAT 21 TO 22 RH	1		1
320		SPLICE, SEAT 16 TO 17, 18 TO 19 AND 20 TO 21 LH CONVAIR 98-34001-001 -V00779-	1		16
320	0562	SPLICE: SEAT 16 TO 17: AND 19 TO 20 RH CONVAIR 98-34001-001 -V00779-	1		ः
320	0562	SPLICE: SEAT 17 TO 18: AND 20 TO 21 RH CONVAIR 98-34001-001 -V00/79-	1		
320	0562	- SPLICE: SEAT 21 TO 22 RH CONVAIR 98-34001-001 -v00779-	1		
323	3248	• PLUG, SEAT 16 TO 17 LH CONVAIR 98-89500-002 -V00779-	1		
320	0570	. SPLICE, SEAT 21 TO 22 RH CONVAIR 98-34001-002 -V00779-	1		
320	0574	. TERMINAL, SEAT 21 TO 22 RH CONVAIR 98-90805-010 -V00779-	1		
-314 22-	-ú3599	- HARNESS ASSEMBLY, READING LIGHT PERMANENT SPLICE SEAT 21 TO GROUND LH	1		
-315 22-		• HARNESS ASSEMBLY: READING LIGHT PERMANENT SPLICE SEAT 22 TO PERMANENT SPLICE LH	1		
320	0574	- TERMINAL, SEAT 21 TO GROUND LH CONVAIR 98-90805-010 -V00779-	1		
323	3288	- PLUG, SEAT 21 TO GROUND LH CONVAIR -V00779-	1		
320	0570	SPLICE, SEAT 21 TO GROUND LH CONVAIR -V00779-	1		'
	153	. TERMINAL, SEAT 22 TO PERMANENT SPLICE LH -V00779-	1		'
		. HARNESS ASSEMBLY, AFT STEWARDESS PANEL READING LIGHT TO PERMANENT SPLICE RH	1		
	-63528	. HARNESS ASSEMBLY. WINDOW LIGHTS STA 926 TO 1230 LH	1		
	-63529	. HARNESS ASSEMBLY, WINDOW LIGHTS STA 926 TO 1230 RH	1		
320	N562	- SPLICE, CONVAIR 98-34001-001 -V00779-	'		A
	**		12		
	R				
1					

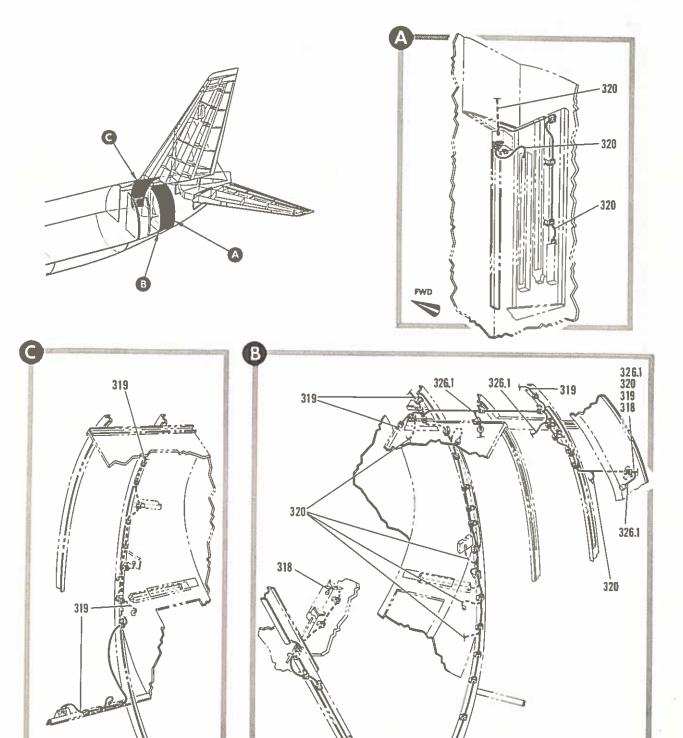


94-3 Page 14

22.04.94 03.005

AFT LAVATORY ABOVE FLOOR ELECTRICAL HARNESSES Apr. 28/61 FIGURE 4



FIGURE	PART NUMBER	NOMENCLATURE	USA CO		UNITS
AND INDEX NO.	PARI NUMBER		FROM	то	ASSEMBL
-318 -319	22-62622-1 36161 320569 320559 22-63510  PT06E8-45 36153 320559 36151 22-63511  PT06ER-45 320559 320562 323975 320553 36151	1 2 3 4 5 6  AFT LAVATORY ABOVE FLOOR ELECTRICAL HARNESSES SEE 22-63003  HARNESS ASSEMBLY, AFT LAVATORY WATER HEATER TO REAR SPAR PERMANENT SPLICE  TERMINAL, CONVAIR 98-90805-016 -V00779- TERMINAL, CONVAIR 98-90805-017 -V00779- SPLICE, CONVAIR 98-34001-003 -V00779- HARNESS ASSEMBLY, AFT LAVATORY CALL SWITCH TO PERMANENT SPLICE RH CONNECTOR, CONVAIR 98-90805-003 -V00779- SPLICE, CONVAIR 98-90805-001 -V00779- TERMINAL, CONVAIR 98-90805-001 -V00779- HARNESS ASSEMBLY, AFT LAVATORY DOOR SWITCH TO PERMANENT SPLICE LH CONNECTOR, CONVAIR 98-90805-006 -V77820- SPLICE, CONVAIR 98-34001-003 -V00779- SPLICE, CONVAIR 98-34001-003 -V00779- CONNECTOR, CONVAIR 98-34009-003 -V00779- TERMINAL, CONVAIR 98-90805-020 -V00779- TERMINAL, CONVAIR 98-90805-020 -V00779- TERMINAL, CONVAIR 98-90805-020 -V00779- TERMINAL, CONVAIR 98-90805-020 -V00779-	FROM  1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		1 1 2 5 1 1 1 5 5 9 16
		(1	1		T

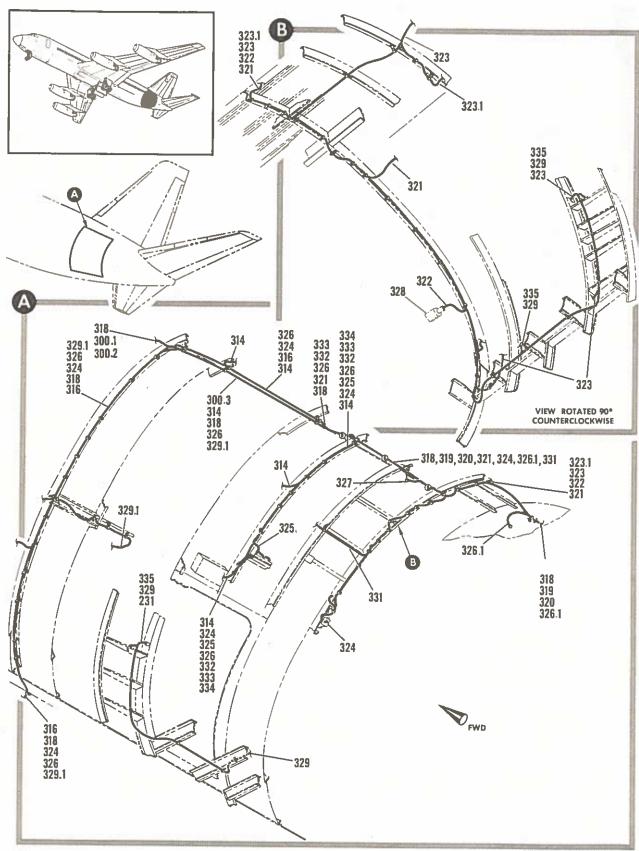

22.04 94 03.006A

94-3 Page 16

AFT ENTRANCE AREA ELECTRICAL HARNESSES FIGURE 5

Feb. 10/62 A-2



FIGURE		MONENCIATURE	CO	GE DE	UNITS
AND IDEX NO.	PART NUMBER	NOMENCLATURE	FROM	TO	ASSEMBL
		AFT ENTRANCE AREA ELECTRICAL HARNESSES			
-321	22-63516	SEE 22-63003 - HARNESS ASSEMBLY, AFT COAT CLOSET SWITCH	1		1
i	24157	TO PERMANENT SPLICE . TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		6
	36153 320559	. SPLICE, CONVAIR 98-34001-003 -V00779-	1		2
-322	22-63563-1	_ HARNESS ASSEMBLY, AFT LOADING RAMP	1		1
		DISCONNECT TO PERMANENT SPLICE	1		1
	320562	. CONDUCTOR, CONVAIR 98-34001-001 -V00779- . CONNECTOR, CONVAIR 92-40325-015 -V06840-	i		i
707	PT06E12-3S 22-63565	- HARNESS ASSEMBLY: AFT PASSENGER ENTRANCE	i		i
-323	22-03303	LIGHTS TO PERMANENT SPLICE			
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1		3
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1		5
	320559	- SPLICE, CONVAIR 98-34001-003 -V00779- HARNESS ASSEMBLY, PERMANENT SPLICE TO	i	10	1 1
-324	22-63503-1	BUFFET 3		'	,
	22-63503-807	HARNESS ASSEMBLY, PERMANENT SPLICE TO	11		ן י
	320574	TERMINAL, CONVAIR 98-90805-010 -V00779-	1	1	1 !
	PT00E16-8S	. TERMINAL, CONVAIR 98-50288-023 -V77820-	1		1
	CT00E24-22S	- CONNECTOR, CONVAIR 92-50293-013 -V71468- - TERMINAL, CONVAIR 98-90805-016 -V00779-	i		i
-326	36161 22-63509	HARNESS ASSEMBLY, STEWARDESS AFT SWITCH	i		i
-320	22-03307	PANEL TO PERMANENT SPLICE			
	320562	. SPLICE, CONVAIR 98-34001-001 -V00779-	1		14 2
	320570	. SPLICE, CONVAIR 98-34001-002 -V00779- . SPLICE, CONVAIR 98-34001-003 -V00779-	i		111
	320559   36151	- SPEICE, CONVAIR 98-54001-005 -400174-	i	1	8
	36153	TERMINAL CONVAIR 98-90805-003 -V00779-	i		7
	36157	TERMINAL. CONVAIR 98-90805-008 -V00779-	1		6 5
	36161	. TERMINAL, CONVAIR 98-90805-016 -V00779-	1		1 1
	320553	- TERMINAL, CONVAIR 98-90805-020 -V00779- - TERMINAL, CONVAIR 98-90806-011 -V09922-	;		i
	YAEV4C-L YBV6C-L9	. TERMINAL, CONVAIR 98-90813-005 -V09922-	i		i
-326.1	22-63551	. HARNESS ASSEMBLY, AFT LAVATORY WARNING SIGN	1		1
		TO PERMANENT SPLICE RH			1
			1		
			1		
				1	
			-		
				1	
			1		
			1	1	



FIGURE AND	PART NUMBER	NOMENCLATURE	USA	GE DE	UNITS
INDEX NO.		1 2 3 4 5 6	FROM	то	ASSEMBLY
5 -327	22-63513	- HARNESS ASSEMBLY. AFT EXIT SIGN TO			1
-328	22-63561-1	PERMANENT SPLICE  HARNESS ASSEMBLY, AFT LOADING RAMP	1		1
	PT00E12-3P	RECEPTACLE TO DISCONNECT  . CONNECTOR, CONVAIR 92-50288-012 -V06840-			1
	323039	. TERMINAL, CONVAIR 98-90817-002 -V00779-	i		2
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-329	22-62614-1	HARNESS ASSEMBLY, AFT CARGO DOOR SWITCH     TO PERMANENT SPLICE	1		1
-329.1	320559 22-63611	SPLICE, CONVAIR 98-34001-003 -V00779- - HARNESS ASSEMBLY, BUFFET 4 TO PERMANENT	1		1 1
	PT00E12-35	SPLICE CONNECTOR, CONVAIR 92-50288-021 -V06840-	1,		1
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	i		i
-331	22-63545	- HARNESS ASSEMBLY, AFT BUFFET LIGHTS TO PERMANENT SPLICE	1		ŀ
-332	36153 22-63582	• TERMINAL, CONVAIR 98-90805-003 -V00779- • HARNESS ASSEMBLY, AFT STEWARDESS PANEL	1		7
-332		WARNING SIGN TO PERMANENT SPLICE	'		
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-	1		8
	36153 320553	. TERMINAL, CONVAIR 98-90805-003 -V00779- . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		5 37
-333	22-63585	- HERNELS ASSEMBLY. AFT STEWARDESS BOX DIODES TO PERMANENT SPLICE	1		i
	320574	. TERMINAL, CONVAIR 98-90805-010 -V00779-	1 1		1
	36157	. TERMINAL, CONVAIR 98-90805-008 -V00779-			1
	36153 320559	- TERMINAL, CONVAIR 98-90805-003 -V00779- - SPLICE, CONVAIR 98-34001-003 -V00779-			10
-334	22-63571	. HARNESS ASSEMBLY, EMERGENCY LIGHT SWITCH TO	i		i
	320567	AFT STEWARDESS PANEL PERMANENT SPLICE TERMINAL, CONVAIR 98-90805-015 -V00779-			1
	36157	. TERMINAL, CONVAIR 98-90805-008 -V00779-	i		2
	320570	SPLICE, CONVAIR 98-34001-002 -V00779-	1 1		1
	320562	SPLICE, CONVAIR 98-34001-001 -V00779-	1 1		2
			'		
	<u> </u>	<u> </u>	1	<u> </u>	1




SECTION V


Chapter 94
ELECTRICAL HARNESSES

FUSELAGE NOSE UNDERFLOOR ELECTRICAL HARNESSES





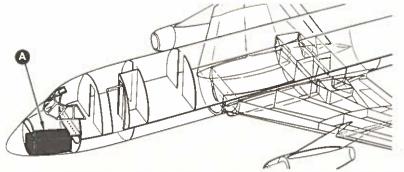


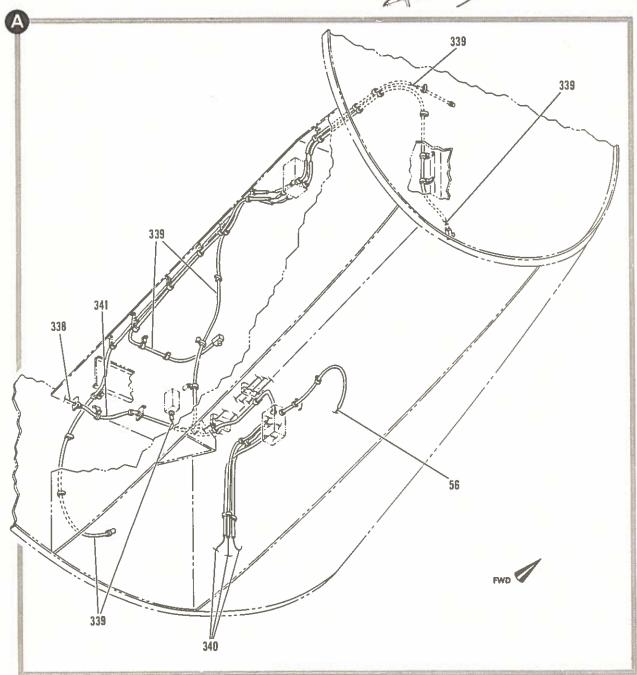

22.04.94.04.002

94-4 Page 2 NOSE LANDING GEAR ELECTRICAL HARNESSES Feb. 10/62
FIGURE 1 A-2

FIGURE	0.407.4044050	NOMENCI ATUBE	USA		UNITS
AND NDEX NO.	PART NUMBER	NOMENCLATURE	FROM	то	PER ASSEMBL
		1 2 3 4 5 6 NOSE LANDING GEAR ELECTRICAL HARNESSES	 		
	1	NUSE LANDING GEAR ELECTRICAL MARMESSES			
-338	22-61523-1	. HARNESS ASSEMBLY, NWW DISCONNECT A TO	1		1
		ANTISKID CONTROL BOX			_
	PT00E14-195	- CONNECTOR, CONVAIR 92-50288-008 -V06840-	1		!
-339	22-61524-801	. HARNESS ASSEMBLY, DISCONNECT PLUG C TO NWW SWITCH, MFR TO SPEC CONT 22-06477-1	;		1 1
	5EN13-6	-V74059-	'		'
	1EN64-6	SWITCH, MFR TO SPEC CONT 22-06479-1	1 1		1
	1.2	-V74059-			Ι.
	590001-7-0914	CONDUIT, CONVAIR 92-30000-003 -V00624-	1 1		1
	590001-7-0414	CONDUIT, CONVAIR 92-30000-002 -V00624- CONDUIT, CONVAIR 92-30000-019 -V00624-	;		i
	590001-117-0600 590001-29-0520	CONDUIT, CONVAIR 92-30000-014 -V00624-	i		i
	590001-29-0024	CONDUIT, CONVAIR 92-30000-015 -V00624-	i		l i
	PT06A8-4P	CONNECTOR, CONVAIR 92-40325-003 -V06840-	1		1
	PT06E20-39P	- CONNECTOR, CONVAIR 92-40325-030 -V06840-	1 1		1
71.0	71-184776-8-45	CONNECTOR. CONVAIR 92-40325-065 -V06840- . HARNESS ASSEMBLY. PEMANENT SPLICE BOX TO	1 1		
-340	22-61522	NOSE LANDING GEAR	'		'
	5EN13-6	SWITCH, LIMIT HER TO SPEC CONT	1 1		1
		22-06477-1 -V91929-	}		
	71-184776-45	PLUG, CONVAIR 92-40325-065 -V06840-	82		] ]
		CONDUIT. CONVAIR 92-30000-097 -V00624-	1		
	590001-11-1410 590001-29-0680	CONDUIT, CONVAIR 92-30000-032 -V00624- CONDUIT, CONVAIR 92-30000-033 -V00624-	l i		1 1
	AN3055	. CONNECTOR	i s		
	1EN64-6	SWITCH, LIMIT MFR TO SPEC CONT	i		1
		22-06479-1 -\V74059-	١.		Ι,
-341	22-61529-1	. HARNESS ASSEMBLY, DISCONNECT PLUG A TO NLG	1		1
	71-184779-14-	PERMANENT SPLICE . CONNECTOR, 19P CONVAIR 92-40325-073	1		1 1
	11-104717-14-	-V06840-	"		
	590001-49-0136	CONDUIT, CONVAIR 92-30000-035 -V00624-	1		1
					1
			ļ		1
			İ		
			21		
			-1		1
					Ĭ
					1
			1		
		<u> </u>			
					1
				1	

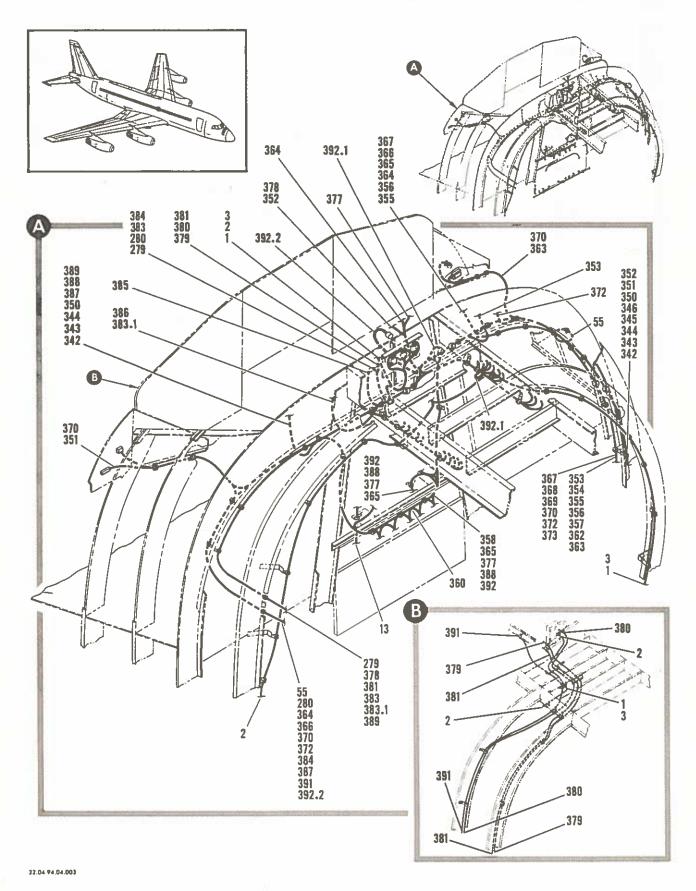

94-4 Page 4 FWD FLIGHT DECK ELECTRICAL HARNESSES FIGURE 2 Apr. 28/61 A

FIGURE	PART NUMBER	NOMENCLATURE		AGE DE	UNITS
NDEX NO.	TOTAL HOMBER	1 2 3 4 5 6	FROM	то	ASSEMB
-343 -344	22-61650-1 1406-515X 1406M90 22-61652-1 36153 1406-515Y	FWD FLIGHT DECK ELECTRICAL HARNESSES SEE 22-61003  HARNESS ASSEMBLY, COPILOT HORIZON DIRECTOR INDICATOR TO INSTRUMENT PANEL PERMANENT SPLICE  CONNECTOR, CONVAIR 92-40321-003 -V95238- HARNESS ASSEMBLY, COPILOT COURSE DEVIATION INDICATOR TO PERMANENT SPLICE  TERMINAL, CONVAIR 98-90805-003 -V00779- CONNECTOR, CONVAIR 92-40321-002 -V95238-	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		1 1 1 2 2 2
-345	1406HST 22-61730-1 DM9700-19SY 22-61773	. SHIELD, CONVAIR 98-03510-011 -V95238- HARNESS ASSEMBLY, AUTOPILOT TRIM INDICATOR TO PERMANENT SPLICE CONNECTOR, CONVAIR 92-40317-006 -V17419- HARNESS ASSEMBLY, ENGINEER PANEL LIGHTS TO PILOT WHITE PANEL LIGHTS	1 1		1
-349	22-61877 1406HST 1406-55SQ	. HARNESS ASSEMBLY, PILOT COMPASS INDICATOR TO PERMANENT SPLICE . SHIELD, CONVAIR 98-03510-011 -V95238 CONNECTOR, CONVAIR 92-40321-004 -V95238-			1
			12.		
	:				
					II.
			ļ		

FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNITS
NDEX NO.		1 2 3 4 5 6	FROM	TO	ASSEMB
-350	22-61776-1	. HARNESS ASSEMBLY. COPILOT MACH INDICATOR TO			1
330	155 01110	PERMANENT SPLICE	'		] '
	DM9700-75	CONNECTOR. CONVAIR 92-40317-001 -V17419-	11		1 .
	DM9700-75Y	CONNECTOR, CONVAIR 92-40317-010 -V17419-	1 1		
	DM9700-19S	CONNECTOR. CONVAIR 92-40317-005 -V17419-	i		1 :
-351	22-61784	. HARNESS ASSEMBLY, COPILOT STATIC SOURCE	i		l -
		VALVE TO PERMANENT SPLICE			
	PT06E12-10S	CONNECTOR, CONVAIR 92-40325-002 -V06840-	1 1 1		
-352	22-61854-1:	. HARNESS ASSEMBLY. STATIC AIR TEMPERATURE	1 1		
		INDICATOR TO PERMANENT SPLICE			
-354	22-61638	. HARNESS ASSENBLY, PERMANENT SPLICE TO	1 1		
	*	INSTRUMENT PANEL PERMANENT SPLICE STA 250			
-355	22-61647-1	- HARNESS ASSEMBLY, HORIZON DIRECTOR	1		
		INDICATOR TO PERMANENT SPLICE			
	1406-51SX	CONNECTOR, CONVAIR 92-40321-003 -V95238	1 1		
	1406H90	- SHIELD, CONVAIR 98-03512-001 -V95238-	1 1		
-357	22-61651-1	- HARNESS ASSEMBLY, PILOT COURSE DEVIATION	1 1		
		INDICATOR TO PERMANENT SPLICE			
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		1 .
	1406-51SY	CONNECTOR: CONVAIR 92-40321-002 -V95238-	1 1		
	1406HST	SHIELD, CONVAIR 98-03510-011 -V95238-	1		
	320580	- TERMINAL, CONVAIR 98-90814-001 -V00779-	1		2
-358	22-61621-1	- HARNESS ASSEMBLY. EXTERNAL POWER JUNCTION	1		
		BOX TO PERMANANT SPLICE			
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1 1		:
	36161	- TERMINAL, CONVAIR 98-90805-016 -V00779-	1		1 4
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	1		10
-360	22-61871	- HARNESS ASSEMBLY, FIRE CONTROL RELAY PANEL	1		
		TO FLASHER 1			
-361	22-61770-1	. HARNESS ASSEMBLY. COPILOT PANEL LIGHTS TO	1		
		ENGINE PANEL WHITE LIGHTS			
	36151	- TERMINAL, CONVAIR 98-90805-001 -V00779-	1		20
	320559	CONDUCTOR. CONVAIR 98-34001-003 -V00779-	1 1 1		:
	320562	CONDUCTOR, CONVAIR 98-34001-001 -V00779	1		1 :
			-{		
					1
					1
					1


FIGURE			USA		UNITS
AND INDEX NO.	PART NUMBER	NOMENCLATURE	FROM	то	PER ASSEMB
2 -362	22-61781-1	1 2 3 4 5 6 - HARNESS ASSEMBLY, TRUE AIRSPEED INDICATOR	1		1
	DM9700-19S	TO PERMANENT SPLICE  CONNECTOR, CONVAIR 92-40317-005 -V17419-	1 1		1
-363	22-61783	- HARNESS ASSEMBLY, PILOT STATIC SOURCE VALVE TO PERMANENT SPLICE	1		1
-364	22-61557-1	<ul> <li>HARNESS ASSEMBLY; CENTER INSTRUMENT PANEL DISCONNECT TO DIMMING RELAY BOX</li> </ul>	1		
	YPP20H1	CONTACT, CONVAIR 92-63903-004 -V02198-	1		3
-365	36153 22-61631-1	. TERMINAL, CONVAIR 98-90805-003 -V00779- - HARNESS ASSEMBLY, PILOT RADIO-MAGNETIC	i		'
	DM9700-37S	INDICATOR TO PERMANENT SPLICE . CONNECTOR, CONVAIR 92-40317-003 -V17419-	1		
	320580 36157	- TERMINAL, CONVAIR 98-90814-001 -V00779- - TERMINAL, CONVAIR 98-90805-008 -V00779-	1 1		1 1
-366	22-61797-1	- HARNESS ASSEMBLY, PILOT TURN AND BANK INDICATOR TO PERMANENT SPLICE	1		
	EX06-1455S EX06-105L3S	. CONNECTOR, CONVAIR 92-40332-005 -V71468-	1 1		
	024048-0000	- CONTACT, CONVAIR 92-63901-012 -V71468-	;		
		=			}
		01			
		8			
		15.			
	90		ŀ		
		**			
	35				5
	5 10				
	150				
				90	
				I	1

FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNITS
INDEX NO.		1 2 3 4 5 6	FROM	то	ASSEMBLY
2 -370	22-61722-1	- HARNESS ASSEMBLY, OUTBD AC PILOT ESSENTIAL CIRCUIT BREAKER PANEL PERMANENT SPLICE TO PERMANENT SPLICE	1		1
-371	320559 22-61772-1	CONDUCTOR, CONVAIR 98-34001-003 -V00779- - HARNESS ASSEMBLY, INSTRUMENT PANEL OUTBD LH DISCONNECT TO PERMANENT SPLICE	1 1		5 1
	XPP14H XPP20H 36153 320567 36151	. CONTACT, CONVAIR 92-63903-001 -V02198- . CONTACT, CONVAIR 92-63903-004 -V02198- . TERMINAL, CONVAIR 98-90805-003 -V00779- . TERMINAL, CONVAIR 98-90805-001 -V00779- . TERMINAL. CONVAIR 98- 90805-001 -V00779-	1 1 1		6 39 6 1 8
-373	320570 22-61775-1	CONDUCTOR, CONVAIR 98-34001-002 -V00779 HARNESS ASSEMBLY, PILOT MACH INDICATOR TO PERMANENT SPLICE	1		1
-374	DM9700-7S DM9700-7SY 22-61726-1	. CONNECTOR, CONVAIR 92-40317-001 -V17419- . CONNECTOR, CONVAIR 92-40317-010 -V17419- - HARNESS ASSEMBLY, COMPUTER AMPLIFIER TO PERMANANT SPLICE	1 1		1 1
-375	36151 DPD78-33518 22-61562-1	TERMINAL, CONVAIR 98-90805-001 -V00779- CONNECTOR, CONVAIR 92-50285-014 -V71468- HARNESS ASSEMBLY, RH INSTRUMENT PANEL TO DISCONNECT	1		8
-376	YPS14H2 36151 36157 22-61572-1	. CONTACT, CONVAIR 92-63903-003 -V02198 TERMINAL, CONVAIR 98-90805-001 -V00779 TERMINAL, CONVAIR 98-90805-008 -V00779 HARNESS ASSEMBLY, LIGHT DIMMING RELAY BOX 1	1 1		3 9 1
	PT06622-558 36153 320559	TO PERMANENT SPLICE CONNECTOR, CONVAIR 92-40325-010 -V06840 TERMINAL, CONVAIR 98-90805-003 -V00779 CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1 1		1 1 13
/6					
3,6					
:					



	FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNIT
23		17th Homber		FROM	то	ASSEME
VPP20H1   CONTACT, CONVAIR 92-6393-004 -V02198-   1   30580   CONTACT, CONVAIR 92-6393-004 -V02198-   1   30580   CONTACT, CONVAIR 92-6393-001 -V020779-   1   2   2 - 61563-1   CONTACT, CONVAIR 92-60312-001 -V00779-   1   2   2 - 61563-1   CONTACT, CONVAIR 92-60325-011 -V06840-   1   2   2   2   2   2   2   2   2   2						
YPP20H1	-377	22-61671-1		'		
320580   . TERMINAL, CONVAIR 90-90814-001 -V00779-   1		Wanaau I				١,
-378						1
PANEL TO FREE AIR TEMPERATURE BULB  PTOGE 18-19S EXO6-10SL4S Q2008-0000 DM9700-7S Q008-0000 DM9700-7S DM9700-7S Q2-61904-1	370					1
PTOGETH-19S   CONNECTOR, CONVAIR 92-40325-011 - V00680-1	-378	22-61563-1		'		
EXGG-10SL4S   CONNECTOR, CONVAIR 92-40332-002 - V71468-   1						
O2W048-0000   ODW700-75   CONNECTOR, CONVAIR 92-63901-012 -V71468-   ODW700-75   CONNECTOR, CONVAIR 92-40317-001 -V17419-   ODW700-75   CONNECTOR, CONVAIR 92-40317-001 -V17419-   ODW700-75   CONNECTOR, CONVAIR 92-40317-005 -V17419-   ODW700-75   ODW700-195   ODW700-75   ODW700-195   ODW700-75   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700-195   ODW700				, ,		
DM9700-75						
-379   22-61904-1						
-379   22-61904-1						
Consider   Disconnect to permanent Splice				1 '		
1	-379	22-61904-1		1	10	
DISCONNECT TO PERMANENT SPLICE   CONNECTOR, CONVAIR 92-50288-008 - Y06840-   1   10   10   10   10   10   10   1		ŀ				
PTODE 14-19S   - CONNECTOR, CONVAIR 92-50288-008 - V06840-   1   10   10   10   10   10   10   1		22-61904-5	. HARNESS ASSEMBLY. FIRE CONTROL PANEL ENGINE	11		
-380 22-61906			1 DISCONNECT TO PERMANENT SPLICE			
DISCONNECT ENGINE 3 TO PERMANENT SPLICE		PT00E14-19S	CONNECTOR: CONVAIR 92-50288-008 -V06840-	1 1		
December   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Convert   Con	-380	22-61906	. HARNESS ASSEMBLY, FIRE CONTROL PANEL	1	10	
3 DISCONNECT TO PERMANENT SPLICE			DISCONNECT ENGINE 3 TO PERMANENT SPLICE			
PT00E14-19S   3 DISCONNECT TO PERMANENT SPLICE   1   10   1   10   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   11   10   10   11   10   10   10   11   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10   10		22-61906-1	- HARNESS ASSEMBLY. FIRE CONTROL PANEL ENGINE	11		
PTODE						
-381 22-61587		PTOOF IM-105		1		
LH DISCONNECT TO PERMANENT SPLICE	_381				10	
ARNESS ASSEMBLY, FIRE CONTROL PANEL LH DISCONNECT TO PERMANENT SPLICE   CONNECTOR, CONVAIR 92-50288-008 -V06840-   1	-201	22-01301		'	10	
DISCONNECT TO PERMANENT SPLICE   CONNECTOR, CONVAIR 92-50288-008 -V06840-   1   CONNECTOR, CONVAIR 92-50288-008 -V06840-   1   CONNECTOR, CONVAIR 92-50288-008 -V06840-   1   CONDUCTOR, CONVAIR 98-90805-003 -V00779-   1   CONDUCTOR, CONVAIR 98-90805-003 -V00779-   1   CONDUCTOR, CONVAIR 98-34001-003 -V00779-   1   CONDUCTOR, CONVAIR 98-34001-003 -V00779-   1   CONDUCTOR, CONVAIR 98-34001-003 -V00779-   1   CONDUCTOR, CONVAIR 98-34001-003 -V00779-   1   CONDUCTOR, CONVAIR 98-34001-003 -V00779-   1   CONNECTOR, CONVAIR 98-34001-003 -V006840-   1   CONNECTOR, CONVAIR 98-40325-002 -V06840-   1   CONNECTOR, CONVAIR 98-40325-008 -V06840-   1   CONNECTOR, CONVAIR 98-40325-008 -V06840-   1   CONNECTOR, CONVAIR 98-40058-013 -V02660-   1   CONNECTOR, CONVAIR 98-40058-013 -V02660-   1   CONNECTOR, CONVAIR 98-40058-013 -V02660-   1   CONNECTOR, CONVAIR 98-40058-013 -V02660-   1   CONNECTOR, CONVAIR 98-40058-013 -V02660-   1   CONNECTOR, CONVAIR 98-40058-013 -V02660-   1   CONNECTOR, CONVAIR 98-40058-013 -V02660-   1   CONNECTOR, CONVAIR 98-40058-013 -V02660-   1   CONNECTOR, CONVAIR 98-40058-013 -V02660-   1   CONNECTOR, CONVAIR 98-40058-013 -V02660-   1   CONNECTOR, CONVAIR 98-40058-013 -V02660-   1   CONNECTOR, CONVAIR 98-40058-013 -V02660-   1   CONNECTOR, CONVAIR 98-40058-013 -V02660-   1   CONNECTOR, CONVAIR 98-40058-013 -V02660-   1   CONNECTOR, CONVAIR 98-40058-013 -V0279-   1   CONNECTOR, CONVAIR 98-40058-003 -V00779-   1   CONNECTOR, CONVAIR 98-40058-003 -V00779-   1   CONNECTOR, CONVAIR 98-40058-003 -V00779-   1   CONNECTOR, CONVAIR 98-40058-003 -V00779-   1   CONNECTOR, CONVAIR 98-40058-003 -V00779-   1   CONNECTOR, CONVAIR 98-40058-003 -V00779-   1   CONNECTOR, CONVAIR 98-40058-003 -V00779-   1   CONNECTOR, CONVAIR 98-40058-003 -V00779-   1   CONNECTOR, CONVAIR 98-40058-003 -V00779-   1   CONTACT, CONVAIR 98-40058-003 -V00779-   1   CONTACT, CONVAIR 98-40058-003 -V00779-   1   CONTACT, CONVAIR 98-40058-003 -V00779-   1   CONTACT, CONVAIR 98-40058-003 -V00779-   1   CONTACT, CONVAIR 98-40058-003 -V00779-   1		22-41597-1		111		
PT00E1W-19S   CONNECTOR, CONVAIR 92-50288-008 -V06840-   1		22-01301-1	Fig. 1	''		
-382 22-61897		DECOCAL TOO		,		1
PERMANENT SPLICE	300					
36153 320559 - CONDUCTOR, CONVAIR 98-90805-003 -V00779- 1 -383 22-61591-1 - HARNESS ASSEMBLY, EXMAUST TEMPERATURE 1 1 ND10610-6S - CONNECTOR, CONVAIR 92-40325-008 -V06840- 1 1 ND706210-100 - CONNECTOR, CONVAIR 92-40325-008 -V06840- 1 1 ND706210-6S - CONNECTOR, CONVAIR 92-40317-001 -V17419- 1 1 ND5-10-1009 - CONNECTOR, CONVAIR 92-40317-001 -V17419- 1 1 ND5-10-1009 - CONNECTOR, CONVAIR 92-40058-013 -V02660- 1 1 ND106210-6S - CONNECTOR, CONVAIR 92-40058-013 -V02660- 1 1 ND106210-6S - CONNECTOR, CONVAIR 92-40058-013 -V02660- 1 1 ND106210-6S - CONNECTOR, CONVAIR 92-40058-011 -V02660- 1 1 ND106210-6S - CONNECTOR, CONVAIR 92-40058-013 -V02660- 1 1 ND106210-6S - CONNECTOR, CONVAIR 92-40058-013 -V02660- 1 1 ND106210-6S - CONNECTOR, CONVAIR 92-40058-013 -V02660- 1 1 ND106210-6S - CONNECTOR, CONVAIR 92-40325-002 -V06840- 1 1 ND106210-6S - CONNECTOR, CONVAIR 92-40325-001 -V00779- 1 1 ND106210-0S - CONNECTOR, CONVAIR 92-40325-001 -V00779- 1 1 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 1 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 1 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 1 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 2 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 2 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 2 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 2 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 2 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 2 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 2 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 2 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 2 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 2 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 3 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 3 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 3 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 3 ND106210-0S - CONNECTOR, CONVAIR 98-90805-003 -V00779- 1 3 ND106210-0S - CONNECTOR - CONVAIR 98-908	-382	22-61897				
320559 - CONDUCTOR, CONVAIR 98-34001-003 -V00779- 1  -383 22-61591-1						
-383 22-61591-1				1 ' 1		
INDICATOR ENGINE 1 TO PERMANENT SPLICE  AN5548-1 AN5548-2 PT06E12-10S PT06E10-6S DM9700-7S CONNECTOR, CONVAIR 92-40325-002 -V06840- 1 165-10-1009 -383.1 -384 22-61594-1 -384 22-61594-1 -384 -385.1 -385 -385 -385 -385 -385 -385 -385 -385						
AN5548-1 AN5548-2 PT06E12-10S PT06E10-6S DM9700-7S 165-10-1009 -383.1  -384 22-61909-1  -384 22-61594-1  AN5548-2  PT06E12-10S PT06E10-6S DM9700-7S 105-10-1009 -384 22-61594-1  -384 22-61594-1  -384 22-61594-1  -385 -385 -385 -385 -385 -385 -385 -38	-383	22-61591-1	- HARNESS ASSEMBLY, EXHAUST TEMPERATURE	1		
AN5548-2 PT06E12-10S PT06E10-6S DM9700-7S			INDICATOR ENGINE 1 TO PERMANENT SPLICE			
AN5548-2 PT06E12-10S PT06E10-6S DM9700-7S 165-10-1009 -383.1 -383.1 -384 -2-61594-1 -384 -2-61594-1 -385 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-2 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858-3 -3858		AN5548-1	TERMINAL	1		
PT06E12-10S PT06E10-6S DM9700-7S 165-10-1009 -383.1  -383.1  -383.1  -383.1  -383.1  -383.1  -383.1  -383.1  -383.1  -383.1  -383.1  -383.1  -383.1  -383.1  -383.1  -383.1  -384  -384  -384  -385  -384  -385  -384  -385  -384  -385  -384  -385  -384  -385  -384  -385  -384  -385  -384  -385  -384  -385  -384  -385  -385  -384  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -385  -		1		i		
PT06E10-6S   DM9700-7S   CONNECTOR, CONVAIR 92-40325-008 -V06840-   1   1   1   1   1   1   1   1   1				i i		
DM9700-7S 165-10-1009 -383.1 -383.1 -383.1 -384 -384 -384 -384 -385 -384 -385 -384 -385 -384 -385 -384 -385 -384 -385 -384 -385 -384 -385 -384 -385 -385 -385 -385 -385 -385 -385 -385				i		
-383.1 2-61909-1						
-383.1 22-61909-1						
TO PERMANENT SPLICE  165-10	707 1					
-384   22-61594-1   CONNECTOR, CONVAIR 92-40058-011 -V02660-   1   1   1   1   1   1   1   1   1	-383.1	22-01707-1		'		
-384 22-61594-1				_   _ 1		
INDICATOR ENGINE 4 TO PERMANENT SPLICE  165-10-1009 PT06E12-10S PT06E12-10S PT06E10-6S AN5548-1 AN5548-2 36153						
165-10-1009	-384	22-61594-1	- HARNESS ASSEMBLY, EXHAUST TEMPERATURE	1		
PT06E12-10S PT06E10-6S AN5548-1 AN5548-2 36153 36151 DM9700-7S -385 22-61558-1 -385 36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36153 -36			INDICATOR ENGINE 4 TO PERMANENT SPLICE			
PT06E10-6S CONNECTOR, CONVAIR 92-40325-008 -V06B40- 1 AN5548-1 TERMINAL . 1 AN5548-2 TERMINAL . 1 36153 TERMINAL, CONVAIR 98-90805-003 -V00779- 1 DM9700-7S CONNECTOR, CONVAIR 92-40317-001 -V17419- 1 -385 22-61558-1 . HARNESS ASSEMBLY, RH INSTRUMENT PANEL 1 DISCONNECT TO PERMANENT SPLICE . TERMINAL, CONVAIR 98-90805-003 -V00779- 1 320580 . TERMINAL, CONVAIR 98-90814-001 -V00779- 1 AN3116-2 . CONNECTOR, CONVAIR 92-40139-001 1 YPP20H1 . CONTACT, CONVAIR 92-63903-004 -V02198- 1		165-10-1009	CONNECTOR, CONVAIR 92-40058-013 -V02660-	1 1		
PT06E10-6S AN5548-1 AN5548-2 . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TERMINAL . TE		PT06E12-10S		1		Į.
AN5548-1  AN5548-2  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL  . TERMINAL				1 1		1
AN5548-2 36153 36151				( i )		
36153 36151 . TERMINAL, CONVAIR 98-90805-003 -V00779- DM9700-7S -385 22-61558-1 -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-61558-1  -385 22-615			- TERMINAL	- 1 i l		
36151 . TERMINAL, CONVAIR 98-90805-001 -V00779- 1 DM9700-7S . CONNECTOR, CONVAIR 92-40317-001 -V17419- 1 -385 22-61558-1 . HARNESS ASSEMBLY, RH INSTRUMENT PANEL 1 DISCONNECT TO PERMANENT SPLICE 2 36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1 320580 . TERMINAL, CONVAIR 98-90814-001 -V00779- 1 AN3116-2 . CONNECTOR, CONVAIR 92-40139-001 1 YPP20H1 . CONTACT, CONVAIR 92-63903-004 -V02198- 1			TERMINAL - CONVAIR 98-90805-003 -V00779-	i		
DM9700-7S CONNECTOR, CONVAIR 92-40317-001 -V17419- 1 -385 22-61558-1 . HARNESS ASSEMBLY, RH INSTRUMENT PANEL 1 DISCONNECT TO PERMANENT SPLICE 36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1 320580 . TERMINAL, CONVAIR 98-90814-001 -V00779- 1 AN3116-2 . CONNECTOR, CONVAIR 92-40139-001 1 YPP20H1 . CONVAIR 92-63903-004 -V02198- 1				i		
-385 22-61558-1						
DISCONNECT TO PERMANENT SPLICE  36153	_205					
36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1 320580 . TERMINAL, CONVAIR 98-90814-001 -V00779- 1 AN3116-2 . CONVAIR 92-40139-001 1 YPP20H1 . CONVAIR 92-63903-004 -V02198- 1	-282	22-01338-1		'		
320580 . TERMINAL, CONVAIR 98-90814-001 -V00779- 1 AN3116-2 . CONNECTOR, CONVAIR 92-40139-001 1 YPP20H1 . CONTACT, CONVAIR 92-63903-004 -V02198- 1						
AN3116-2 . CONNECTOR, CONVAIR 92-40139-001 1 PPP20H1 . CONTACT, CONVAIR 92-63903-004 -V02198- 1				1 '		
YPP20H1 CONTACT, CONVAIR 92-63903-004 -V02198- 1						1
The second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of the second of th				1 '		
YPP14H CONTACT, CONVAIR 92-63903-001 -V02198-		YPP20H1	CONTACT, CONVAIR 92-63903-004 -V02198-	1		1
		YPP14H	CONTACT, CONVAIR 92-63903-001 -V02198-	1		
				[		
				1		1
				1		
					[	I
						1
						1
				3		1


FIGURE AND	PART NUMBER	NOMENCLATURE		GE DE	UNITS
DEX NO.			FROM	то	ASSEMB
-386	22-61771	1 2 3 4 5 6 - HARNESS ASSEMBLY, PILOT PANEL LIGHTS TO	1		
-500	22-01711	CONSOLE RED LIGHT CONTROL	'		'
-387	22-61599-1	. HARNESS ASSEMBLY, RH INSTRUMENT PANEL TO	1		
		PERMANENT SPLICE			
	DM9700-7S	CONTACT, CONVAIR 92-40317-001 -V17419-	1 !		
-388	36153  22-61630-1	- TERMINAL, CONVAIR 98-90805-003 -V00779 HARNESS ASSEMBLY, COPILOT RADIO-MAGNETIC	1		23
500	22 01030 1	INDICATOR TO PERMANENT SPLICE			
	36157	TERMINAL, CONVAIR 98-90805-008 -V00779-	1		
	320580	TERMINAL, CONVAIR 98-90819-001 -V00779-	1		1:
700	DM9700-375	CONNECTOR, CONVAIR 92-40317-003 -V17419-	1 1		
-389	22-61796	- HARNESS ASSEMBLY, COPILOT TURN AND BANK INDICATOR TO PERMANENT SPLICE	1		
	024048-0000	- CONTACT, CONVAIR 92-63901-012 -V71468-	1		3.4
	EX06-10SL3S	- CONNECTOR, CONVAIR 92-40332-001 -V71468-	l i		7
-390	22-61876	- HARNESS ASSEMBLY, COPILOT COMPASS INDICATOR	1		
	700540	TO PERMANENT SPLICE			
	320562 36151	CONDUCTOR, CONVAIR 98-34001-001 -V00779-			
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-			:
	36157	. TERMINAL, CONVAIR 98-90H05-008 -V00779-	;		
	320580	- TERMINAL, CONVAIR 98-90814-001 -V00779-	_ i		1 .
-391	22-61589	- HARNESS ASSEMBLY, FIRE CONTROL PANEL	1	10	
	22-61589-1	RH DISCONNECT TO PERMANENT SPLICE  HARNESS ASSEMBLY. FIRE CONTROL PANEL RH	11		
	22 01307	DISCONNECT TO PERMANENT SPLICE	''		
	PT00E14-19S	CONNECTOR: CONVAIR 92-50288-008 -V06840-	1 1		
3.0.0	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		:
-392	22-61702-1	HARNESS ASSEMBLY, INSTRUMENT PANEL JUNCTION	1 1		
	320580	BOX TO PERMANENT SPLICE - TERMINAL, CONVAIR 98-90814-001 -V00779-	1 1		
-392.1	22-61908-1	. HARNESS ASSEMBLY, WINDSHIELD RAIN CLEARING			
		VALVE TO THERMO SWITCH			
	EX06-10SL4S	PLUG, CONVAIR 92-40332-002 -V71468-	1 1		
-592-2	22-61934	- HARNESS ASSEMBLY, ALTIMETER THUMPER CONTROL	1		1
	67-06E14-9S	TO PERMANENT SPLICE - PLUG: CONVAIR 92-40058-026 -V02660-	,		
	0. 00117 /3		'		





ELECTRICAL HARNESSES FUSELAGE NOSE




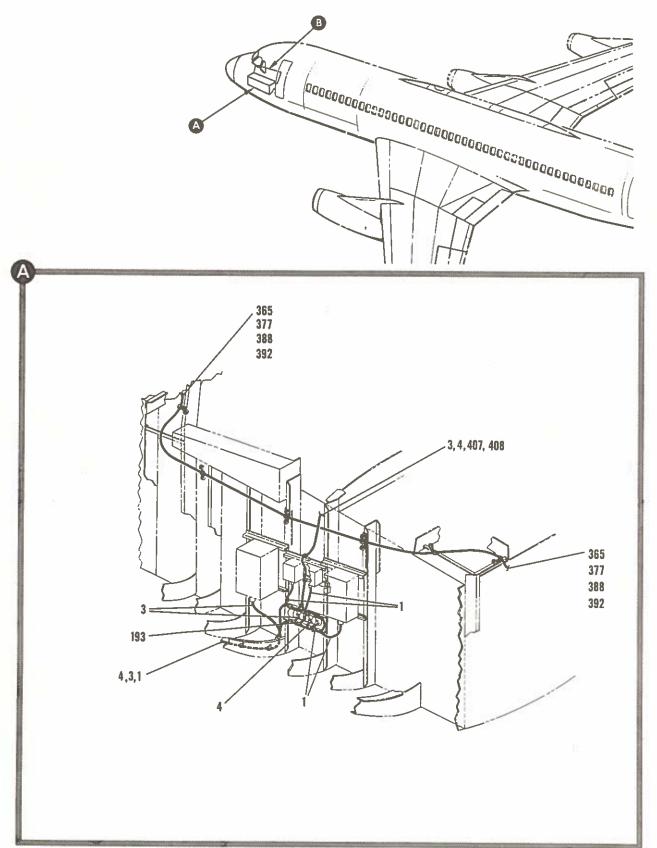


22.04.94.04.005-1

94-4 Page 12 NWW RH ELECTRICAL HARNESSES FIGURE 3 (SHEET 1 OF 3)

Apr. 28/61

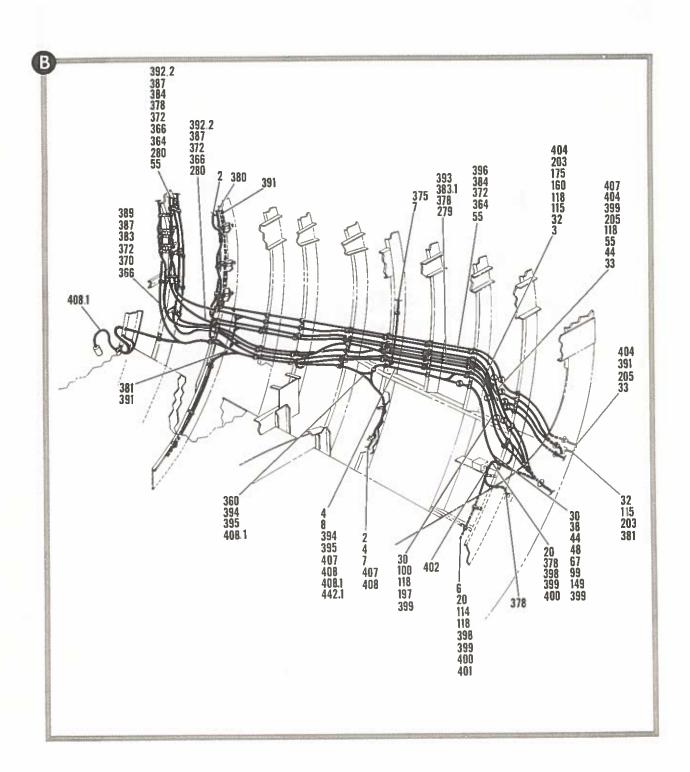

#### ILLUSTRATED PARTS CATALOG

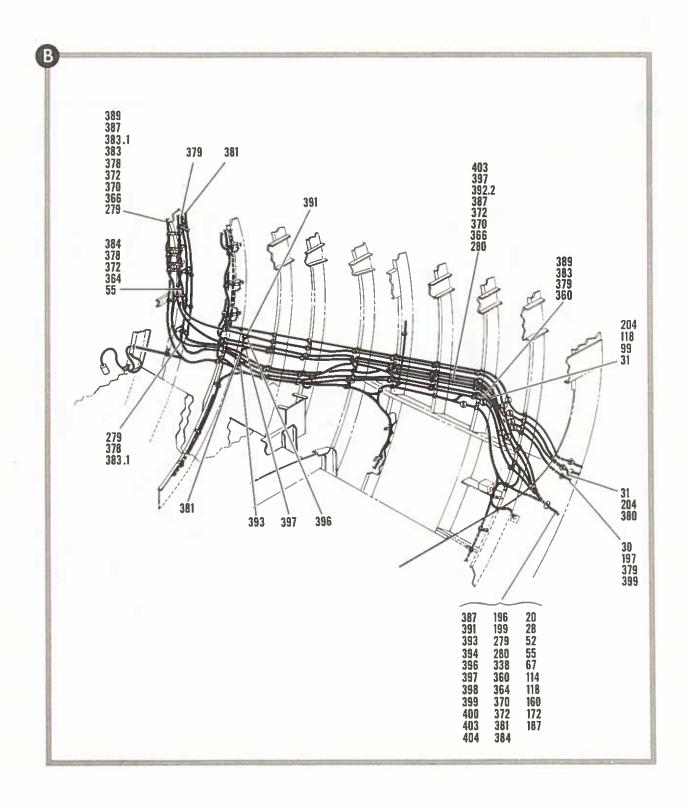

22.04.94.04.005-3


94-4 Page 14 NWW RH ELECTRICAL HARNESSES FIGURE 3 (SHEET 3 OF 3)

Apr. 28/61

PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	FROM	то	PER
00 (1077	1 2 3 4 3 0		10	ASSEMBL
00 /1077	NWW RH ELECTRICAL HARNESSES SEE 22-61003			
22-61873	- HARNESS ASSEMBLY. FIRE CONTROL RELAY PANEL TO FLASHER 2	1		1
22-61531-1	- HARNESS ASSEMBLY; NWW DISCONNECT C TO DIMMING RELAY BOX	1		1
PT00E20-39S 22-61774	. CONNECTOR, CONVAIR 92-50288-013 -V06840- . HARNESS ASSEMBLY, FIRE AND OVERHEAT CONTROL	1		1
PT06E14-19S 22-61874	CONNECTOR, CONVAIR 92-40325-011 -V06840- . HARNESS ASSEMBLY, FIRE CONTROL RELAY PANEL	1 1		2
22-61872	. HARNESS ASSEMBLY. FIRE CONTROL RELAY PANEL	1		1
22-61503	. HARNESS ASSEMBLY, PEDESTAL PERMANENT SPLICE	1		1
22-61659	. HARNESS ASSEMBLY. FIRE CONTROL PANEL	1	10	1
22-61659-1	. HARNESS ASSEMBLY. FIRE CONTROL PANEL	11		1
320559	PERMANENT SPLICE TO DIMMING RELAY BOX 1  . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		6
320562 22-6189h	CONDUCTOR, CONVAIR 98-34001-001 -V00779-			1
	TO RELAY RACK			1
	FLIGHT ENGINEER STATION			1
	CONTROL BOX TO PERMANENT SPLICE			'i
22-61588	. HARNESS ASSEMBLY, FIRE CONTROL PANEL TO	i		i
36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	;		1
		i		l i
323975	CONNECTOR, CONVAIR 98-34009-003 -V06840-		10	1
	PERMANENT SPLICE TO DIMMING RELAY BOX 4	111		
	PERMANENT SPLICE TO DIMMING RELAY BOX 4			1
320559	CONDUCTOR: CONVAIR 98-34001-003 -V00779-	i		3
	FLIGHT ENGINEER STATION			1
320570	CONDUCTOR, CONVAIR 98-34001-002 -V00779-		ļ	19
320559 22-62519-1	. HARNESS ASSEMBLY, FEED THRU PANEL H TO	;		17
320559	CONNECTOR, CONVAIR, 98-34001-003 -V00779-	1 !		11
	PERMANENT SPLICE TO NOSE PANEL LH	"	_	1
22-61867-1	- HARNESS ASSEMBLY, CURCUIT BREAKER PANEL PERMANENT SPLICE TO NOSE PANEL LH		7	י
22-61866	. HARNESS ASSEMBLY, OVERHEAT CONTROLLER TO PERMANENT SPLICE	'		1
PT06E12-10S	. CONNECTOR, CONVAIR 92-40325-002 -V06840- HARNESS ASSEMBLY, COPILOT PITOT TUBE			1
DM9700-3S	HEATER TO PERMANENT SPLICE	1		1
	A AIRPLANES IN & AND UN			
	22-61774  PT06E14-19S 22-61874  22-61872  22-61503  22-61659  22-61659-1  320559 320562 22-61894  22-62525  22-61677  PT06E12-10S 22-61588  36151 320553  PT06E14-19P 323975 22-61660  22-61660-1  320562 320559 22-62515  320570 320559 22-62519-1 320559 22-61867-5 22-61867-1 22-61866	DT00E20-39S   22-61774	PTODE20-39S	DTODE20-39S



#### ILLUSTRATED PARTS CATALOG

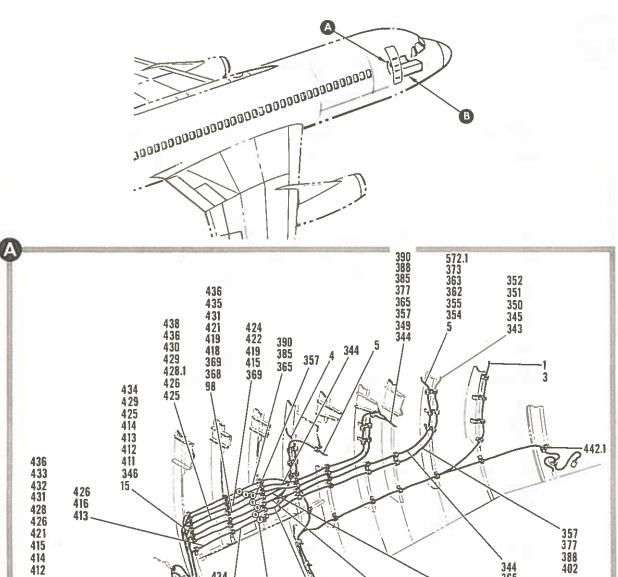

22.04 94.04.006-1A

374

427 428.1

436

412

413

432 434

365 385

388


373 

572.1

343 344

350

352

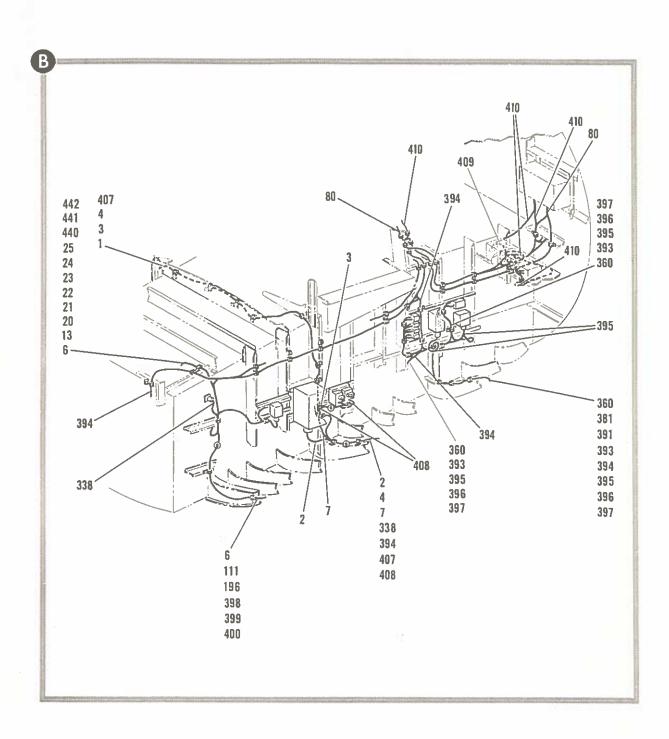



IGURE AND	PART NUMBER	NOMENCLATURE		AGE IDE	UNITS
DEX NO.			FROM	το	ASSEMBI
		1 2 3 4 5 6	7		
1.00	00 / 1007	NWW LH ELECTRICAL HARNESSES SEE 22-61003	١.		
-409	22-61887	- HARNESS ASSEMBLY, BATTERY INSTALLATION TO	1		[ 1
	34463	PERMANENT SPLICE	Ι.		
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		15
	36161	TERMINAL, CONVAIR 98-90805-016 -V00779-	1		3
	320567	TERMINAL, CONVAIR 98-90805-015 -V00779-	1		1
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1		2 2 5 2
	320562	CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		2
	320559	CONDUCTOR. CONVAIR 98-34001-003 -V00779-	1 1		5
	36157	- TERMINAL, CONVAIR 98-90805-008 -V00779-	l i	1	1 5
	320574	- TERMINAL, CONVAIR 98-90805-010 -V00779-	Ιi	l	l i
-410	22-61887-1	. HARNESS ASSEMBLY, BATTERY INSTALLATION TO	l i	ľ	l i
-410	22-01801-1		'		ļ '
	1-1-1-	CURRENT RELAY	l .	1	
	36161	TERMINAL, CONVAIR 98-90805-016 -V00779-	1	1	1
	320577	TERMINAL, CONVAIR 98-90805-019 -V00779-	1		1
-411	22-61646-1	- HARNESS ASSEMBLY, COPILOT INSTRUMENT	1		1
		AMPLIFIER TO PERMANENT SPLICE	1		
	DPA32-3355	- CONNECTOR, CONVAIR 92-50285-026 -V71468-	1		1
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	i		l i
	320559	. CONDUCTOR, CONVAIR 98-34001-003 -V00779-	li		7
					1 .
1. 2.0	320562	- CONDUCTOR, CONVAIR 98-34001-001 -V00779-			1 !
-412	22-61640-1	. HARNESS ASSEMBLY, COPILOT RADIO-MAGNETIC	1		1
		INDICATOR SERVO-AMPLIFIER TO PERMANENT			
		SPLICE			
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		1 1
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	l i		5
	320562	CONDUCTOR, CONVAIR 98-34001-001 -V00779-	l i i		l ī
-413	22-61645-1	. HARNESS ASSEMBLY, COPILOT INSTRUMENT	i		l i
-413	22-01043-1		'		'
		AMPLIFIER TO INSTRUMENT PANEL PERMANENT		l	
	00470 770	SPLICE CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL CONTROL			
	DPA32-33S	CONNECTOR, CONVAIR 92-50285-007 -V71468-	1		3
-414	22-61724-1	- HARNESS ASSEMBLY: VERTICAL GYRO 2 TO	1		1
		PERMANENT SPLICE			
	K21993	CONNECTOR, CONVAIR 92-40116-002 -V71468-	1 1		1
	36151	- TERMINAL, CONVAIR 98-90805-001 -V00779-	l i		5
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	l i		l ĩ
	320562	. CONDUCTOR, CONVAIR 98-34001-001 -V00779-	i		l i
	1		( i )		
	320559	CONDUCTOR: CONVAIR 98-34001-003 -V00779-	ו י		7
	1				
	i		1		
			-		1
	1				
			1		ł
	1				1
	1				
			-		
	1				
					7.7
			1		1
	1				
	1				
			1		
	1				
	1				
					J
					}
					1
					Į
					1
	1		,		




FIGURE	PART NUMBER	NOMENCLATURE	USA CO		UNITS
NDEX NO.	17KI HOMULK	1 2 3 4 5 6	FROM	TO	ASSEMB
-415 -416 -419	22-61735-1 320562 320559 22-61737-1 22-61644-1 DPA32-33S 320559 320562	HARNESS ASSEMBLY, STA 250 PERMANENT SPLICE TO AUTOPILOT RACK PERMANENT SPLICE . CONDUCTOR, CONVAIR 98-34001-001 -V00779 CONDUCTOR, CONVAIR 98-34001-003 -V00779- HARNESS ASSEMBLY, AUTOPILOT RACK PERMANENT SPLICE TO RELAY RACK PERMANENT SPLICE HARNESS ASSEMBLY, PILOT INSTRUMENT AMPLIFIER TO PERMANENT SPLICE . CONNECTOR, CONVAIR 92-50285-007 -V71468 CONDUCTOR, CONVAIR 98-34001-003 -V00779 CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		15 30
					3
		=			
					:




FIGURE AND	PART NUMBER	NOMENCLATURE	USA		UNITS
NDEX NO.	TAKE INGMISER		FROM	то	ASSEMBL
-421	22-61725-1	1 2 3 4 5 6 L. HARNESS ASSEMBLY. COMPUTER AMPLIFIER TO	1 2	5	1
-421	22-01123-1	PEDESTAL PERMANENT SPLICE	'	,	· ·
	22-61725-3	- HARNESS ASSEMBLY. COMPUTER AMPLIFIER TO	6		1
	22 01123 3	PERMANENT SPLICE	"		
	DPD78-33518	CONNECTOR. CONVAIR 92-50285-014 -V71468-	2		1
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	2		8
	320574	- TERMINAL, CONVAIR 98-90805-010 -V00779-	2		1
	36161	TERMINAL, CONVAIR 98-90805-016 -V00779-	2		1
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	2		12
-422	22-61727-1	- HARNESS ASSEMBLY, COMPUTER AMPLIFIER TO	1 1		1
		POWER JUNCTION BOX			
	320562	CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1 1		2
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1		10
	36153	TERMINAL: CONVAIR 98-90805-003 -V00779-	1		8
	UPD78-33S1B	CONNECTOR: CONVAIR 92-50285-014 -V71468-	[ 1 ]		1
-423	22-61743	. HARNESS ASSEMBLY, STA 375 PERMANENT SPLICE	1 1		1
		TO AUTOPILOT PERMANENT SPLICE			
	320562	CONDUCTOR. CONVAIR 98-34001-001 -V00779-	1 1		3
-424	22-61758	. HARNESS ASSEMBLY, FREQUENCY CHART LIGHTS TO	1 1		1
		PERMANENT SPLICE			
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		1
	WK3-23C3-8	CONNECTOR, CONVAIR 92-40318-005 -V71468-	1 1		1
-425	22-61785	. HARNESS ASSEMBLY, CONTROL CHASSIS TO	1 1		1
		PILOT STATIC VALVE PERMANENT SPLICE			
-426	22-61786	. HARNESS ASSEMBLY. CONTROL CHASSIS TO	1 1		1
		COPILOT STATIC VALVE PERMANENT SPLICE			
	DM6502-37S	CONNECTOR, CONVAIR 92-40330-004 -V17419-	1 1		- 1
-427	22-61656-1	. HARNESS ASSEMBLY, VERTICAL GYRO 1 TO	1		1
		PERMANENT SPLICE			
	K21993	CONNECTOR. CONVAIR 92-40116-002 -V71468-	1 1		1
	36151	- TERMINAL, CONVAIR 98-90805-001 -V00779-	_[ i ]		5
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	i		2
	320559	CONDUCTOR. CONVAIR 98-34001-003 -V00779-	i		8
-428	22-61756	. HARNESS ASSEMBLY: FUEL GAGING TRANSFER	i		ĭ
		SWITCH BOX TO PERMANENT SPLICE			1 .
	165-26	CONNECTOR. CONVAIR 92-40058-012 -V02660-	1		1
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	i		1
-428-1	22-61869-1	- HARNESS ASSEMBLY, PILOTS AUTOPILOT RACK	i		i
		PERMANENT SPLICE TO STA 230	'		
		PERMANENT SPLICE			
	320559	CONDUCTOR. CONVAIR 98-34001-003 -V00779-	1 1		36
	320562	CONDUCTOR, CONVAIR 98-34001-001 -V00779-	i		2
	98-89500-001	- PLUG	- I i i		2
	70-07300-001	• • 1200	'		"
	1				
					1
	1				
	<u>- 111</u>				
					1
		5			
	1				
			1		

FIGURE AND	PART NUMBER	NOMENCLATURE	CO	GE DE	UNITS
INDEX NO.	1 AKT TOMBER		FROM	TO	ASSEMBL
4 -429	22-61787	1 2 3 4 5 6	1		1
4 -429	55-01191	PERMANENT SPLICE	'		'
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1		13
i	DM6502-19S	. CONNECTOR, CONVAIR 92-40330-003 -V17419-	l i l		1
-430	22-61789	- HARNESS ASSEMBLY. AUTOPILOT RACK PERMANENT	1 i 1		l i
-450	22-01107	SPLICE TO INSTRUMENT PANEL PERMANENT	'		
					1
672	22-61637-1	SPLICE  - HARNESS ASSEMBLY, COPILOT COMPASS COUPLER	1 1		l ı
-431	22-01031-1	TO INSTRUMENT PANEL PERMANENT SPLICE	'		
-	00470 775	. CONNECTOR, CONVAIR 92-50285-026 -V71468-	1 1		3
	DPA32-33S	. TERMINAL, CONVAIR 98-90805-003 -V00779-	i i		8
	36153	. CONDUCTOR. CONVAIR 98-34001-003 -V00779-	l i		2.3
	320559	. CONDUCTOR, CONVAIR 98-34001-003 -V00779-	l i		5
	320562		l i		1 1
	320570	CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1 1	İ	l i
	K03-19-20SN	CONNECTOR, CONVAIR 92-40058-004 -V71468-			
	K06-191-2	SHELL, CONVAIR 98-02500-002 -V71468-	1 .		
-432	22-61641-1	. HARNESS ASSEMBLY. PILOT RADIO-MAGNETIC	1		1
		INDICATOR SERVO-AMPLIFIER TO PERMANENT			1
		SPLICE	١.		-
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1		5
	320562	CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1 1	1	1
	36153	TERMINAL. CONVAIR 98-90805-003 -V00779-	1 1		1
-433	22-61736-1	. HARNESS ASSEMBLY, PEDESTAL PERMANENT SPLICE	1 1		1
		TO RELAY RACK PERMANENT SPLICE		ŀ	
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1	ŀ	11
	320562	CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1 1	ŀ	2
-434	22-61788	. HARNESS ASSEMBLY. AIR DATA TEMPERATURE	1 1	ŀ	1
101		BULB TO PERMANENT SPLICE		1	
	EX06-10SL4S	CONNECTOR, CONVAIR 92-40332-002 -V71468-	1 1		1
	024048-0000	CONTACT, CONVAIR 92-63901-012 -V71468-	l i		2
	320559	CONDUCTOR. CONVAIR 98-34001-003 -V00779-	l i		i
-435	22-61635-1	. HARNESS ASSEMBLY, PILOT COMPASS COUPLER TO	l i		1
-433	22-01033-1	INSTRUMENT PANEL PERMANENT SPLICE	1 '		
	55470 376	. CONNECTOR, CONVAIR 92-50285-026 -V71468-	1 1		₩ ŋ
	DPA32-33S	CUNNECTUR, CUNVAIR 92-30203-020 -VI 1400-	1 i		8
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		ı
	K03-19-205N	CONNECTOR, CONVAIR 92-40058-004 -V71468-	1 1		1
	K06-191-2	SHELL, CONVAIR 98-02500-002 -V71468-	1 i		23
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-			1
	320570	CONDUCTOR. CONVAIR 98-34001-002 -V00779-	1 !		1
	320562	CONDUCTOR. CONVAIR 98-34001-001 -V00779-	1 1		5
-436	22-61643-1	- HARNESS ASSEMBLY, PILOT INSTRUMENT	1	ļ	1
	!	AMPLIFIER TO INSTRUMENT PANEL PERMANENT		1	1
		SPLICE		1	1
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		15
	320562	- CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		lş lş
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	323287	CONNECTOR, CONVAIR 96-89500-001 -V00779-	1 1		1 1
-440	22-61504	. HARNESS ASSENBLY, COPILOT YOKE TO STA 306	l i		1
-174	0.000	DIODE			
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1		l 1
	1	. TERMINAL, CONVAIR 98-90805-006 -V00779-	1 i		1 i
Se he S	320572	. HARNESS ASSEMBLY, POWER LEVER SWITCHES	1 :		1
-441	22-61516		Ι,		'
	300663	1 AND 2 TO PERNANENT SPLICE	1 1		E
	320553	TERMINAL, CONVAIR 98-90805-020 -V00779-	;		1
-442	22-61759	- HARNESS ASSEMBLY, EMERGENCY STABILIZER TRIM	'		] '
		CONTROL TO PERMANENT SPLICE			1 .
	PT06E14-5S	CONNECTOR, CONVAIR 92-40325-016 -V06840-	1 !		1 !
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		1 1
-442.1	22-61982	- HARNESS ASSEMBLY, PILOT PITOT TUBE HEATER	1		1
		TO PERMANENT SPLICE		1	
	DM9700-3S	PLUG. CONVAIR 92-40317-008 -V17419-	1		1
	1		1	1	1



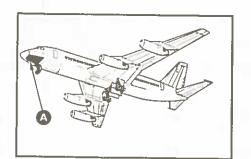

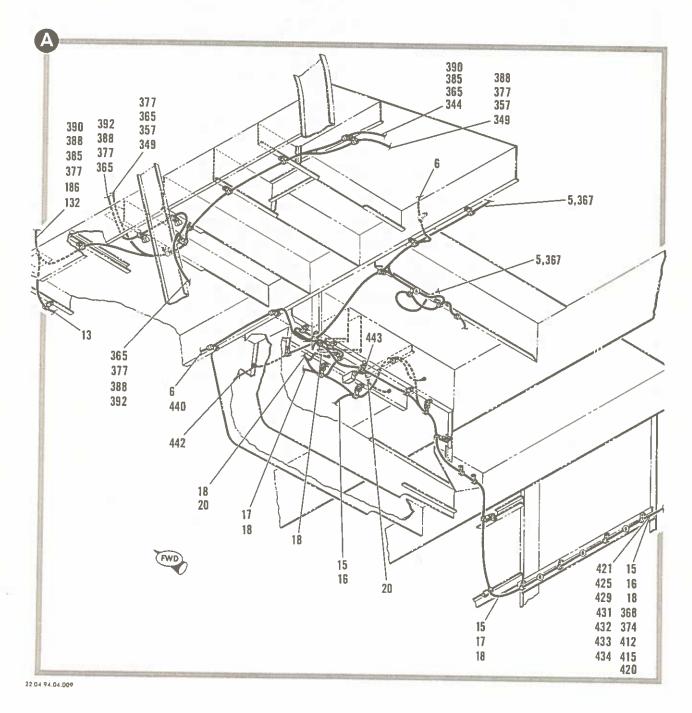

94-4 Page 22 UNDERFLOOR STA 187 TO 250 LH ELECTRICAL HARNESSES Feb. 10/62 FIGURE 5


A-2



### USAGE FIGURE UNITS CODE NOMENCLATURE **PART NUMBER** PER AND ASSEMBLY FROM TO INDEX NO. 2 3 4 5 6 UNDERFLOOR STA 187 TO 250 LH ELECTRICAL HARNESSES SEE 22-61003 HARNESS ASSEMBLY, ELEVATOR TRIM SERVO TO PERMANENT SPLICE 5 -443 22-61668-1 2 ì 22-61668-3 - HARNESS ASSEMBLY, ELEVATOR TRIM SERVO TO 6 1 PERMANENT SPLICE EX06-1651S . . CONNECTOR, CONVAIR 92-40332-007 -V71468-. CONTACT, CONVAIR 92-63901-011 -V71468-. CONTACT, CONVAIR 92-63901-012 -V71468-024049-0000 Ц 2 024048-0000 3



#### ILLUSTRATED PARTS CATALOG

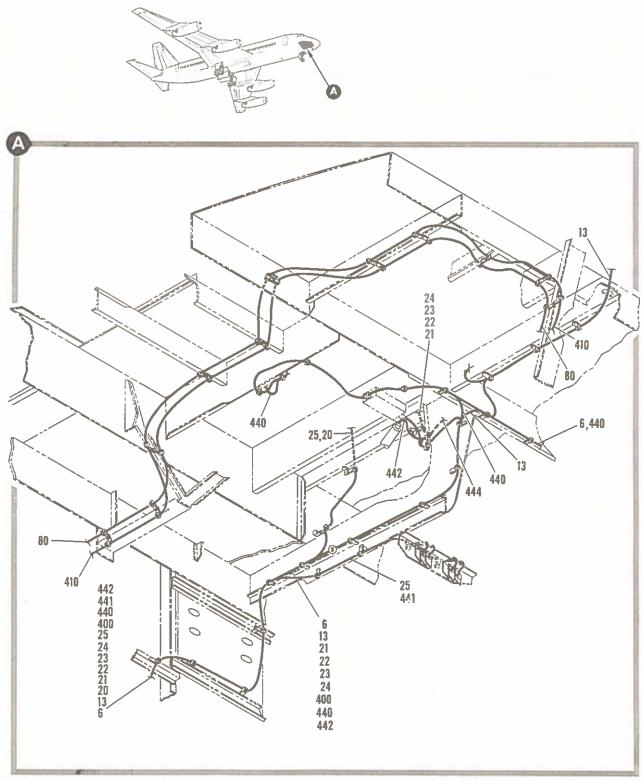


22.04.94.04.010

94-4 Page 24 UNDERFLOOR STA 187 TO 250 RH ELECTRICAL HARNESSES Feb. 10/62 FIGURE 6

A-2

# CONVAIR 880

FIGURE	PART NUMBER	NOMENCLATURE	USA CO	GE DE	UNIT:
NDEX NO.		1 2 3 4 5 6	FROM	то	ASSEME
-444	22-61579	UNDERFLOOR STA 187 TO 250 RH ELECTRICAL HARNESSES SEE 22-61003 HARNESS ASSEMBLY, MASTER WARNING BOX 2 TO PERMANENT SPLICE	1		
	PT06E22-55S 36153 320559	CONNECTOR, CONVAIR 92-40325-010 -V06840- . TERMINAL, CONVAIR 98-90805-003 -V00779- . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1		10
		St.			
				:	
		ा			
			53		
		>> ∷			



-497 2 33 -498 2 -499 2	PART NUMBER  22-61694-1  36153 22-61746  320562 36153 2106E16-265 22-62521-1  320559	NOMENCLATURE  1 2 3 4 5 6  - HARNESS ASSEMBLY, LANDING GEAR GROUND SAFETY RELAY TO OVERHEAT DETECTOR RELAY - TERMINAL, CONVAIR 98-90805-003 -V00779 CONNECTOR, CONVAIR 92-40325-075 -V77820 HARNESS ASSEMBLY, WING SKIN TEMPERATURE OVERHEAT POWER SUPPLY TO PERMANENT SPLICE RH - CONDUCTOR, CONVAIR 98-34001-001 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 CONNECTOR, CONVAIR 92-40325-018 -V77820 HARNESS ASSEMBLY, FRONT SPAR FEED THRU PANEL C TO INBD LANDING LIGHT RELAY RH	FROM 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	то	PER ASSEMBI
-496 2 3 -497 2 -498 2 -499 2	36153 2106E20-39S 22-61746 320562 36153 2106E16-26S 22-62521-1	- HARNESS ASSEMBLY, LANDING GEAR GROUND SAFETY RELAY TO OVERHEAT DETECTOR RELAY TERMINAL, CONVAIR 98-90805-003 -V00779- CONNECTOR, CONVAIR 92-40325-075 -V77820- HARNESS ASSEMBLY, WING SKIN TEMPERATURE OVERHEAT POWER SUPPLY TO PERMANENT SPLICE RH CONDUCTOR, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-90805-003 -V00779- CONNECTOR, CONVAIR 92-40325-018 -V77820- HARNESS ASSEMBLY, FRONT SPAR FEED THRU PANEL C TO INBD LANDING LIGHT RELAY RH	1 1 1 1		1 1
-497 2 33 -498 2 -499 2	36153 2106E20-39S 22-61746 320562 36153 2106E16-26S 22-62521-1	SAFETY RELAY TO OVERHEAT DETECTOR RELAY  TERMINAL, CONVAIR 98-90805-003 -V00779- CONNECTOR, CONVAIR 92-40325-075 -V77820- HARNESS ASSEMBLY, WING SKIN TEMPERATURE OVERHEAT POWER SUPPLY TO PERMANENT SPLICE RH CONDUCTOR, CONVAIR 98-34001-001 -V00779- TERMINAL, CONVAIR 98-90805-003 -V00779- CONNECTOR, CONVAIR 92-40325-018 -V77820- HARNESS ASSEMBLY, FRONT SPAR FEED THRU PANEL C TO INBD LANDING LIGHT RELAY RH	1 1 1 1		1 1
-497 2 33 -498 2 -499 2	2706E20-39S 22-61746 320562 36153 2706E16-26S 22-62521-1	. TERMINAL, CONVAIR 98-90805-003 -V00779 CONNECTOR, CONVAIR 92-40325-075 -V77820- HARNESS ASSEMBLY, WING SKIN TEMPERATURE OVERHEAT POWER SUPPLY TO PERMANENT SPLICE RH . CONDUCTOR, CONVAIR 98-34001-001 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 CONNECTOR, CONVAIR 92-40325-018 -V77820- HARNESS ASSEMBLY, FRONT SPAR FEED THRU PANEL C TO INBD LANDING LIGHT RELAY RH	1 1 1 1 1 1 1		2
-497 2 33 -498 2 -499 2	2706E20-39S 22-61746 320562 36153 2706E16-26S 22-62521-1	CONNECTOR, CONVAIR 92-40325-075 -V77820 HARNESS ASSEMBLY, WING SKIN TEMPERATURE OVERHEAT POWER SUPPLY TO PERMANENT SPLICE RH CONUCTOR, CONVAIR 98-34001-001 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 CONNECTOR, CONVAIR 92-40325-018 -V77820 HARNESS ASSEMBLY, FRONT SPAR FEED THRU PANEL C TO INBD LANDING LIGHT RELAY RH	1 1 1		1
-497 2 3 3 -498 2 -499 2	22-61746 320562 36153 2106E16-265 22-62521-1	. HARNESS ASSEMBLY, WING SKIN TEMPERATURE OVERHEAT POWER SUPPLY TO PERMANENT SPLICE RH . CONDUCTOR, CONVAIR 98-34001-001 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 CONNECTOR, CONVAIR 92-40325-018 -V77820 HARNESS ASSEMBLY, FRONT SPAR FEED THRU PANEL C TO INBD LANDING LIGHT RELAY RH	1 1 1		2
-498 2 -499 2	36153 2106616-265 22-62521-1 320559	TO PERMANENT SPLICE RH . CONDUCTOR, CONVAIR 98-34001-001 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 CONNECTOR, CONVAIR 92-40325-018 -V77820- HARNESS ASSEMBLY, FRONT SPAR FEED THRU PANEL C TO INBD LANDING LIGHT RELAY RH	1 1		1
-498 2 -499 2	36153 2106616-265 22-62521-1 320559	CONDUCTOR, CONVAIR 98-34001-001 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779 CONNECTOR, CONVAIR 92-40325-018 -V77820 HARNESS ASSEMBLY, FRONT SPAR FEED THRU PANEL C TO INBD LANDING LIGHT RELAY RH	1 1		1
-498 2 -499 2	36153 2106616-265 22-62521-1 320559	. TERMINAL, CONVAIR 98-90805-003 -V00779 CONNECTOR, CONVAIR 92-40325-018 -V77820 HARNESS ASSEMBLY, FRONT SPAR FEED THRU PANEL C TO INBD LANDING LIGHT RELAY RH	1 1		1
-498 2 -499 2	2706£16-26S 22-62521-1 320559	. CONNECTOR, CONVAIR 92-40325-018 -V77820- . HARNESS ASSEMBLY, FRONT SPAR FEED THRU PANEL C TO INBD LANDING LIGHT RELAY RH	i		
-498 2 -499 2	22-62521 <b>-</b> 1 320559	- HARNESS ASSEMBLY, FRONT SPAR FEED THRU PANEL C TO INBD LANDING LIGHT RELAY RH			
-499 Z	320559	PANEL C TO INBD LANDING LIGHT RELAY RH			1 .
-499 3 2					
-499 3 2		CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1		3
	36151	. TERMINAL, CONVAIR 98-90805-001 -V00779-	1		:
1	22-62581	. HARNESS ASSEMBLY. TRANSFER SWITCH BOX FUEL	1 1		1
1		PROBE 4 MAIN TANK TO REAR SPAR DISCONNECT			,
	1-822-1	CONNECTOR, CONVAIR 92-47000-027 -V95712-			1 3
	1-817-1	CONNECTOR, CONVAIR 92-47000-020 -V95712-			
-500 2	22-61693	ARNESS ASSEMBLY, PERMANENT SPLICE TO REAR SPAR PERMANENT SPLICE	'		
[,	320559	CONDUCTOR, CONVAIR 9B-34001-003 -V00779-	1 1		
1 -	320562	CONDUCTOR. CONVAIR 98-34001-001 -V00779-	i		1
	22-61851-1	. HARNESS ASSEMBLY, GROUND MAINTENANCE RELAY	] 1		
		TO PERMANENT SPLICE			
1 7	36161	TERMINAL, CONVAIR 98-90805-016 -V00779-	1 !		:
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-			
	320569	. TERMINAL, CONVAIR 98-90805-017 -V00779-			'
-502 22	22-61395-1	- HARNESS ASSEMBLY, PERMANENT SPLICE TO AUTOPILOT PERMANENT SPLICE STA 375	'		1
1,	320559	CONDUCTOR, CONVAIR 98-34001-003 -400779-	1 1		1
	320562	CONDUCTOR, CONVAIR 98-34001-001 -V00779-	_  i		i:
	22-62571	. HARNESS ASSEMBLY, AUTOPILOT RACK PERMANENT	i		
		SPLICE TO ANGLE OF ATTACK SENSOR			
		PERHANENT SPLICE			
-504	22-62503	- HARNESS ASSEMBLY. FEED THRU L TO DIMMING	1		
	300550	RELAY BOX . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1:
1.5	320559	. CONDUCTOR, CONVAIR 98-34001-003 -V00/19-			l "
-505	22-62507-3	POSITION LIGHT RELAY	'		
-506	22-62507-5	. HARNESS ASSEMBLY, FEED THRU PANEL X TO	1 1		
300	04301 3	AIR CONDITION COMPARTMENT PERMANENT			
		SPLICE			
-507	22-62529	. HARNESS ASSEMBLY, FEED THRU PANEL G TO	1 1		
		EQUIPMENT INSTALLATION STA 323			
	320559	CONDUCTOR: CONVAIR 98-34001-003 -V00779-	1		
-508	22-61576-1	. HARNESS ASSEMBLY, LIGHT DIMMING RELAY BOX	1		
١,	720550	TO PERMANENT SPLICE CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1		1
	320559 36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	i		Ι '
	PT06E22-55S	CONNECTOR, CONVAIR 92-40325-010 -V77820-	i		





ELECTRICAL HARNESSES
ELECTRONIC AND
ELECTRICAL COMPT


AND	PART NUMBER	NOMENCLATURE		AGE DE	UNITS
NDEX NO.			FROM	то	ASSEMB
-509	22-61837	1 2 3 4 5 6 - HARNESS ASSEMBLY, WARNING HORN TIMER TO	- 1	-	
	PT06E8-45	TIMER DIODES  CONNECTOR, CONVAIR 92-40325-006 -V77820-	,		
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	l i		
-510	22-61794	- HARNESS ASSEMBLY, CABIN GENERAL LIGHT DIMMING CONTROL TO FWD STEWARD PANEL PERMANENT SPLICE	i		
-511	36153 22-62559	- TERMINAL, CONVAIR 98-90805-003 -V00779- - HARNESS ASSEMBLY, PERMANENT SPLICE TO AFT CABIN OUTFLOW VALVE	1		10
-512	CT06E16S8S 22-62562	. CONNECTOR, CONVAIR 92-40334-012 -V71468- HARNESS ASSEMBLY, HYDRAULIC FLUID QUANTITY AMPLIFIER BRIDGE TO REAR SPAR PERMANENT	1		
	320559	SPLICE . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	\$ 1		,
	36153 PT06E12-10S	- TERMINAL, CONVAIR 98-90805-003 -V00779- - CONMECTOR, CONVAIR 92-40325-002 -V77820-	1 1		
-513	22-62523	HARNESS ASSEMBLY, STRUCTURE TEMPERATURE     PERMANENT SPLICE TO FRONT SPAR FEED THRU     PANEL C	i		
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		,
	36151 22-62538-5	- TERMINAL, CONVAIR 98-90805-001 -V00779 HARNESS ASSEMBLY, RELAY INSTALLATION TO FEED THRU PANEL U	1 2	7	
-514	22-62538-803	- HARNESS ASSEMBLY, RELAY INSTALLATION TO FEED THRU PANEL U	A		
-515	22-61802	- HARNESS ASSEMBLY, PERMANENT SPLICE TO LOAD CONTROLLER 3	1		
	CT06E20-275	. CONNECTOR, CONVAIR 92-40334-017 -V71468- . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		
-516	22-61800	- HARNESS ASSEMBLY, PERMANENT SPLICE TO LOAD CONTROLLER 4			
	36153 CT06E20-27S	- TERMINAL, CONVAIR 98-90805-003 -V00779- - CONNECTOR, CONVAIR 92-40334-017 -V71468-	1		
		A AIRPLANES 1, 8 AND ON			



FIGURE	PART NUMBER	NOMENCLATURE	<u>co</u>	GE DE	UNITS
NDEX NO.		1 2 3 4 5 6	FROM	TO	ASSEMBL
-265	22-63601-3	. HARNESS ASSEMBLY, PERMANENT SPLICE CALL	1	-	1
-205	22-03001-3	SWITCH SEAT 6 TO 7 LH			
	22-63600-3	. HARNESS ASSEMBLY, PERMANENT SPLICE CALL	1		1
		SWITCH SEAT 6 TO 7 RH	1		2
	320562	. SPLICE, LH CONVAIR 98-34001-001 -V00779- . SPLICE, RH CONVAIR 98-34001-001 -V00779-			5
	320562 320559	. SPLICE, RH CONVAIR 98-34001-003 -V00779-	i		l ī
-266	22-63593-3	- HARNESS ASSEMBLY, READING LIGHTS TO	1		] 1
200		PERMANENT SPLICE SEAT 6 TO 7 LH	-		Ι.
	22-63592-3	- HARNESS ASSEMBLY, READING LIGHTS TO	1		1
	700545	PERMANENT SPLICE SEAT 6 TO 7 RH SPLICE, LH CONVAIR 98-34001-001 -V00779-	1		4
	320562 320562	. SPLICE, RH CONVAIR 98-34001-001 -V00779-	i		6
-267	22-63534	. HARNESS ASSEMBLY. READING LIGHT TO	1		1
-201 22 05554	22-05554	PERMANENT SPLICE STA 461 LH			
	36157	TERMINAL, CONVAIR 96-90805-008 -V00779-	1		4 0
	320574	TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1 1
-268	22-63536	- HARNESS ASSEMBLY, READING LIGHT TO	'		'
	7,167	PERMANENT SPLICE STA 456 RH . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		9
	36157 320574	. TERMINAL, CONVAIR 98-90805-010 -V00779-	i		<u> </u>
-269	22-63535	. HARNESS ASSEMBLY, READING LIGHT TO	1		1
-201	22-0333	PERMANENT SPLICE STA 506 LH			
	22-63537	. HARNESS ASSEMBLY, READING LIGHT TO	1	ĺ	1
		PERMANENT SPLICE STA 499 RH	Ι,		9
	36157	. TERMINAL, CONVAIR 98-90805-008 -V00779-	1		1 4
	320574	. TERMINAL, CONVAIR 98-90805-010 -V00779- HARNESS ASSEMBLY, WING ICE LIGHT RELAY	i		li
-270	22-61695	TO LH LIGHT	1 '		i
	PT06E8-4S	CONNECTOR, CONVAIR 92-40325-006 -V77820-	1		1
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-271	22-63538	. HARNESS ASSEMBLY, CABIN COVE LIGHT	1		1
		TO PERMANENT SPLICE STA 581 TO 719 LH	1		1
	22-63539	. HARNESS ASSEMBLY, CABIN COVE LIGHT	'		'
	7/151	TO PERMANENT SPLICE STA 581 TO 719 RH . TERMINAL, LH CONVAIR 98-90805-001	1		4.3
	36151	-V00779-	'		
	36151	TERMINAL. RH CONVAIR 98-90805-001	1 1		42
	30131	-v00779-			
	320571	TERMINAL. LH CONVAIR 98-90805-005	1		1
	6.1	-v00779-	1		1 1
	320559	- SPLICE, RH CONVAIR 98-34001-003 -V00779-	;	1	1 1
	36153	- TERMINAL, RH CONVAIR 98-90805-003	1 '	1	1 '
-273	22-63524	HARNESS ASSEMBLY, WINDOW LIGHT TO	1 1		1
-213	22-03324	PERMANENT SPLICE STA 546 TO 659 LH	_		
	22-63525	. HARNESS ASSEMBLY. WINDOW LIGHT TO	1		1 1
		PERMANENT SPLICE STA 546 TO 659 RH	_		1
	320562	SPLICE, CONVAIR 98-34001-001 -V00779-	;		A
	320574	TERMINAL, RH CONVAIR 98-90805-001	'		
		-V00779-		1	
				1	
			ļ	1	
			1		
			1		
				1	

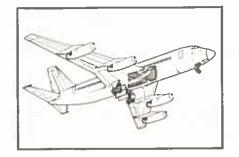

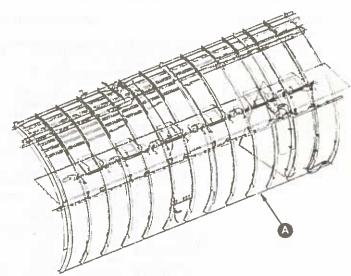

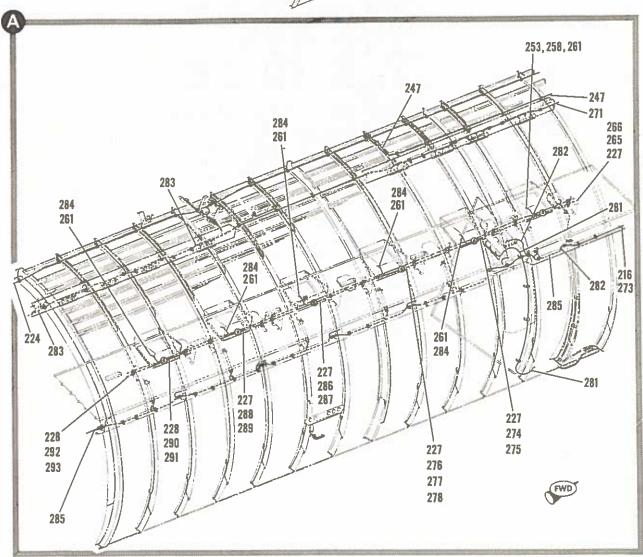

22.04.94.03.003A

94-3 Page 6 PASSENGER COMPARTMENT
STA 640 TO 888 ELECTRICAL HARNESSES
FIGURE 2

Feb. 10/62 A-2 ELECTRONIC AND


## ELECTRICAL HARNESSES CONVAIR 88 ELECTRONIC AND ELECTRIC COMPT ILLUSTRATED PARTS CATALOG

FIGURE AND	PART NUMBER	NOMENCLATURE	USA		UNITS
NDEX NO.	FAKI NOMBEK	1 2 3 4 5 6	FROM	TO	ASSEMB
-517	22-62580	. HARNESS ASSEMBLY, TRANSFER SWITCH BOX FUEL	1		1
-511	22-02300	PROBE 2 MAIN TANK TO REAR SPAR DISCONNECT			
	1-821-1	_ CONNECTOR, CONVAIR 92-47000-026 -V95712-	1 1		1
	1-820-1	_ CONNECTOR, CONVAIR 92-47000-025 -V95712-	1 1		1
	1-817-1	. CONNECTOR, CONVAIR 92-47000-020 -V95712-	1 1		4
-518	22-62534	. HARNESS ASSEMBLY, REAR SPAR TO GENERATOR	1 1		'
		LINE AND BUS TIE CONTACTOR 3 RH			
-519	22-62543	- HARNESS ASSEMBLY: REAR SPAR TO GENERATOR	1 1		
		LINE AND BUS TIE CONTACTOR 2 LH			
	YAEV6C-L2	- TERMINAL, CONVAIR 98-90806-008 -V09722-	1 1		. = 3
-522	22-61801	. HARNESS ASSEMBLY, PERMANENT SPLICE TO LOAD	'		
	00 (1007	CONTROLLER I	1 1		
-523	22-61803	- HARNESS ASSEMBLY, PERMANENT SPLICE TO LOAD	'		
	2/152	CONTROLLER 2 . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		
	36153	CONNECTOR, CONVAIR 92-40334-017 -V71468-			.
	CT06E20-27S	. TERMINAL, CONVAIR 98-90805-003 -V00779-	i		
-524	22-61605	HARNESS ASSEMBLY, PERMANENT SPLICE TO	i		
-324	22-81003	FEED THRU PANEL AC	'		1
-525	22-61616	. HARNESS ASSEMBLY, FREON SWITCHES TO	1 1		1
323	22 01010	PERMANENT SPLICE	i		
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	1		
	36153	_ TERMINAL. CONVAIR 98-90805-003 -V00779-	] 1		
	320553	_ TERMINAL, CONVAIR 98-90805-020 -V00779-	1 1		1 -
-527	22-61902	. HARNESS ASSEMBLY, AUTOPILOT RACK PERMANENT	1		
	1	SPLICE TO PERMANENT SPLICE STA 375			
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1
	320562	CONDUCTOR: CONVAIR 98-34001-001 -V00779-	1 1		1
	320570	CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1 1		
-528	22-61910	. HARNESS ASSEMBLY, PRESSURE TRANSDUCER TO	1		
	1	PERMANENT SPLICE	1 .		
-532	22-62500	. HARNESS ASSEMBLY, ANTI-COLLISION LIGHT	1		
		LWR TO PERMANENT SPLICE	_ l _ ı		
	PT06E22-55S	CONNECTOR, CONVAIR 92-40325-010 -V77820-			
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-			
	320559	- CONDUCTOR, CONVAIR 98-34001-003 -V00779-	l i		
-533	22-62577	- HARNESS ASSEMBLY, FEED THRU AC TO	1 '		
	700550	PERMANENT SPLICE CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1	i	1 1
	320559	- CUNDOCIDE COMPAIR PO-34001-003 -400117-	١ .		'
			1		1
				ĺ	
					1
	1				
			- 1	1	
	l				
					1
			1		
			1	-	
	1		İ	1	
	<b>:</b>			1	
				J	
			1		
					1
				1	
	1		F	1	
			ľ	1	



ELECTRICAL HARNESSES
ELECTRONIC AND
ELECTRICAL COMPT

#### ILLUSTRATED PARTS CATALOG

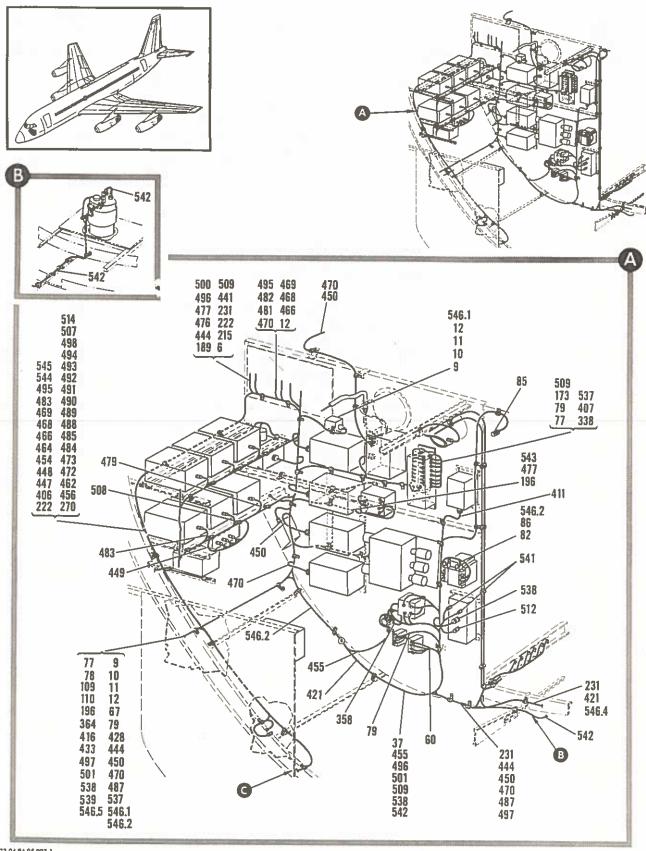


22.04.94.05.003-1

94-5 Page 14

RELAY PANEL FWD ELECTRICAL HARNESSES FIGURE 2 (SHEET 1 OF 2)

Apr. 28/61

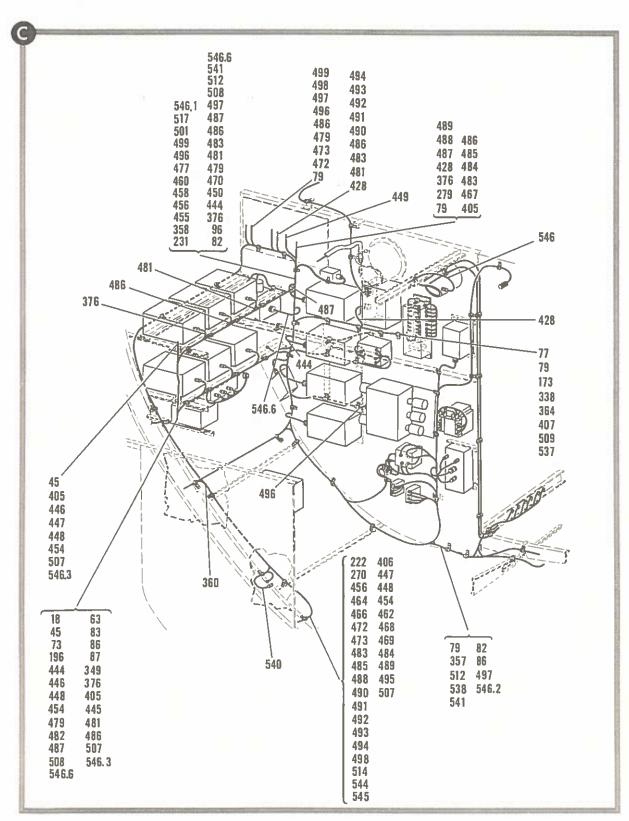




NOMENCLATURE   NOMENCLATURE   FROM   TO	UNIT
1 2 3 4 5 6	ASSEME
SEE 22-61004	
-537 22-61676	
REVERSE THRUST RELAY	
-538 22-61856	
-538 22-61856	
PERMANENT SPLICE   CONDUCTOR, CONVAIR 98-34001-003 -V00779-   CONDUCTOR, CONVAIR 98-40325-011 -V06840-   CONNECTOR, CONVAIR 98-40325-011 -V06840-   CONNECTOR, CONVAIR 98-40325-011 -V06840-   CONNECTOR, CONVAIR 98-40325-011 -V06840-   CONNECTOR, CONVAIR 98-40325-011 -V06840-   CONDUCTOR, CONVAIR 98-40325-012 -V02299-   CONTACT, CONVAIR 92-40329-001 -V009922-   CONTACT, CONVAIR 98-40329-001 -V009922-   CONTACT, CONVAIR 98-90805-003 -V00779-   CONTACT, CONVAIR 98-90805-003 -V00779-   CONTACT, CONVAIR 98-90805-001 -V00779-   CONTACT, CONVAIR 98-90805-001 -V00779-   CONNECTOR, CONVAIR 98-90805-002 -V77820-   CONNECTOR, CONVAIR 92-47000-020 -V95712-   CONNECTOR, CONVAIR 92-47000-020 -V95712-   CONNECTOR, CONVAIR 92-47000-020 -V95712-   CONNECTOR, CONVAIR 92-47000-020 -V95712-   CONTACTOR, CONVAIR 98-34001-003 -V00779-   CONTACTOR, CONVAIR 98-34001-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CONVAIR 98-90805-003 -V00779-   CONTACTOR, CON	
-539   PT06E14-19S   CONNECTOR, CONVAIR 98-40325-011 -V06840-	
-539 22-61560-1	13
DISCONNECT INBD TO INSTRUMENT PANEL LH  YPS20H1 PHP45M1	
YPS20H1 PHP45M1 -540 -540 -540 -540 -540 -540 -540 -540	
PHP45M1	
-540 22-61870	19
PERMANENT SPLICE  36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1 22-62619 . TERMINAL, CONVAIR 98-90805-001 -V00779- 1 HARNESS ASSEMBLY, HYDRAULIC TANK PROBES TO REAR SPAR PERMANENT SPLICE  PT06E12-10S 1-817-1 . CONNECTOR, CONVAIR 92-47000-020 -V95712- 1-821-1 . CONNECTOR, CONVAIR 92-47000-020 -V95712- 1-821-1 . CONNECTOR, CONVAIR 92-47000-026 -V95712- 1 -542 22-62560 . HARNESS ASSEMBLY, PERMANENT SPLICE TO FWD CABIN OUTFLOW VALVE . CONDUCTOR, CONVAIR 98-34001-003 -V00779- 36153 . TERMINAL, CONVAIR 98-90805-001 -V00779- 1 36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1 LIGHTS TO PERMANENT SPLICE 36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1 TERMINAL, CONVAIR 98-90805-003 -V00779- 1	
36153 36151 -541 22-62619 -541 -541 -541 -541 -542 -542 -543 -543 -543 -543 -543 -543 -543 -543	
36151 . TERMINAL, CONVAIR 98-90805-001 -V00779- 1 22-62619 . HARNESS ASSEMBLY, HYDRAULIC TANK PROBES TO REAR SPAR PERMANENT SPLICE  PT06E12-10S . CONNECTOR, CONVAIR 92-47000-020 -V77820- 1 1-817-1 . CONNECTOR, CONVAIR 92-47000-020 -V95712- 1 1-821-1 . CONNECTOR, CONVAIR 92-47000-026 -V95712- 1 22-62560 . HARNESS ASSEMBLY, PERMANENT SPLICE TO FWD CABIN OUTFLOW VALVE  320559 . CONDUCTOR, CONVAIR 98-34001-003 -V00779- 1 36153 . TERMINAL, CONVAIR 98-90805-001 -V00779- 1 36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1 LIGHTS TO PERMANENT SPLICE 36153 . CONDUCTOR, CONVAIR 98-90805-003 -V00779- 1 21	
-541 22-62619	
REAR SPAR PERMANENT SPLICE  PT06E12-10S 1-817-1 -821-1 -821-1 -542 22-62560	
1-817-1	ļ
1-821-1	;
-542 22-62560	
FWD CABIN OUTFLOW VALVE  320559 CONDUCTOR, CONVAIR 98-34001-003 -V00779- 1  CT06E16SBS CONNECTOR, CONVAIR 92-40334-012 -V71468- 1  36151 TERMINAL, CONVAIR 98-90805-001 -V00779- 1  36153 TERMINAL, CONVAIR 98-90805-003 -V00779- 1  LIGHTS TO PERMANENT SPLICE  36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1  CONDUCTOR, CONVAIR 98-34001-003 -V00779- 1	
320559 CONDUCTOR, CONVAIR 98-34001-003 -V00779- 1	
CT06E16SBS CONNECTOR, CONVAIR 92-40334-012 -V71468- 1 36151 TERMINAL, CONVAIR 98-90805-001 -V00779- 1 36153 TERMINAL, CONVAIR 98-90805-003 -V00779- 1 -543 22-62613 . HARNESS ASSEMBLY, AFT CARGO COMPARTMENT LIGHTS TO PERMANENT SPLICE 36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1 320559 . CONDUCTOR, CONVAIR 98-34001-003 -V00779- 1	
36151 . TERMINAL, CONVAIR 98-90805-001 -V00779- 1 36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1 LIGHTS TO PERMANENT SPLICE 36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1 CONDUCTOR, CONVAIR 98-34001-003 -V00779- 1	
36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1 -543 22-62613 . HARNESS ASSEMBLY, AFT CARGO COMPARTMENT 1 LIGHTS TO PERMANENT SPLICE 36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1 320559 . CONDUCTOR, CONVAIR 98-34001-003 -V00779- 1	
-543 22-62613 . HARNESS ASSEMBLY, AFT CARGO COMPARTMENT 1 LIGHTS TO PERMANENT SPLICE 36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1 320559 . CONDUCTOR, CONVAIR 98-34001-003 -V00779- 1	
LIGHTS TO PERMANENT SPLICE  36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1  320559 . CONDUCTOR, CONVAIR 98-34001-003 -V00779- 1	
36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1 320559 . CONDUCTOR, CONVAIR 98-34001-003 -V00779- 1	
	1 '
A1783   CONTRACT CONTRACT OR AND AND AND AND AND AND AND AND AND AND	
A1111 - NUT, CONVAIR 96-35004-001 -V72914- 1	
A4149 - INSULATOR, CONVAIR 95-07002-001 -V72914- 1	
AN3046-3 . TERMINAL 1 1 -544 22-61696 . HARNESS ASSEMBLY, WING ICE LIGHT RELAY 1	
TO LIGHT RH	
36153 . TERMINAL, CONVAIR 98-90805-003 -V00779- 1	
PT06EB-4S CONNECTOR, CONVAIR 92-40325-006 -V77820-	
-545 22-62625 - HARNESS ASSEMBLY: STA 375 PERMANENT SPLICE 1	
TO REAR SPAR FEED THRU PERMANENT SPLICE	
ENGINE 2	
320562 . CONDUCTOR, CONVAIR 98-34001-003 -V00779- 1	
-546 22-61744 . HARNESS ASSEMBLY, ELECTRONIC COMPARTMENT 1	
FAN TO RELAY	
320574 - TERMINAL, CONVAIR 98-90805-010 -V00779- 1 1 320572 - TERMINAL, CONVAIR 98-90805-006 -V00779- 1	
320572 - TERMINAL, CONVAIR 98-90805-006 -V00779- 1 36153 - TERMINAL, CONVAIR 98-90805-003 -V00779- 1	
024048-0000 . CONTACT, CONVAIR 92-63901-012 -971468-	
PT06E14-5S CONNECTOR, CONVAIR 92-40325-016 -V06840- 1	
EX06-10SL4S CONNECTOR, CONVAIR 92-40332-002 -V71468- 1	

FIGURE	PART NUMBER	NOMENCLATURE		GE DE	UNITS
NDEX NO.	TAKI HOMDEK	1 2 3 4 5 6	FROM	то	ASSEMB
-546.1 2	22-61932-801	. HARNESS ASSEMBLY, ANTI-ICE VALVE DELAY	1		
	PT06E8-4S	RELAY LH . CONNECTOR: CONVAIR 92-40325-006 -V06840-	1		
	22-61911	- HARNESS ASSEMBLY, STATIC INVERTER EMERGENCY	i	1	
	4S3106R24-11S	IGNITION TO PERMANENT SPLICE . CONNECTOR	1		
	22-62527-1	. HARNESS ASSEMBLY, FEED THRU PANEL G TO	i		
	320562	INSTRUMENT PANEL STATION . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1,		
3	320570	CONDUCTOR, CONVAIR 98-34001-002 -V00779-	i		
	320559 22-61639-1	CONDUCTOR, CONVAIR 98-34001-003 -V00779- . HARNESS ASSEMBLY, COPILOT AUTOPILOT RACK	1		1
34003	22 01037 1	PERMANENT SPLICE TO CIRCUIT BREAKER			
-546-6	22-61896	PERMANENT SPLICE  HARNESS ASSEMBLY, DIMMING BOX 7 TO	1	10	
		PERMANENT SPLICE			
3	22-61396-3	- HARNESS ASSEMBLY, DIMMING BOX 7 TO PERMANENT SPLICE	11		
	PT06E22-55S	- CONNECTOR, CONVAIR 92-40325-010 -V06840-	1		
	36153 320559	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		2
					-
W.					
					×
		85			
1					



#### ILLUSTRATED PARTS CATALOG

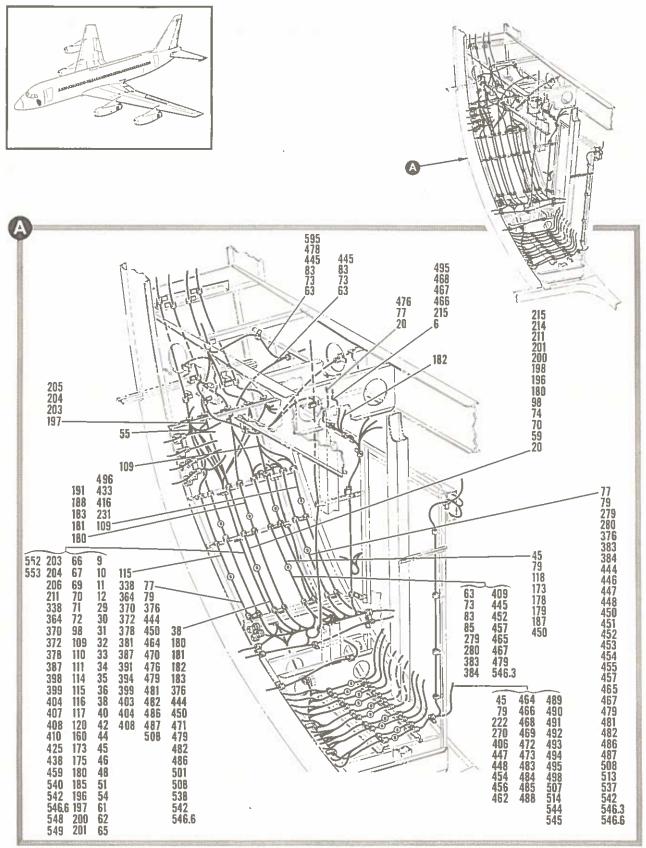


22.04.94.05.004-1

94-5 Page 18 RELAY PANEL AFT ELECTRICAL HARNESSES FIGURE 3 (SHEET 1 OF 3)

Apr. 28/61

# CONVAIR 880

#### ILLUSTRATED PARTS CATALOG

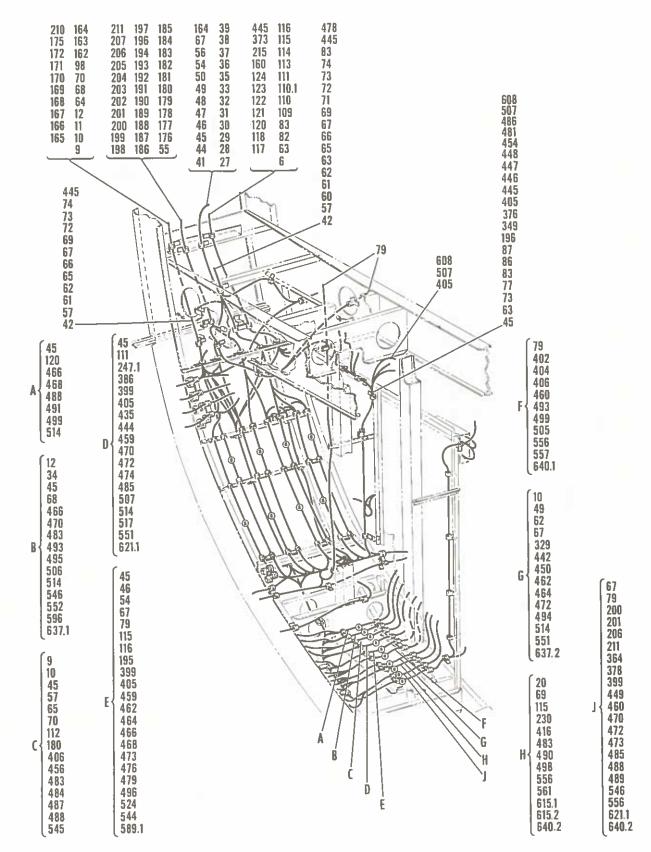


22.04.94.05.004-2

Apr. 28/61

RELAY PANEL AFT ELECTRICAL HARNESSES FIGURE 3 (SHEET 2 OF 3)

94-5 Page 19


#### ILLUSTRATED PARTS CATALOG

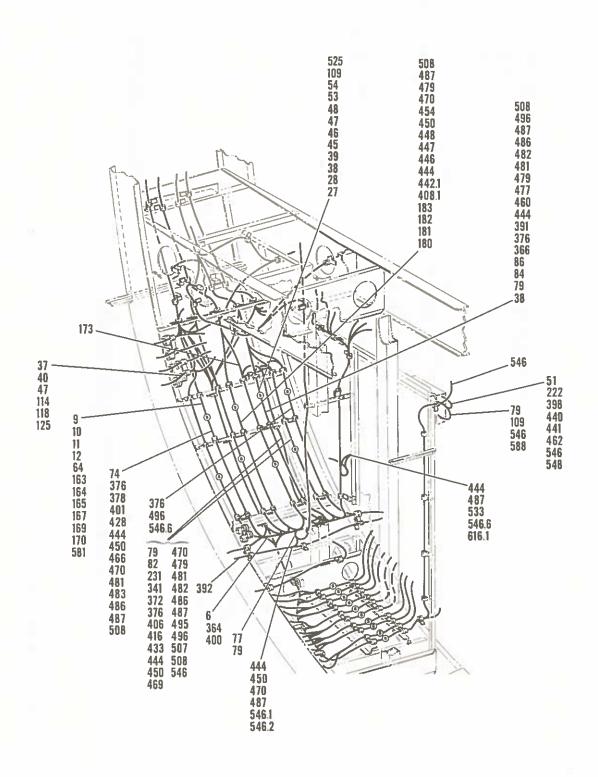

22.04_94.05.004-3

FIGURE	PART NUMBER NOMENCLATURE		PART NUMBER NOMENCLATURE		USAGE CODE		UNIT:	
NDEX NO.	- THE TOMBER	1 2 3 4 5 6	FROM	TO	ASSEME			
		RELAY PANEL AFT ELECTRICAL HARNESSES			1			
-548	22-61848	SEE 22-61004 - HARNESS ASSEMBLY, STA 306 DIODE TO GRAVITY	١,					
		AND ALTITUDE SWITCH PERMANENT SPLICE	'					
	320575 320574	. TERMINAL, CONVAIR 98-90805-013 -V00779-	1					
	36157	- TERMINAL, CONVAIR 98-90805-008 -V00779-	1					
-549	22-6169B	- HARNESS ASSEMBLY, PERMANENT SPLICE TO LH WING OVER HEAT DETECTOR LOOP PERMANENT SPLICE	1					
-551	22-62596-803	- HARNESS ASSEMBLY, FEED THRU U TO FLIGHT ENGINEER PERMANENT SPLICE	A					
	22-62596-1	HARNESS ASSEMBLY, FEED THRU U TO FLIGHT ENGINEER PERMANENT SPLICE	2	6				
	22-62596-5	- HARNESS ASSEMBLY, FEED THRU U TO FLIGHT ENGINEER PERMANENT SPLICE	7	7				
.550	320562	CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1					
-552	22-61818-1	- HARNESS ASSEMBLY, ANTI-ICE RELAY 3 TO PERMANENT SPLICE	A					
	22-61818	- HARNESS ASSEMBLY, ANTI-ICE RELAY 3 TO PERMANENT SPLICE	2	7				
-553	22-61618	- HARNESS ASSEMBLY, ACCELEROMETER STA 325 TO AUTOPILOT RACK PERMANENT SPLICE	1					
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	2	7				
-556	CT00E16S1S 22-62510	- CONNECTOR, CONVAIR 92-50293-008 -V71468-	<u>1</u>					
-230	22-02510	- HARNESS ASSEMBLY, THERMOCOUPLE SPLICE TO REAR SPAR FEED THRU LH	1					
-557	22-62511	- HARNESS ASSEMBLY, THERMOCOUPLE SPLICE TO REAR SPAR FEED THRU RH	1					
	CS3100C14S57S	. CONNECTOR, CONVAIR 92-50220-003 -V77820-	1					
	AN5548-3   AN5548-4	. TERMINAL, CONVAIR 98-90819-003 . TERMINAL, CONVAIR 98-90819-004						
	AN3420-6	- BUSHING						
-561	AN3U57-68 22-62579	FITTING						
-301	22-02314	- HARNESS ASSEMBLY, STA 375 PERMANENT SPLICE TO PRESSURE DISCONNECT	1 1					
	PT00E14-5S	- CONNECTOR, CONVAIR 92-50288-022 -V77820-	1					
		A AIRPLANES 1, 8 AND ON						
= =								
- 1								



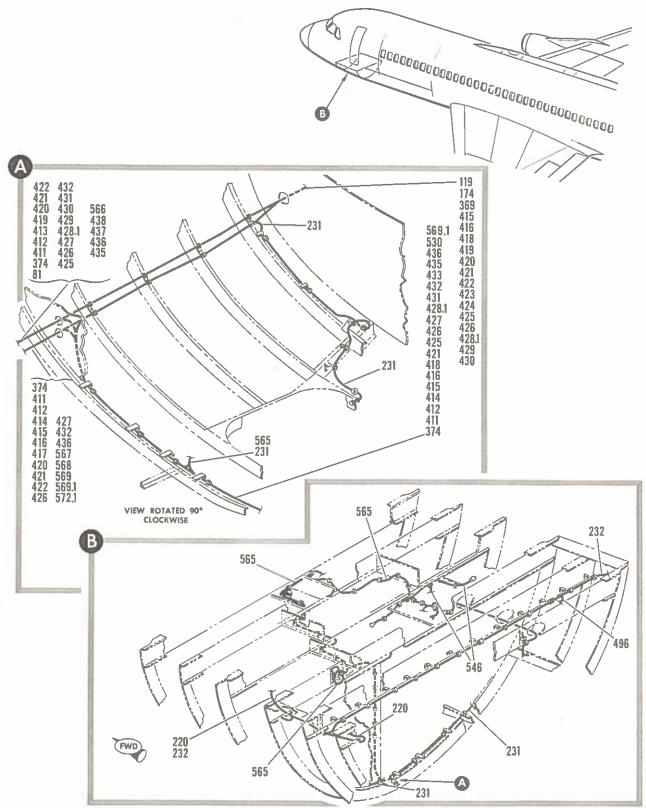

22.04 94.05.005

94-5 Page 22 ELECTRONIC AND ELECTRICAL COMPARTMENT SWITCH AND LIGHT ELECTRICAL HARNESSES FIGURE 4

Apr. 28/61 A


ELECTRONIC AND ELECTRIC COMPT


### ELECTRICAL HARNESSES CONVAIR 88 ILLUSTRATED PARTS CATALOG

FIGURE AND	PART NUMBER	UMBER NOMENCLATURE	USAGE CODE		UNIT	
INDEX NO.	THE TOMOGR	1 2 3 4 5 6		то	ASSEMB	
-565	22-61898	ELECTRONIC AND ELECTRICAL COMPARTMENT SWITCH AND LIGHT ELECTRICAL HARNESSES SEE 22-61004 - HARNESS ASSEMBLY, ELECTRONIC AND ELECTRICAL	1			
	36151 36153	COMPARTMENT LIGHTS TO SWITCH TERMINAL, CONVAIR 98-90805-001 -V00779- TERMINAL, CONVAIR 98-90805-003 -V00779-	1		12	
	- i					
		-3				
	20					



#### ILLUSTRATED PARTS CATALOG

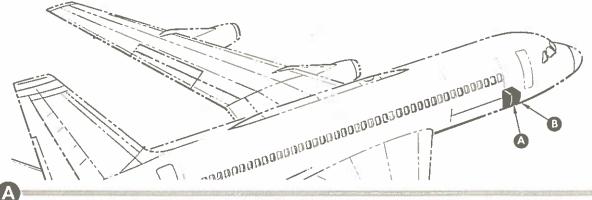


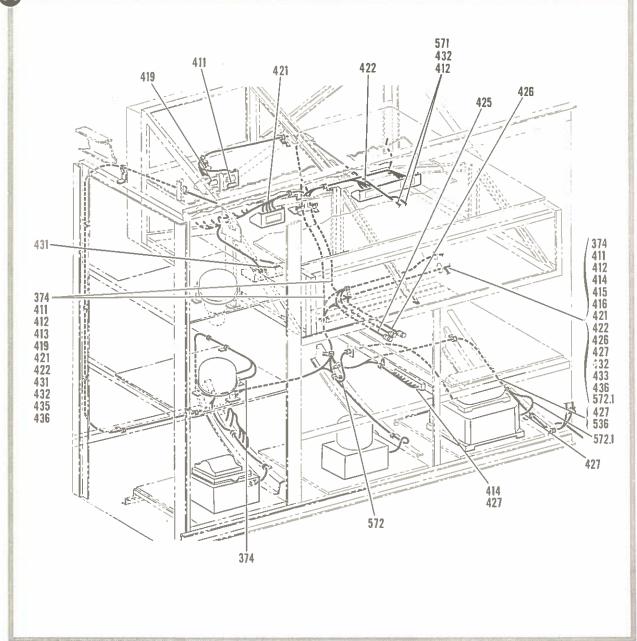


22.04 94.05.006-1A

94-5 Page 24 AUTOPILOT RACK ELECTRICAL HARNESSES FIGURE 5 (SHEET 1 OF 2)

Apr. 28/61 C



#### ILLUSTRATED PARTS CATALOG

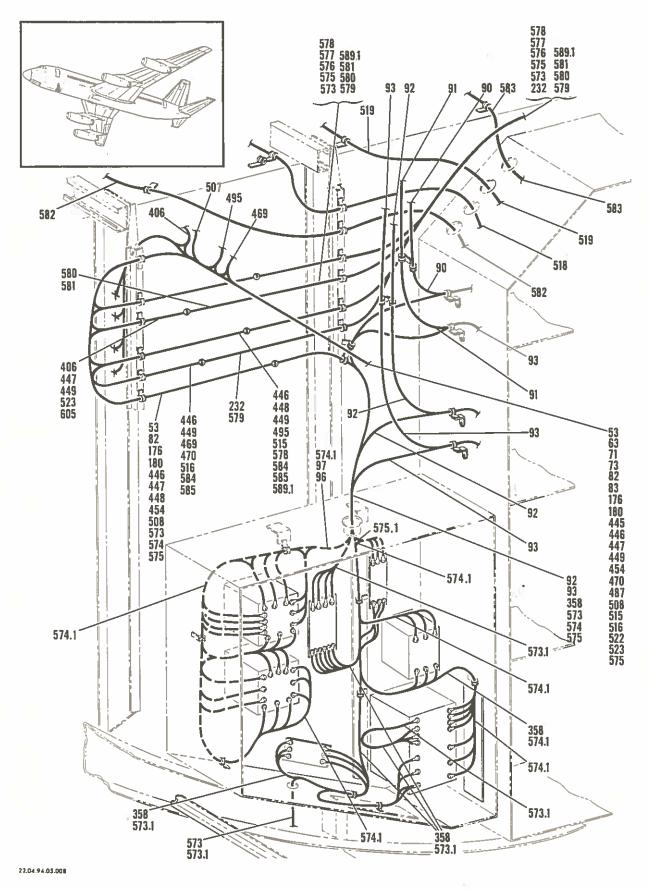

94-5 Page 28

AC EXTERNAL POWER JUNCTION BOX ELECTRICAL HARNESSES FIGURE 6

Apr. 28/61

FIGURE AND	PART NUMBER	NOMENCLATURE		GE DE	UNITS
NDEX NO.	I AKI HOMBEK		FROM	то	ASSEMB
		1 2 3 4 5 6			
		AC EXTERNAL POWER JUNCTION BOX ELECTRICAL HARNESSES SEE 22-61004			
-573.1	22-61778-1	. HARNESS ASSEMBLY. AC EXTERNAL POWER	1 1		] .
		RECEPTACLE TO AC JUNCTION BOX			
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		
	320562	CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		3
	YEAV6C-L1	- TERMINAL, CONVAIR 98-90806-005 -V09922-	1		1 3
:	YEAV6C-L2	- TERMINAL, CONVAIR 98-90806-008 -V09922-	!		
	320564 320574	. TERMINAL, CONVAIR 98-90805-014 -V00779-	1 1		13
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-			':
-574.1	22-61620-1	. HARNESS ASSEMBLY, EXTERNAL POWER JUNCTION			'
		BOX TO LIMITERS	1		
	320574	TERMINAL, CONVAIR 98-90805-010 -V00779-	1 1		15
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		11
	320564	TERMINAL, CONVAIR 98-90805-014 -V00779-	1		
	320562	CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1 1		!
	320559	- CONDUCTOR: CONVAIR 98-34001-003 -V00779-	1 1		
-575.1	22-61777-1	- HARNESS ASSEMBLY, SYNCHRONIZING BUS	1		
	PT06E14-15S	PROTECTION TO PERMANENT SPLICE  CONNECTOR, CONVAIR 92-40325-017 -V77820-	1 1		
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		
-576	22-61565-1	- HARNESS ASSEMBLY, GENERATOR AND BUS TIE	- 1 i l		
	22 01303 1	CONTACTOR 1 TO PERMANENT SPLICE	'		1
	PT06E18-32P	CONNECTOR, CONVAIR 92-40325-019 -V77820-	1 1		
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		
	320562	CONDUCTUR, CONVAIR 98-34001-001 -V00779-	1		1
	323975	- CONNECTOR, CONVAIR 98-34009-003 -V00779-	1 1		1
	320570	- CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1 1		
-577	22-61585	- HARNESS ASSEMBLY, PERMANENT SPLICE TO	1 1		
	700550	CURRENT TRANSFORMER UNIT 1			
	320559 320562	CONDUCTOR, CONVAIR 98-34001-003 -V00779- CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1 1		
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	;		
	CT06E16S1P	CONNECTOR, CONVAIR 92-40334-001 -V71468-	i		
	CT06E18-12P	- CONNECTOR CONVAIR 92-40334-011 -V71468-	i		
			'		1
			1		
					-
			1	1	1




ELECTRICAL HARNESSES ELECTRONIC AND


FIGURE AND	PART NIIMRED	PART NUMBER NOMENCLATURE		ART NUMBER NOMENCLATURE		GE DE	UNIT
IDEX NO.	1 ANT HOMBER		FROM	то	ASSEMI		
£ 70	20 (15/2 1	1 2 3 4 5 6					
-578	22-61567-1	- HARNESS ASSEMBLY, GENERATOR AND BUS TIE CONTACTOR 3 TO PERMANENT SPLICE	1				
	PT06E18-32P	- CONNECTOR, CONVAIR 92-40325-019 -V77820-	1 1				
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	i				
	320562	CONDUCTOR, CONVAIR 98-34001-001 -V00779-	i				
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	l i				
-580	22-61584	- HARNESS ASSEMBLY, PERMANENT SPLICE TO	1 1				
		CURRENT TRANSFORMER UNIT 2			1		
	CT06E18-12P	CONNECTOR, CONVAIR 92-40334-011 -471468-			1		
E01	CT06E16S1P	- CONNECTOR, CONVAIR 92-40334-001 -V71468-	1				
-581	22-61566-1	- HARNESS ASSEMBLY, GENERATOR AND BUS TIE CONTACTOR 2 TO PERMANENT SPLICE	וי ו				
	PT06E18-32P	CONNECTOR, CONVAIR 92-40325-019 -V77820-	11				
	320562	CONDUCTOR, CONVAIR 98-34001-001 -V00779-					
	320570	CONDUCTOR, CONVAIR 98-34001-002 -V00779-	l i l		ŀ		
	323975	- CONNECTOR, CONVAIR 98-34009-003 -V00779-	i				
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1				
-582	22-62532	- HARNESS ASSEMBLY, REAR SPAR TO GENERATOR	1				
		LINE AND BUS TIE CONTACTOR 4 RH	1 . 1				
503	YAEV6C-L2	- TERMINAL, CONVAIR 98-90806-008 -V09922-					
-583	22-62539	- HARNESS ASSEMBLY, REAR SPAR TO GENERATOR	1				
	YAEV6C-L2	LINE AND BUS TIE CONTACTOR 1 LH - TERMINAL, CONVAIR 98-90806-008 -V09922-	1,				
-584	22-61569	- HARNESS ASSEMBLY, GENERATOR BUS TIE	;				
		CONTACTORS TO PERMANENT SPLICE	'				
-585	22-61842	- HARNESS ASSEMBLY, CURRENT TRANSFORMER	1				
		CONTROL 1 PERMANENT SPLICE TO CURRENT					
		TRANSFORMER CONTROL 4 PERMANENT SPLICE					
	81						
			1 1				
			1 1				
		8					
			i I				
			1 1				
			1 1				
	•						
			i I				
					1		
			i I				
			i I				
		ł .	1				
		†	- 1				


POD AND PYLON





#### ILLUSTRATED PARTS CATALOG

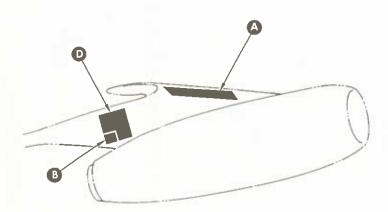

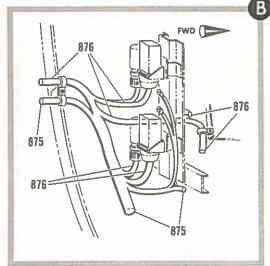

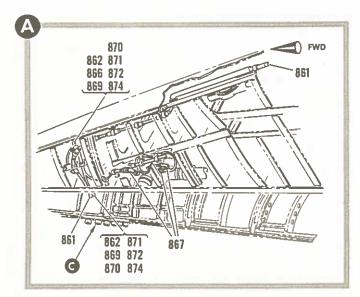

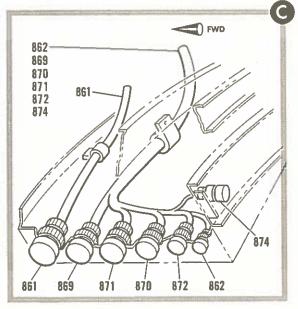

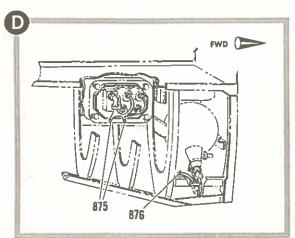

22.04.94.12.003-2

Feb. 10/62 A-2

POD AND PYLON 3 ELECTRICAL HARNESSES FIGURE 3 (SHEET 2 OF 2)


94-12 Page 15



### ILLUSTRATED PARTS CATALOG

FIGURE AND	PART NUMBER	NOMENCLATURE	<u>co</u>	GE DE	UNITS
DEX NO.	I WILL HOWNER		FROM	TO	ASSEMBI
		1 2 3 4 5 6		_	REF
041	22 44002	POD AND PYLON 3 ELECTRICAL HARNESSES  HARNESS ASSEMBLY, PYLON 3 A C GENERATOR	1 1		KEF
-861	22-64902	FIREWALL DISCONNECT TO REAR SPAR	' '		'
	AN3057-20A	. ADAPTER	1 1		1
	YAEV6C-L	. TERMINAL, CONVAIR 98-90806-006 -V09922-	- i i		l i
	F#00-32-17P	. CONNECTOR, CONVAIR 92-50292-004 -V71468-	i		i
-862	22-64918	- HARNESS ASSEMBLY, PYLON 3 OIL QUANTITY	i		i
002	22 04710	FIREWALL DISCONNECT TO REAR SPAR			`
	1-817-1	PLUG, CONVAIR 92-47000-020 -V95712-	1 1		l i
	CA00KE12S3S	CONNECTOR, CONVAIR 92-50291-008 -V71468-	i		l i
-863	22-64932	- HARNESS ASSEMBLY, PYLON 3 FIRE	1 1		1
		EXTINGUISHER AND DETECTOR TO REAR SPAR			
	225-0017-000	PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-	1		1:
	CA00KE2219S	CONNECTOR, CONVAIR 92-50291-005 -V71468-	1		1
-864	22-64928	. HARNESS ASSEMBLY, PYLON 3 REFUEL DEFUEL	1		1
		PANEL DISCONNECT TO REAR SPAR			
	CT00E2812S	- CONNECTOR, CONVAIR 92-50293-026 -V71468-	1		
-865	22-64936-1	. HARNESS ASSEMBLY, PYLON 3 HYDRAULIC	A		1
		VALVE TO REAR SPAR			
	22-64936	- HARNESS ASSEMBLY, PYLON 3 HYDRAULIC	2	6	'
		VALVE TO REAR SPAR			
	225-0017-000	PLUG, CONVAIR 96-91200-007 -V71468-	1		3
	320562	SPLICE, CONVAIR 98-34001-001 -V00779-	1 1		:
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		1
	PT06E10-6S	CONNECTOR, CONVAIR 92-40325-008 -V06840-	1		
-866	22-64941	- HARNESS ASSEMBLY, PYLON 3 BLEED AIR	1		
		VALVE FIREWALL DISCONNECT TO REAR SPAR			l .
	225-0017-000	- PLUG, CONVAIR 96-91200-007 -V71468-	1		3
	CA06KE14S2S	CONNECTOR, CONVAIR 92-40327-004 -V71468-	1 1		
-867	22-64938-1	. HARNESS ASSEMBLY, PYLON 3 BLEED AIR	1		1 '
		VALVE TO FIREWALL DISCONNECT			
	AN3057-4A	- ADAPTER	1		
	225-0017-000	- PLUG. CONVAIR 96-91200-007 -V71468-			
	CA310BKE10SL4S	- PLUG, CONVAIR 92-40341-007 -V71468-			1
	320574	. TERMINAL, CONVAIR 98-90805-010 -V00779- . TERMINAL, CONVAIR 98-90305-003 -V00779-	i		
	36153		l i		
	CAOOKE1452P	CONNECTOR, CONVAIR 92-50291-001 -V71468- CONNECTOR, CONVAIR 92-40332-003 -V71468-	i		
-868	EX06~12535	. HARNESS ASSEMBLY, PYLON 3 FUEL SHUTOFF	l i		
-600	22-64949	VALVE TO REAR SPAR			
	225-0017-000	PLUG. CONVAIR 96-91200-007 -V71468-	1		
	CA06KE14S5S	CONVECTOR, CONVAIR 92-40327-001 -V71468-			1
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	i		
	30133	The state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the state of the s	1		
		A AIRPLANES 1, 7 AND ON			
					1
					1
				1	
	1			I	1
	1				




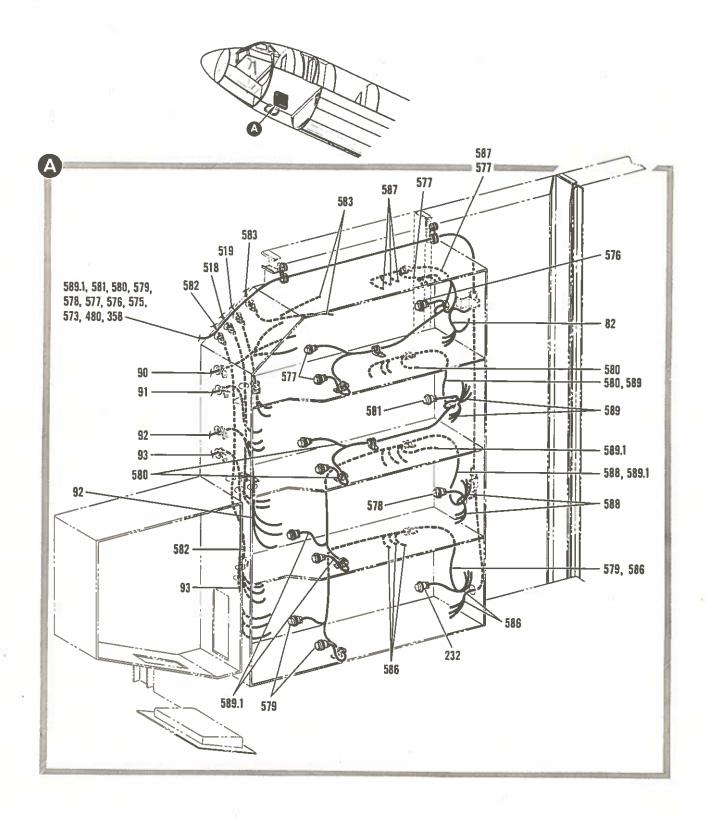

ELECTRICAL HARNESSES ELECTRONIC AND

### CONVAIR 88 ELECTRICAL COMPT ILLUSTRATED PARTS CATALOG

FIGURE AND	PART NUMBER	NOMENCLATURE	USA		UNITS
NDEX NO.	- / NO HOMBER		FROM	то	ASSEMB
		1 2 3 4 5 6 AC INTERNAL POWER JUNCTION BOX ELECTRICAL			
		HARNESSES SEE 22-61004			
-586	22-61838	- HARNESS ASSEMBLY, GENERATOR 4 LINE AND BUS	1		1
-587	22-61839	TIE CONTACTORS TO LIMITERS - HARNESS ASSEMBLY, GENERATOR 1 LINE AND BUS	1 1		1
501		TIE CONTACTORS TO LIMITERS	'		
-588	22-61840	. HARNESS ASSEMBLY, GENERATOR 3 LINE AND BUS	1 1		'
-589	22-61841	TIE CONTACTORS TO LIMITERS  HARNESS ASSEMBLY, GENERATOR 2 LINE AND BUS	1 1		1
		TIE CONTACTORS TO LIMITERS			1
	320574 320564	. TERMINAL, CONVAIR 98-90805-010 -V00779- . TERMINAL, CONVAIR 98-90805-014 -V00779-			
-589.1	22-61583	- HARNESS ASSEMBLY, PERMANENT SPLICE TO	i		1
		CURRENT TRANSFORMER UNIT 3			
	CT06E18-12P CT006E16S1P	CONNECTOR, CONVAIR 92-40334-011 -V71468- CONNECTOR, CONVAIR 92-40334-001 -V71468-			
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	i		
	320559	CONDUCTOR: CONVAIR 92-34001-003 -V00779-	1		1
	320562	- CONDUCTOR, CONVAIR 92-34001-001 -V00779-	1		1
	1			321	
		l e e e e e e e e e e e e e e e e e e e			
					1
					!



ELECTRICAL HARNESSES
FUSELAGE FWD
COMPT UNDERFLOOR

## OSS RIAVNOD

ILLUSTRATED PARTS CATALOG

Feb. 10/62


FWD CARGO COMPARTMENT UNDERFLOOR ELECTRICAL HARNESSES FIGURE 1 (SHEET 5 OF 7)


94-6 94-6



COMPT UNDERFLOOR ENSEIVCE EMD ELECTRICAL HARNESSES

DOJATAD STRATED PARTS CATALOG

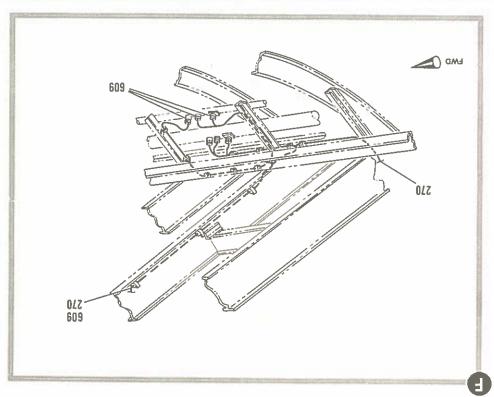

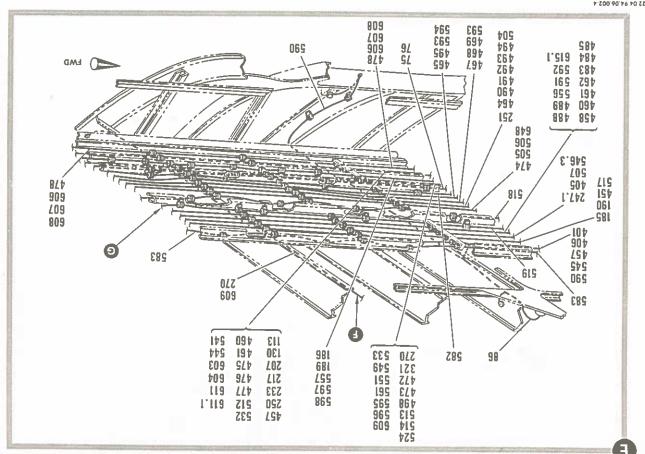


33:04 64:09:003:4

COMPT UNDERFLOOR

FUSCIRICAL HARNESSES



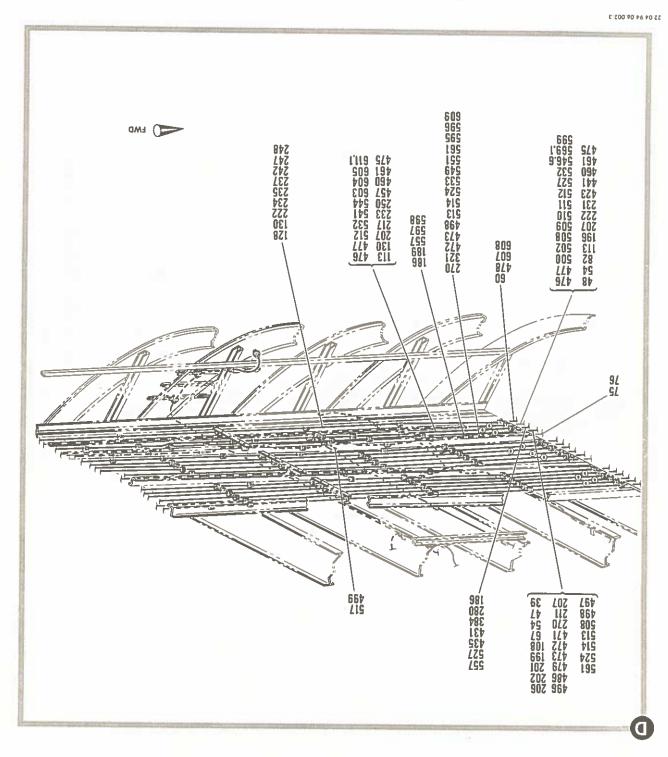

Feb. 10/62

FWD CARGO COMPARTMENT UNDERFLOOR
FIGURE I (SHEET 3 OF 7)

94-6 Page 4



COMPT UNDERFLOOR ENSEIVCE EMD ELECTRICAL HARNESSES CONVAIR 88

ILLUSTRATED PARTS CATALOG


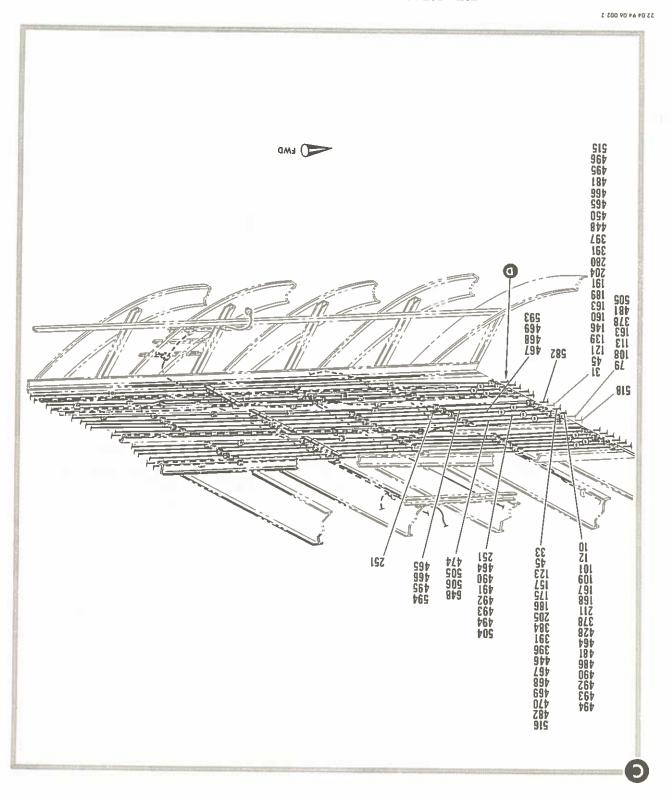



FIGURE 1 (SHEET S OF 7) ETECIFICAL HARNESSES EWD CARGO COMPARTMENT UNDERFLOOR


¥-\$ ¥-\$ TO\62

COMPT UNDERFLOOR ENZEIVGE EMD ELECTRICAL HARNESSES

ILLUSTRATED PARTS CATALOG CONVAIR 88

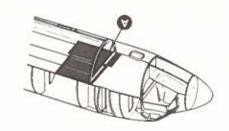

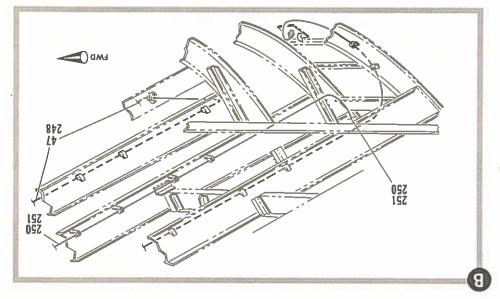

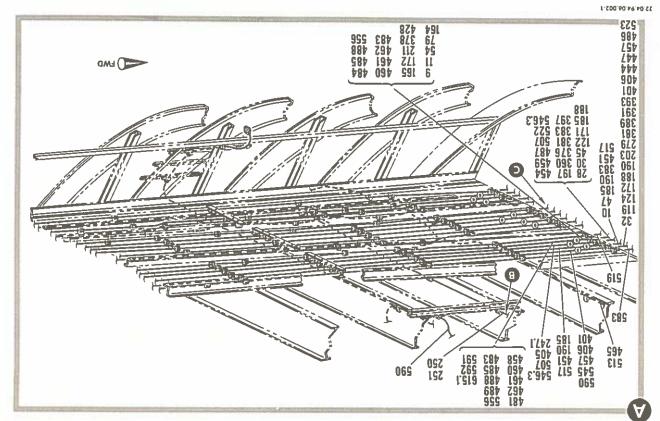

S-A Feb. 10/62

EIGNEE J (SHEEL J OF 7) ELECTRICAL HARNESSES FWD CARGO COMPARTMENT UNDERFLOOR

9-46

Page 2




ELECTRICAL HARNESSES FUSELAGE FWD COMPT UNDERFLOOR

RECLION A

Chapter 94 Chapter 94

FUSEIAGE FWD COMPARTMENT UNDERFLOOR ELECTRICAL HARNESSES

94-6 Page 1 Feb. 10/62



					<u> </u>
			. W		
l l l		L L	. HERNESS ASSEMBLY, ACCELEROMETER STR 338 TO AUTOPILOT RACK PERMANENT SPLICE . TERMINAL, CONVAIR 98-90805-003 -V00779 TOUNECTOR, CONVAIR 92-50293-017 -V71468 HARNESS ASSEMBLY, YAN DAMPER TESTER TO PERMANENT SPLICE . CONNECTOR, CONVAIR 92-40317-003 -V17419-	DM6100-312 CL00E16515W 36153	
t t	9	- S S	SEE 22-61004  - CONNECTOR, CONVAIR 92-40334-004 -V00779 CONNECTOR, CONVAIR 92-40334-019 -V00779 CONNECTOR, CONVAIR 92-40334-019 -V00779-	22-61653 CT06E1452P 22-61653 22-61693	172-
DNITS PER ASSEMBLY		ASU CO MOFF	NOMENCLATURE 1 2 3 4 5 6 NOMENCLATURE 1 2 3 4 5 6 NOMENCLATURE	язамим тяда	EIGURE FIGURE FIGURE




ELECTRONIC AND


33'04'64'02'009-3V

FLECTRICAL HARNESSES
POD AND PYLON



ILLUSTRATED PARTS CATALOG

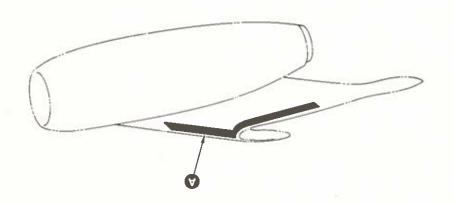


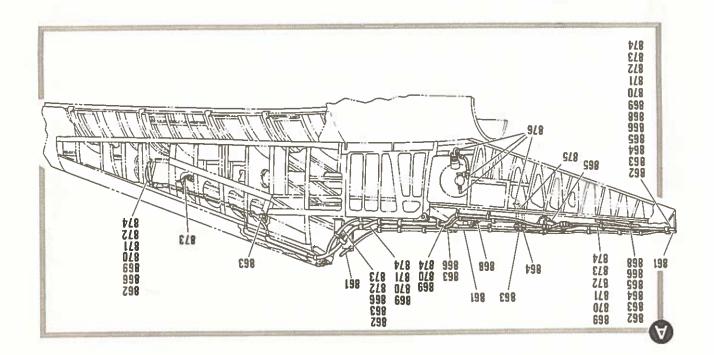

33'04'64'13'002'1



#### 611.1 603 217 546.3 607 76 247.1 185 606 75 247.1 185 `5**8**3 546.3 **48B** 611.1 FWD

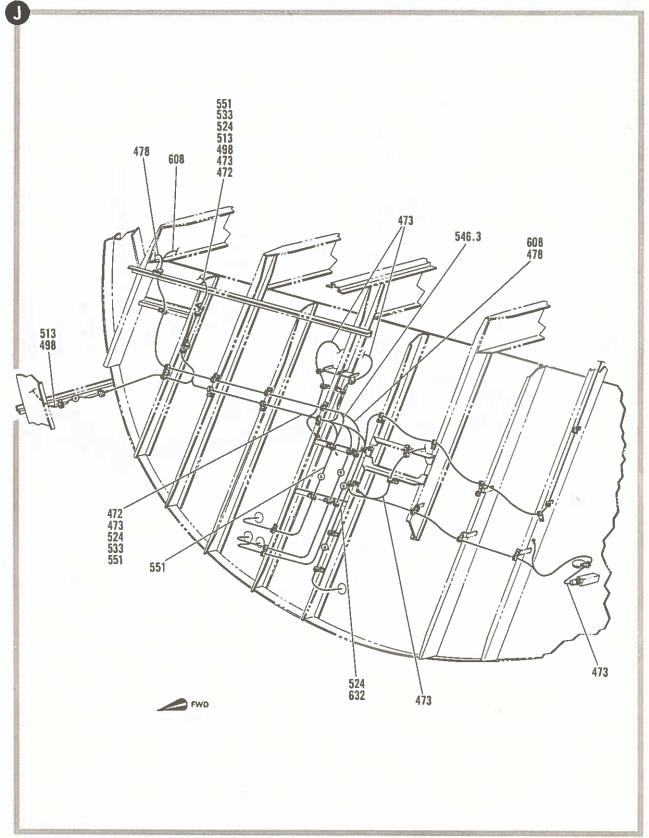

22.04 94.06.002-7A

FIGURE		NOMENCLATURE	USA		UNITS
AND IDEX NO.	PART NUMBER		FROM	то	ASSEMBL
		1 2 3 4 5 6			
		FORWARD CARGO COMPARTMENT UNDERFLOOR ELECTRICAL HARNESSES SEE 22-62000			
** 0. 8	20 40410	. HARNESS ASSEMBLY. FWD CARGO COMPARTMENT	1		1 1
-590	22-62612	LIGHTS TO PERMANENT SPLICE	'		
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		4
	36151	- TERMINAL - CONVAIR 98-90805-001 -V00779-	1 1		10
	A4149	. INSULATOR. CONVAIR 95-07002-001 -V72914-	1 1		1
	Alli	. NUT. CONVAIR 96-35004-001 -V72914-	1 1		!
	A1783	- SPRING, CONVAIR 98-36008-009 -V72914-	1		] ]
	AN3046-3	- TERMINAL	1		! !
-591	22-62501	. HARNESS ASSEMBLY. FEED THRU E TO PERMANENT	1		1
		SPLICE	1		1
-592	22-62541	- HARNESS ASSEMBLY, INSTRUMENT PANEL	' '		'
		PERMANENT SPLICE TO FEED THRU PANEL W LH	1		] 3
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779- . HARNESS ASSEMBLY, STA 375 PERMANENT SPLICE	i		- 43
-593	22-62626	TO REAR SPAR FEED THRU PERMANENT SPLICE	1 '		1 '
		ENGINE 4			
E 0 1	22-42424	. HARNESS ASSEMBLY, STA 375 PERMANENT SPLICE	1		1 1
-594   22-62624	22-02024	TO REAR SPAR FEED THRU PERMANENT SPLICE			
	ENGINE 3				
	320559	. SPLICE. CONVAIR 98-34001-003 -V00779-	1		1 5
-595	22-61699	. HARNESS ASSEMBLY. PERMANENT SPLICE TO	1		1
		WING OVERHEAT DETECTOR LOOP			
		PERMANENT SPLICE RH			
				ļ	
			l	l	
				l	
				l	
				l	
				1	
			- 1		
				1	
			i		1
	1		1		111
			j		
				l	
			-		-
					-
				Í	1
			ļ		00
			1		
				1	
			1	1	
					1
				1	
				1	
			1	İ	



ELECTRICAL HARNESSES
FUSELAGE FWD COMPT
UNDERFLOOR

#### USAGE **FIGURE** UNITS CODE AND **PART NUMBER** NOMENCLATURE PER INDEX NO. FROM ASSEMBLY 2 3 4 5 6 HARNESS ASSEMBLY, FEED THRU V TO FLIGHT -596 22-62537-805 A ENGINEER PERMANENT SPLICE . HARNESS ASSEMBLY. FEED THRU V TO FLIGHT 22-62537-5 2 7 1 ENGINEER PERMANENT SPLICE HARNESS ASSEMBLY, COPILOT FLUX GATE REAR SPAR DISCONNECT TO PERMANENT SPLICE HARNESS ASSEMBLY, PILOT FLUX GATE REAR SPAR 1 -59722-62551 1 -598 22-62550 1 1 DISCONNECT TO PERHANENT SPLICE . CONDUCTOR, CONVAIR 98-34001-003 -V00779-. CONDUCTOR, CONVAIR 98-34001-001 -V00779-. CONNECTUR, CONVAIR 92-50293-005 -V71468-HARNESS ASSEMBLY, MOVABLE CLOSET PERMANENT SPLICE STA 400 TO PERMANENT SPLICE 320559 5 320562 CT00E14S6P 1 -599 22-62635 1 STA 660 • HARNESS ASSEMBLY. MOVABLE CLOSET PERMANENT SPLICE STA 660 TO PERMANENT SPLICE STA 737 22-62635-1 1 1 -600- HARNESS ASSEMBLY, MOVABLE CLOSET PERMANENT SPLICE STA 737 TO PERMANENT SPLICE 22-62635-3 1 1 -601STA 813 - HARNESS ASSEMBLY, MOVABLE CLOSET PERMANENT SPLICE STA 813 TO PERMANENT SPLICE -602 22-62635-5 STA 889 . HARNESS ASSEMBLY: REAR SPAR PERMANENT -603 22-62513-803 SPLICE TO STA 375 PERMANENT SPLICE 22-62513 . HARNESS ASSEMBLY. REAR SPAR PERMANENT 2 7 SPLICE TO STA 375 PERMANENT SPLICE AIRPLANES 1, 8 AND ON

FIGURE		NOMENCLATURE	COI	GE DE	UNITS
AND NDEX NO.	PART NUMBER		FROM	то	ASSEMBL
-604	22-62502	1 2 3 4 5 6  - HARNESS ASSEMBLY, FLIGHT RECORDER TO REAR SPAR PERMANENT SPLICE	1		1
-605	DM9700-7S DM9700-19S 22-62569-1	. PLUG, CONVAIR 92-40317-001 -V17419- . PLUG, CONVAIR 92-40317-005 -V17419- . HARNESS ASSEMBLY, STA 375 PERMANENT SPLICE			i
-606	22-61835	TO PERMANENT SPLICE  HARNESS ASSEMBLY, CABIN PICKUP TO PERMANENT SPLICE			1
-608	CT06E14S9S 22-62627-1	. CONNECTOR, CONVAIR 92-40334-004 -V71468- HARNESS ASSEMBLY, REAR SPAR SPLICE TO AC DISTRIBUTION BOX PERMANENT SPLICE	1		1 6
-609	320570 22-61808	. CONDUCTOR, CONVAIR 98-34001-002 -V00779- HARNESS ASSEMBLY, FLIGHT DECK THERMAL SWITCH TO PERMANENT SPLICE	1 1		i





SECTION V


Chapter 94 ELECTRICAL HARNESSES


FUSELAGE WING SECTION UNDERFLOOR ELECTRICAL HARNESSES



ELECTRICAL HARNESSES
FUSELAGE WING
SECTION UNDERFLOOR


### ILLUSTRATED PARTS CATALOG S

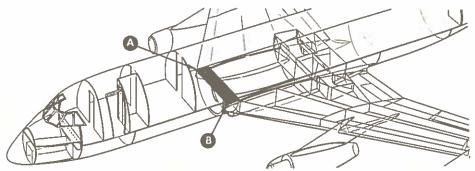

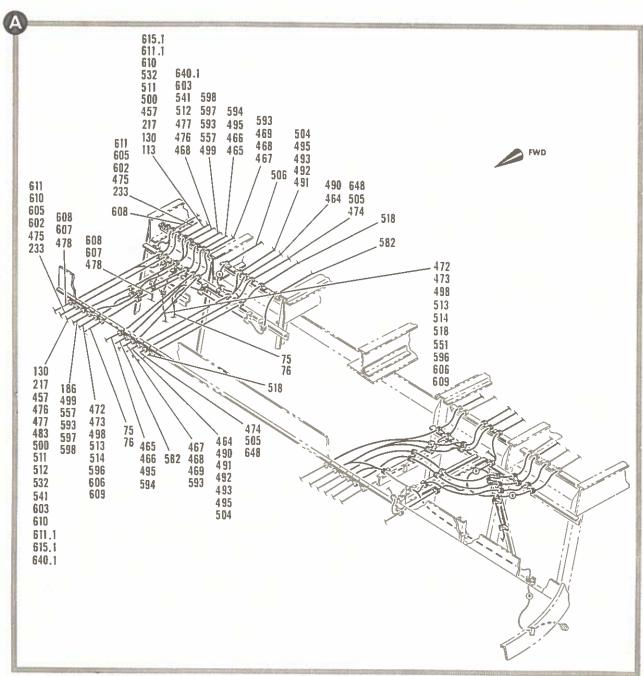

22.04.94.07.002-1

## CONVAIR 88 SECTION UNDERFLOOR ILLUSTRATED PARTS CATALOG

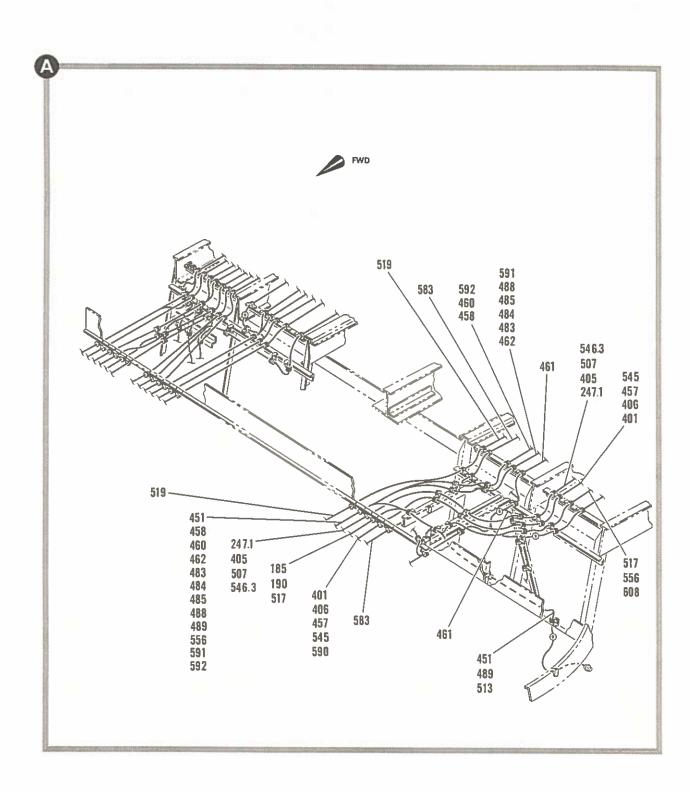

22.04.94.07.002.2


Apr. 28/61

UNDERFLOOR FRONT SPAR OVERWING ELECTRICAL HARNESSES FIGURE 1 (SHEET 2 OF 2)



### ILLUSTRATED PARTS CATALOG SECTION UNDERFLOOR


FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNITS
INDEX NO.	I AKI NOMBER		FROM	то	ASSEMBLY
1		1 2 3 4 5 6 UNDERFLOOR FRONT SPAR OVERWING			
-610	22-62563-1	ELECTRICAL HARNESSES SEE 22-62001 - HARNESS ASSEMBLY, BYPASS PRESSURE MODULATOR TO PERMANENT SPLICE	1		1
	PTO6EB-4S	CONNECTOR, CONVAIR 92-40325-006 -V06840-	1 1		1
-611	320574 22-62564-1	. TERMINAL, CONVAIR 98-90805-010 -V00779-	1 1		1
-811		PERMANENT SPLICE	'		
	PC06E16-26S CT00E24-28S	. CONNECTOR, CONVAIR 92-40320-001 -V06840- . RECEPTACLE, CONVAIR 92-50293-015 -V71468-	1		1
	36153	- TERMINAL, CONVAIR 98-90805-003 -V71468-	i		3
	024048-0000	CONTACT, CONVAIR 92-63901-012 -V71468- CONTACT, CONVAIR 92-63901-011 -V71468-			2
	225-0017-000	PLUG, CONVAIR 96-91200-007 -V71468-	i		1
	320559 PC06E16-26S	. CONDUCTOR, CONVAIR 98-34001-003 -V00779- . CONNECTOR, CONVAIR 92-40320-001 -V06840-			1
-611.1	22-62504	- HARNESS ASSEMBLY, REAR SPAR PERMANENT	i		i
	320559	SPLICE TO PERMANENT SPLICE . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1		15
			'		
			1		
		- 5			
					1
					1
			1		
					1






ELECTRICAL HARNESSES
FUSELAGE WING
SECTION UNDERFLOOR


### ILLUSTRATED PARTS CATALOG

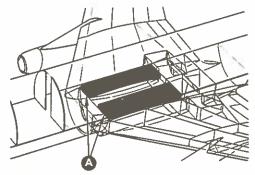

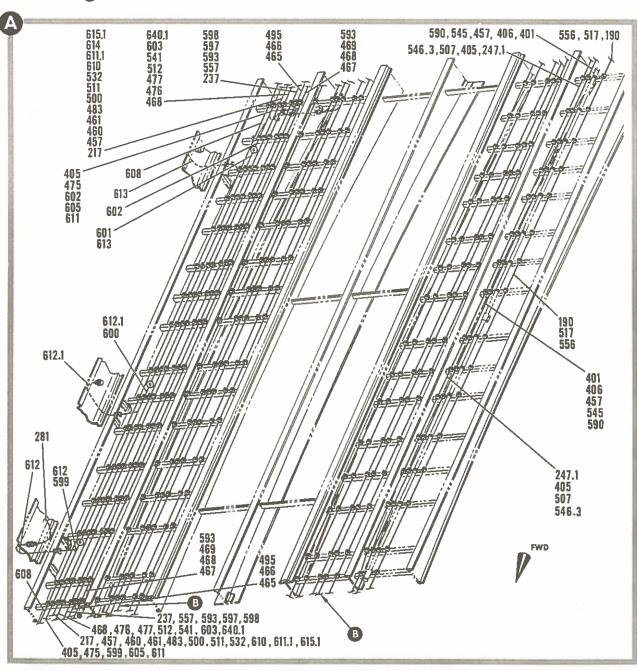

22.04.94.07.003-1

94-7 Page 6 OVERWING ELECTRICAL HARNESSES FIGURE 2 (SHEET 1 OF 2) Apr. 28/61

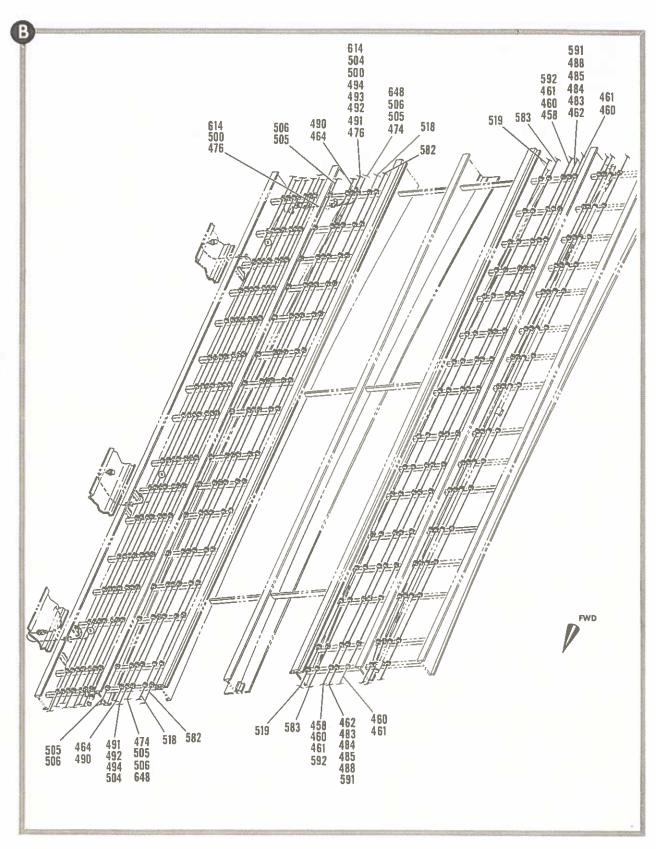


22.04.94.07,003.2




ELECTRICAL HARNESSES
FUSELAGE WING
SECTION UNDERFLOOR


### USAGE **FIGURE** UNITS CODE **PART NUMBER** AND **NOMENCLATURE** PER INDEX NO. FROM TO ASSEMBLY 1 2 3 4 5 6 OVERWING ELECTRICAL HARNESSES SEE 22-62001 . HARNESS ASSEMBLY, CLOSET RECEPTACLE -612 22-63612 1 1 STA 661 TO PERMANENT SPLICE - HARNESS ASSEMBLY; CLOSET RECEPTACLE TO -612-1 22-63613 ì 1 PERMANENT SPLICE RECEPTACLE, CONVAIR 92-50288-010 -V77820-PT00E8-45 . . COVER, CONVAIR 92-74211-004 -V77820-. HARNESS ASSEMBLY, CLOSET RECEPTACLE 10-101960-83 22-63614 -613 ì STA 813 TO PERMANENT SPLICE RECEPTACLE, CONVAIR 92-50288-010 -V77820-PT00E8-45 1 . COVER, CONVAIR 92-74211-004 -V77820. HARNESS ASSEMBLY, REAR SPAR FEED THRU PANELS TO PERMANENT SPLICE RH . CONDUCTOR, CONVAIR 98-34001-003 -V00779. CONDUCTOR, CONVAIR 98-34001-001 -V00779-10-101960-83 -614 22-62544 1 320559 1 6 320562 2





### ILLUSTRATED PARTS CATALOG SECTION UNDERFLOOR

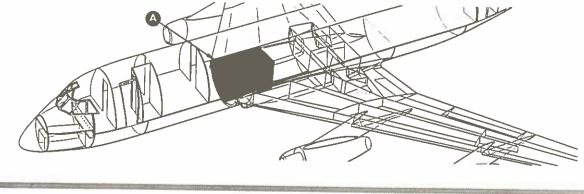

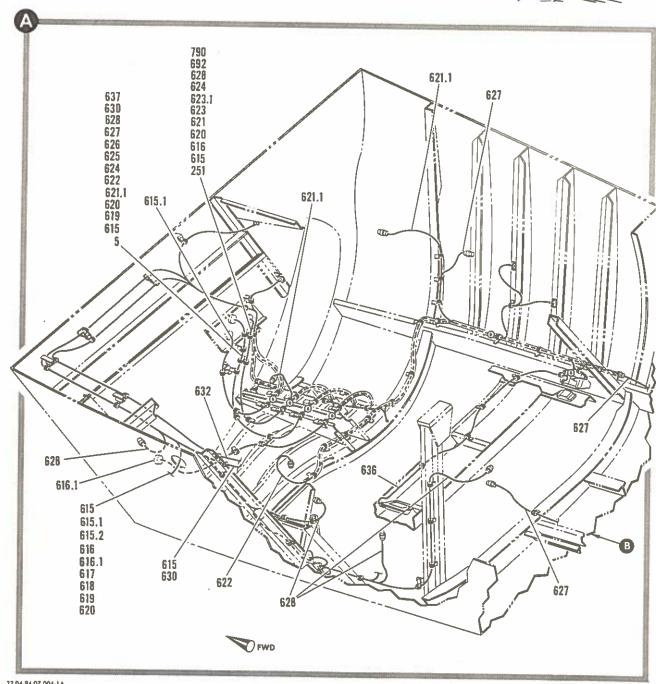

22.04.94.07.004-1A

94-7 Page 10 PLENUM AREA UNDERFLOOR STA 640 TO 926 RH ELECTRICAL HARNESSES FIGURE 3 (SHEET 1 OF 3)

Apr. 28/61


#### HSAGE UNITS FIGURE CODE NOMENCLATURE PER AND PART NUMBER FROM TO ASSEMBLY INDEX NO. 3 4 PLENUM AREA UNDERFLOOR STA 640 TO 926 RH ELECTRICAL HARNESSES SEE 22-62001 . HARNESS ASSEMBLY, FEED THRU V TO PLENUM Α 1 -61522-62535-803 CHAMBER LH . HARNESS ASSEMBLY, FEED THRU V TO PLENUM 2 6 1 22-62535-1 CHAMBER LH HARNESS ASSEMBLY. FEED THRU V TO PLENUM 7 7 1 22-62535-5 CHAMBER LH . CONNECTOR, CONVAIR 92-40334-005 -V71468-. CONNECTOR, CONVAIR 92-40332-001 -V71468-3 CT06E18-11S EX06-105L3S . . CONTACT, CONVAIR 92-63901-012 -V71468-7 024048-0000 CONNECTOR, CONVAIR 92-40332-002 -V71468 TERMINAL, CONVAIR 98-90805-003 -V/0779-3 EX06-105L45 AR 36153 Α . TERMINAL, CONVAIR 98-90805-003 -V00779-2 36153 7 . TERMINAL, CONVAIR 98-90805-003 -V00779-7 AR 36153 CONTACT, CONVAIR 92-63901-011 -V71468-2 024049-0000 . HARNESS ASSEMBLY, PLENUM CHAMBER FEED THRU TO ACCELERATION TRANSMITTER 5 1 6 -615.1 22-62608 - CONNECTOR, CONVAIR 92-40332-004 -V71468-- CONNECTOR, CONVAIR 92-40334-004 -V71468-5 ó EX06-1452S CT06E14S9S CONNECTOR, CONVAIR 92-40325-040 -V71468-PT06E14-5P HARNESS ASSEMBLY, FLIGHT DECK AIR CONDITION PROGRAMMER TO PERMANENT SPLICE 1 -615.2 22-62572-1 CONNECTOR, CONVAIR 92-40332-016 -V71468-EX06-22-14S CONNECTOR, CUNVAIR 92-40332-016 -V/1468-CONNECTOR, CONVAIR 96-91200-007 -V71468-CONTACT, CONVAIR 92-63901-012 -V71468-225-0017-000 12 024048-0000 7 024049-0000 TERMINAL, CONVAIR 98-90805-003 -V00779-36153 HARNESS ASSEMBLY, TURBO COMPRESSOR PACKAGE TO TEMPERATURE CONTROL SPLICE 1 -616 22-62582-1 • CONNECTOR, CONVAIR 92-40332-001 -V71468-• CONNECTOR, CONVAIR 92-40332-016 -V71468-1 EX06-10\$L3\$ EX06-22-14S CONTACT, CONVAIR 92-63901-012 -V71468-22 024048-0000 . HARNESS ASSEMBLY, FEED THRU PANEL AC -616.1 22-62576 TO ACCELEROMETERS - CONNECTOR, CONVAIR 92-50293-008 -V71468-- CONNECTOR, CONVAIR 92-50293-017 -V71468-- TERMINAL, CONVAIR 98-90805-003 -V00779-2 CT00E16SIS CTODE16S1SW 3 1 36153 CONDUCTOR, CONVAIR 98-34001-003 -V00779ì 1 320559 . HARNESS ASSEMBLY. FLIGHT DECK CONDENSER 7 1 -61722-62583-1 TEMPERATURE PLUGS TO PERMANENT SPLICE HARNESS ASSEMBLY. FLIGHT DECK CONDENSER 8 1 22-62583-3 TEMPERATURE PLUGS TO PERMANENT SPLICE - CONNECTOR, CONVAIR 92-40334-006 -V71468-- CONNECTOR, CONVAIR 92-40334-018 -V71468-CT06E18-19S CT06F1B-8S-C22 . . TERMINAL, CONVAIR 98-90805-003 -V00779-1 36153 AIRPLANES I 8 AND ON



### ILLUSTRATED PARTS CATALOG SECTION UNDERFLOOR

FIGURE AND	PART NUMBER	NOMENCLATURE		IDE	UNIT
NDEX NO.		1 2 3 4 5 6	FROM	то	ASSEME
-618	22-62587-1	. HARNESS ASSEMBLY. FLIGHT DECK CONDENSER	1		1
		FAN TO RELAY			
	MS3108E10SL3S AN3057-48	- CONNECTOR, CONVAIR 92-40316-006	1 1		] ]
	BH-1CUCMA	AND TRANSMITTER TO FEED THRU V	1		2
-619	22-62629-1	- HARNESS ASSEMBLY. FLIGHT DECK FLOW SENSOR	1		,
		AND TRANSHITTER TO FEED THRU V	'		'
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		1 1
	MC11E10-6SN	CONNECTOR. CONVAIR 92-40179-002 -V71468-	1 1		1
-620	22-62634-801	- HARNESS ASSEMBLY; CABIN AIR RECIRCULATING	A		1 1
	22-62634-5	VALVE TO PERMANENT SPLICE - HARNESS ASSEMBLY, CABIN AIR RECIRCULATING	2	7	
	02021	VALVE TO PERMANENT SPLICE	-	' '	'
	CT06E18-19S	- CONNECTOR, CONVAIR 92-40332-006 -V00779-	I A I		;
	CA3106E18-85	CONNECTOR, CONVAIR 92-40334-018 -V71468-	2	7	-
	CA3106E18-BS	- CONNECTOR, CONVAIR 92-40334-018 -V71468-	A		Al
-621	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	!		AF
-021	22-62512-1	- HARNESS ASSEMBLY, FLIGHT DECK MODULATION VALVE TO PERMANENT SPLICE	1		
	CT06E18-19S	CONNECTOR: CONVAIR 92-40334-006 -V71486-	1 1		;
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	/ i		:
-621.1	22-62536-1	- HARNESS ASSEMBLY. FEED THRU U TO PLENUM	l il		1 3
	74.15.	CHAMBER RH			
	36153 024048-0000	- TERMINAL, CONVAIR 98-90805-003 -V00779-	!		
	CT06E18-11S	- CONTACT, CONVAIR 92-63901-012 -V71468- - CONNECTOR, CONVAIR 92-40334-005 -V71468-	;		'
	EX06-10SL4S	. CONNECTOR: CONVAIR 92-40332-002 -V71468-			
-622	22-62545-3	- HARNESS ASSEMBLY, CABIN AIR VALVES TO	I A I		'
		PERMANENT SPLICE	"		
	22-62545	- HARNESS ASSEMBLY, CABIN AIR VALVES TO	2	7	
	CT06E18-19S	PERMANENT SPLICE	.		
-623	22-62584-1	- CONNECTOR, CONVAIR 92-40334-006 -V71468- - HARNESS ASSEMBLY, FLIGHT DECK FREON	1 1		
		COMPRESSOR TO RELAY	'		
	024048-0000	- CONTACT, CONVAIR 92-63901-012 -V71468-	1 1		
	024049-0000	- CONTACT, CONVAIR 92-63901-011 -V71468-	i		1:
	225-0017-000	- PLUG, CONVAIR 96-91200-007 -V71468-	!		1
	323975   36153	. CONDUCTOR, CONVAIR 98-34009-003 -V00779- . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
	EX06-22-145	- PLUG. CONVAIR 92-40332-016 -V71468-	;		-
-623.1	22-64536	. HARNESS ASSEMBLY, FEED THRU PANEL P TO			
		ENGINE 3 REAR SPAR PERMANENT SPLICE			
		A AIRPLANES 1, 8 AND ON			

### CONVAIR 88 SECTION UNDERFLOOR ILLUSTRATED PARTS CATALOG

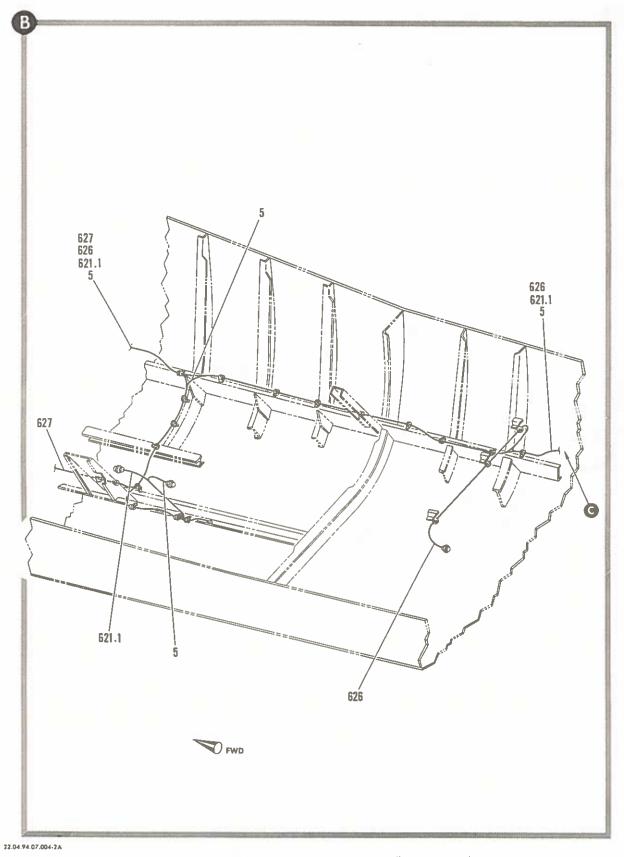


Apr. 28/61

PLENUM AREA UNDERFLOOR STA 640 TO 926 RH ELECTRICAL HARNESSES FIGURE 3 (SHEET 2 OF 3)



### ILLUSTRATED PARTS CATALOG SECTION UNDERFLOOR

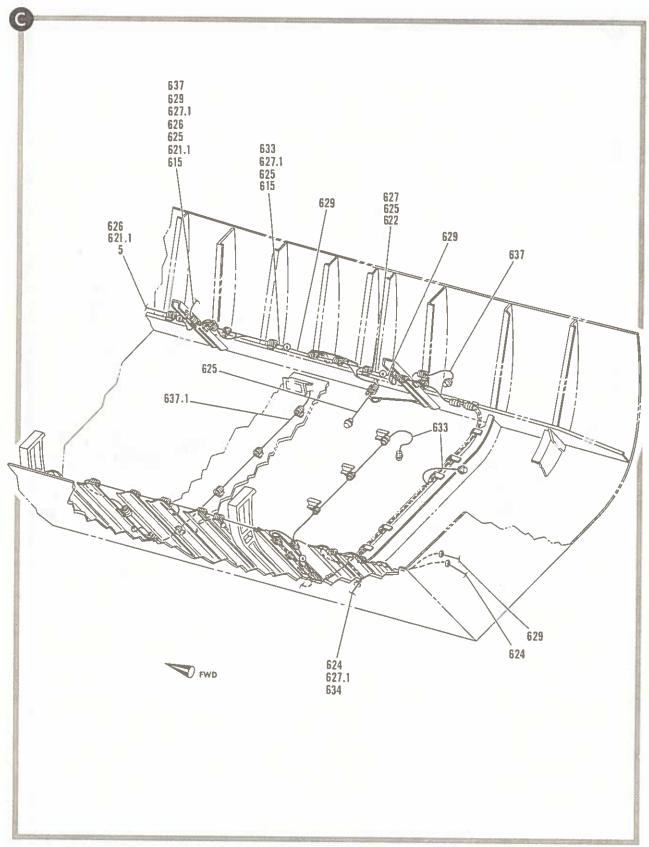

22.04.94.07.004-3A

94-7 Page 12 PLENUM AREA UNDERFLOOR STA 640 TO 926 RH ELECTRICAL HARNESSES FIGURE 3 (SHEET 3 OF 3)

Apr. 28/61 C

# SECTION UNDERFLOOR ILLUSTRATED PARTS CATALOG

FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO	GE DE	UNITS
NDEX NO.	TART HOMBER	1 2 3 4 5 6	FROM	то	ASSEMB
-624	22-64633-1	<ul> <li>HARNESS ASSEMBLY. FLIGHT DECK ELECTRONIC TEMPERATURE CONTROLLER TO PERMANENT</li> </ul>	1		1
	10-35918-14	SPLICE - ADAPTER, CONVAIR 90-04401-005 -V77820-	1		1
	DPD45-3351B	CONNECTOR. CONVAIR 92-50285-016 -V71468-	1		1
	19929	SHELL, CONVAIR 98-02504-005 -V71468-	1		1 1
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	!		
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		
	320562	CONDUCTOR. CONVAIR 98-34001-001 -V00779- - HARNESS ASSEMBLY. CABIN AIR CONDITION	l Å		1 '
-625	22-62573-5	PROGRAMMER TO PERMANENT SPLICE			
,	22-62573-1	- HARNESS ASSEMBLY, CABIN AIR CONDITIONING PROGRAMMER TO PERMANENT SPLICE	2	6	
	36153	- TERMINAL, CONVAIR 98-90305-003 -V00779-	A		A
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	2	6	
	024049-0000	CONTACT, CONVAIR 92-63901-011 -V71468-	A 2	6	
	021621-0001	CONTACT, CONVAIR 92-63901-008 -V71468- CONTACT, CONVAIR 92-63901-012 -V71468-	A		1 1
	024048-0000   024048-0000	CONTACT, CONVAIR 92-63901-012 -V71468-	2	6	1
	EX06-22-145	CONNECTOR, CONVAIR 92-40332-016 -V71468-	ī	-	1
	225-0017-000	. PLUG. CONVAIR 96-91200-007 -V71468-	1		
	323975	CONNECTOR, CONVAIR 98-34009-003 -V00779-	A		A1
	323975	CONNECTOR: CONVAIR 98-34009-003 -V00779-	2	6	
-625	22-62588-1	- HARNESS ASSEMBLY. CABIN FREON COMPRESSOR	1		
		TO RELAY	1		
	EX06-22-14S	- CONNECTOR, CONVAIR 92-40332-016 -V71468-	i		
	024048-0000	. CONTACT, CONVAIR 92-63901-011 -V71468-	i	1	1
	225-0017-000	. PLUG. CONVAIR 96-91200-007 -V71468-	i		i
	320572	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1		
-627	22-62592-5	. HARNESS ASSEMBLY, CABIN TURBO COMPRESSOR TO	A		
		CABIN TEMPERATURE CONTROL PERMANENT			
	22-62592-1	- HARNESS ASSEMBLY, CABIN TURBO COMPRESSOR TO CABIN TEMPERATURE CONTROL PERMANENT SPLICE	2	6	
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1		
	024048-0000	_ CONTACT, CONVAIR 92-63901-012 -V71468-	1		1
	024049-0000	CONTACT, CONVAIR 92-63901-011 -V71468-	1 1		
	EX06-10SL3S	- CONNECTOR, CONVAIR 92-40332-001 -V71468-	1 1		
	EX06-22-145	. CONNECTOR, CONVAIR 92-40332-016 -V71468- . TERMINAL, CONVAIR 98-90805-003 -V00779-	1 :		
407 1	36153  22-62594	. HARNESS ASSEMBLY, LANDING GEAR SAFETY RELAY	l i	1	1
-021-1	22-62344	5 TO PERMANENT SPLICE	'		
		A AIRPLANES 1, 7 AND ON			




### ILLUSTRATED PARTS CATALOG SECTION UNDERFLOOR


FIGURE AND	PART NUMBER	NOMENCLATURE		GE DE	UNITS
NDEX NO.		1 2 3 4 5 6	FROM	то	ASSEMB
-628	22-62628-1	- HARNESS ASSEMBLY. CABIN FLOW SENSOR AND			1
	024048-0000	TRANSMITTER TO FEED THRU V			
	EX06-10SL4S	. CONNECTOR, CONVAIR 92-40332-002 -V71468-			14 2
	MC11E10-6SN	. CONNECTOR. CONVAIR 92-40179-002 -V71468-	;		1
	CT06E18-11S	. CONNECTOR, CONVAIR 92-40334-005 -V71468-	i		l i
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	i		1
-629	22-64634-1	- HARNESS ASSEMBLY, CABIN ELECTRONIC	i	6	1 1
		TEMPERATURE CONTROLLER TO PERMANENT			
		SPLICE			Į.
	22-64634-5	- HARNESS ASSEMBLY; CABIN ELECTRONIC	7	7	1
	1	TEMPERATURE CONTROLLER TO PERMANENT			1
	22-64634-801	SPLICE - HARNESS ASSEMBLY, CABIN ELECTRONIC	В		١,
	22-04034-001	TEMPERATURE CONTROLLER TO PERMANENT	0		1
		SPLICE	- 1 - 1		
	19929	- SHELL, CONVAIR 98-02504-005 -V71468-	1 1		1 1
	DPD34CL1	. ADAPTER, CONVAIR 90-04401-005 -V71468-	i		1 1
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	;	6	
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	+	-	AF
	36151	TERMINAL, CONVAIR 98-90805-001 -V00779-	i	6	"
	36151	- TERMINAL, CONVAIR 98-90805-001 -V00779-	7		Ai
	DPD45-33S18	- CONNECTOR, CONVAIR 92-50285-016 -V71468-	1 1		
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1	6	13
	320559	CONDUCTOR - CONVAIR 98-34001-003 -V00779-	7		AF
	320562	- CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1 1	6	
	320562	CONDUCTOR, CONVAIR 98-34001-001 -V00779-	7		Al
-630	22-62556-1	- HARNESS ASSEMBLY, RECIRCULATING FAN	1		
	YAEVBC-L1	TO RELAY - TERMINAL, CONVAIR 98-90806-002 -V09922-	1 1		
	320571	. TERMINAL, CONVAIR 98-90805-005 -V00779-			
	YAEV8C-L	. TERMINAL, CONVAIR 98-90806-001 -V09922-	-   i		
-632	22-62557-1	. HARNESS ASSEMBLY. RECIRCULATING FAN MOTOR	i		
0.52	12. 02.551	TO FEED THRU Y	'		
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		ا
	YAEV8C-L	- TERMINAL, CONVAIR 98-90806-001 -V09922-			}
-633	22-62589-1	. HARNESS ASSEMBLY. CABIN CONDENSER	1 1		1
	2.0	TEMPERATURE PLUGS TO PERMANENT SPLICE			
	CT06E18-19S	CONNECTOR, CONVAIR 92-40334-006 -V71468-	1 1		1
	CA3106E18-85	CONNECTOR. CONVAIR 92-40334-018 -V71468-			1
	320559	- CONDUCTOR, CONVAIR 98-34001-003 -V00779-			1 3
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1 1
			1 }		
			1 [		
18					
5					
		· · · · · · · · · · · · · · · · · · ·			

FIGURE AND	PART NUMBER	NOMENCLATURE	USA	GE DE	UNITS
IDEX NO.	FARI NUMBER		FROM	то	PER ASSEMB
-634 -636 -637	22-62633 320562 320559 22-62632 320559 36153 22-62593 36153 36161	1 2 3 4 5 6  - HARNESS ASSEMBLY; LH AFT ACCESS DOOR SWITCH TO RH AFT ACCESS DOOR SWITCH . CONDUCTOR, CONVAIR 98-34001-001 -V00779 CONDUCTOR, CONVAIR 98-34001-003 -V00779- HARNESS ASSEMBLY; FWD AIR CONDITIONING COMPARTMENT LIGHT TO PERMANENT SPLICE RH . CONDUCTOR, CONVAIR 98-34001-003 -V00779 TERMINAL, CONVAIR 98-90805-003 -V00779- HARNESS ASSEMBLY; CABIN CONDENSER FAN TO RELAY . TERMINAL, CONVAIR 98-90805-003 -V00779 TERMINAL, CONVAIR 98-90805-016 -V00779-	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		1
-637.1	10-101033-1 024049-0000 024048-0000 EX06-1452S 22-62609	. PLUG, CONVAIR 96-91200-001 -V77820 CONTACT, CONVAIR 92-63901-011 -V71468 CONTACT, CONVAIR 92-63901-012 -V71468 CONNECTOR, CONVAIR 92-40332-004 -V71468 HARNESS ASSEMBLY, AFT AIR CONDITIONING COMPARTMENT LIGHT TO PERMANENT SPLICE RH . TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1 1 1		




### ILLUSTRATED PARTS CATALOG SECTION UNDERFLOOR

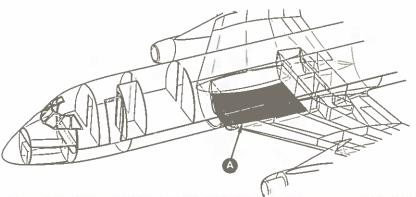

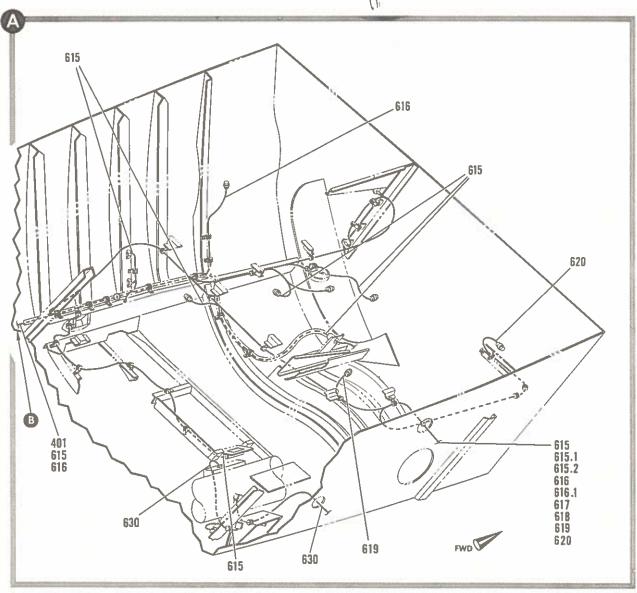

ELECTRICAL HARNESSES FUSELAGE WING SECTION UNDERFLOOR

# CONVAIR 880

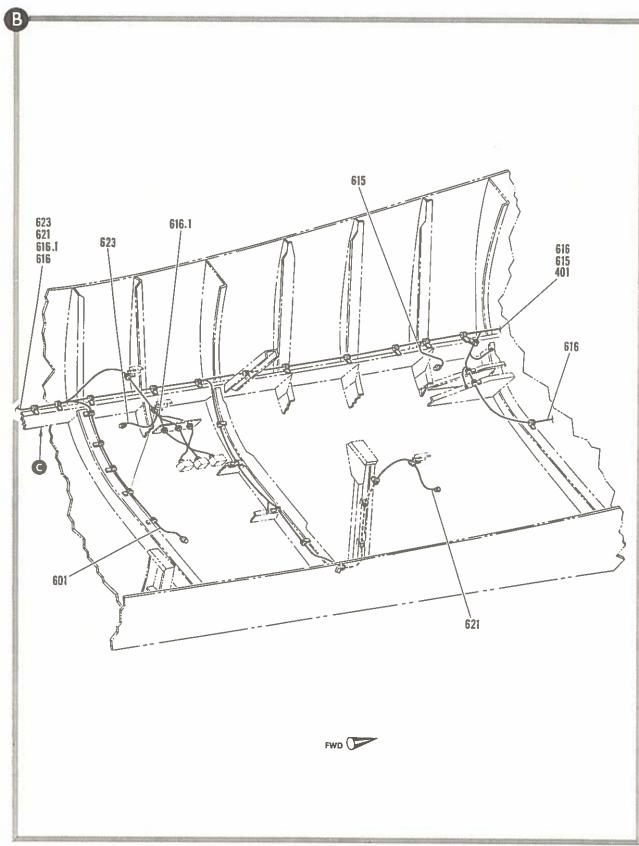


22.04 94.07.005-2A

Apr. 28/61

PLENUM AREA UNDERFLOOR STA 640 TO 926 LH ELECTRICAL HARNESSES FIGURE 4 (SHEET 2 OF 3)



### ILLUSTRATED PARTS CATALOG SECTION UNDERFLOOR

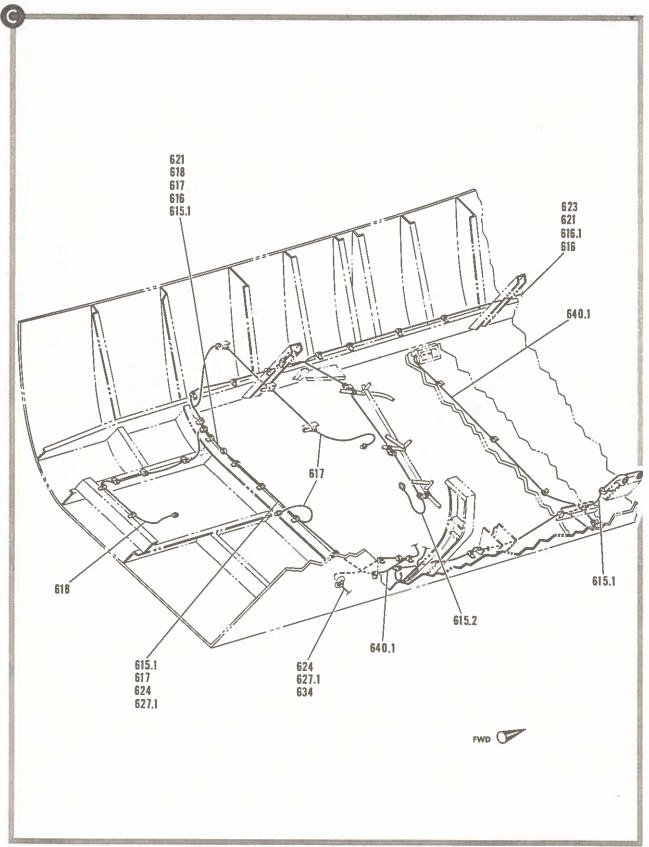

27.04.94.07.005-3A

### CONVAIR 88 SECTION UNDERFLOOR ILLUSTRATED PARTS CATALOG

FIGURE AND	PART NUMBER	NOMENCLATURE		GE DE	UNITS
INDEX NO.	PARTHUMBER	1 2 3 4 5 6	FROM	то	ASSEMBL
	22-62610 36153	PLENUM AREA UNDERFLOOR STA 640 TO 926 LH ELECTRICAL HARNESSES SEE 22-62001 RH WING REFUEL AND DEFUEL VALVES HARNESS ASSEMBLY, AFT AIR CONDITIONING COMPARTMENT LIGHT TO PERMANENT SPLICE LH TERMINAL, CONVAIR 98-90805-003 -	1		1
					-
					2
				25	
				5	
		7			




FUSELAGE WING

## ELECTRICAL HARNESSES CONVAIR 88 SECTION UNDERFLOOR ILLUSTRATED PARTS CATALOG

FIGURE AND	PART NUMBER	NOMENCLATURE	USA COI		UNITS
NDEX NO.	TANK TOMBER	1 2 3 4 5 6	FROM	TO	ASSEMBL
-646 -647 -648	22-63615 22-63616 PT00E8-45 10-101960-83 22-62542	UNDERFLOUR OVER MWW ELECTRICAL HARNESSES SEE 22-62001  HARNESS ASSEMBLY, CLOSET RECEPTACLE STA 889 TO PERMANENT SPLICE  HARNESS ASSEMBLY, CLOSET RECEPTACLE STA 965 TO PERMANENT SPLICE  CONNECTOR, CONVAIR 92-50288-010 -V77820- COVER, CONVAIR 92-74211-004 -V06840- HARNESS ASSEMBLY, INSTRUMENT PANEL PERMANENT SPLICE TO FEED THRU PANEL X RH	1 1 1 1		1 1 1 1 1 1
			4.		









ELECTRICAL HARNESSES
FUSELAGE WING
SECTION UNDERFLOOR

### ILLUSTRATED PARTS CATALOG S

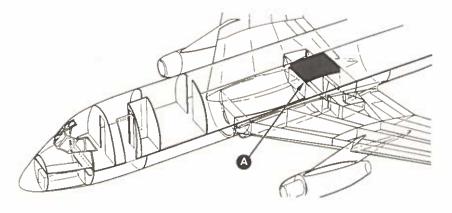

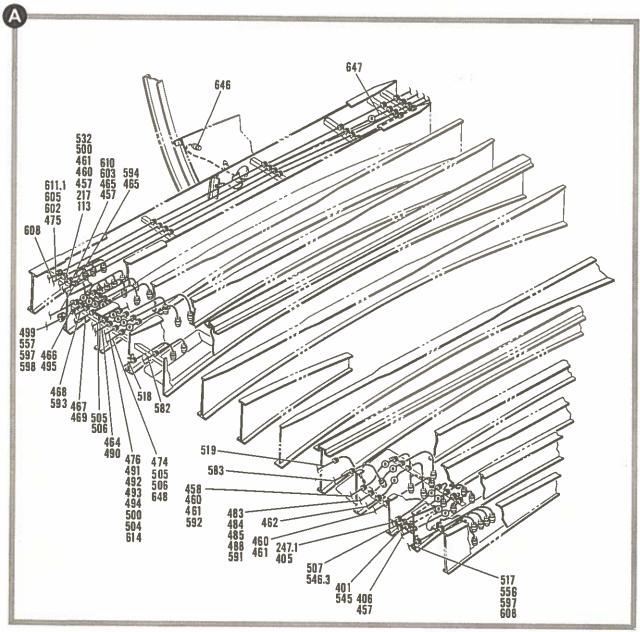

22.04.94.07.010

94-7 Page 24 UNDERFLOOR OVER MWW ELECTRICAL HARNESSES FIGURE 6

Apr. 28/61 A SECTION V


Chapter 94 ELECTRICAL HARNESSES


FUSELAGE AFT COMPARIMENT UNDERFLOOR ELECTRICAL HARNESSES



ELECTRICAL HARNESSES
FUSELAGE AFT
COMPT UNDERFLOOR

### ILLUSTRATED PARTS CATALOG

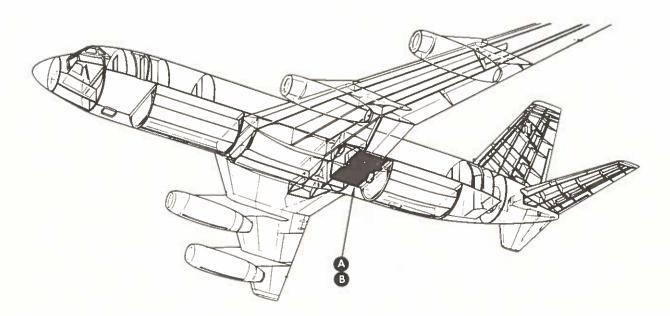

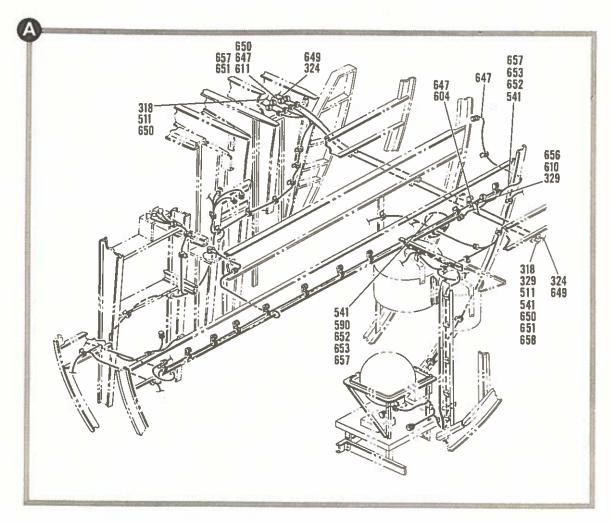


22.04.94.08.002 [

94-8 Page 2 UNDERFLOOR HYDRAULIC COMPARTMENT RH ELECTRICAL HARNESSES FIGURE 1 (SHEET 1 OF 2)

Feb. 10/62 A-2 ELECTRICAL HARNESSES FUSELAGE AFT COMPT UNDERFLOOR

# CONVAIR 880

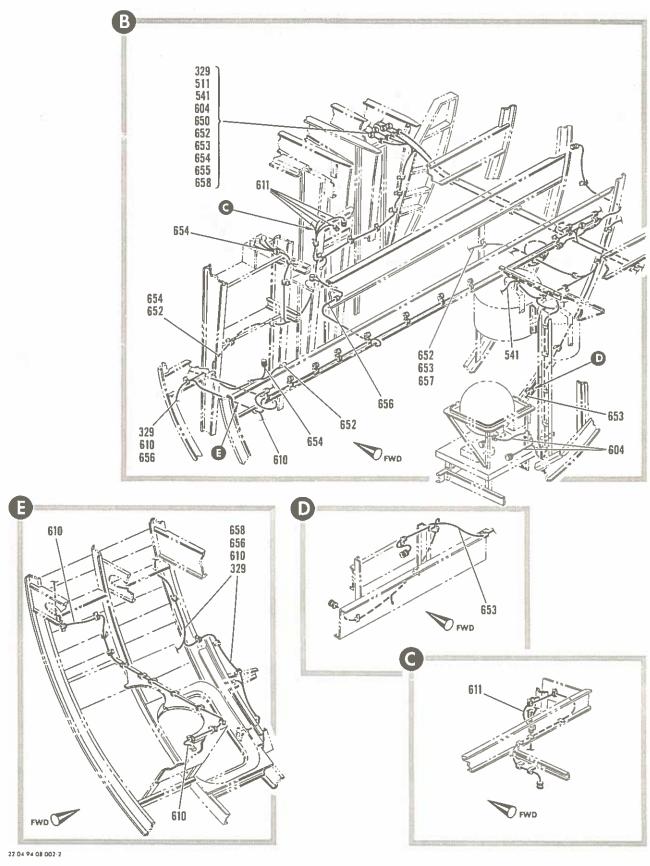

Feb. 10/62 A-2 UNDERFLOOR HYDRAULIC COMPARTMENT RH ELECTRICAL HARNESSES FIGURE 1 (SHEET 2 OF 2)

94-8 Page 3



ELECTRICAL HARNESSES FUSELAGE AFT COMPT UNDERFLOOR

FIGURE AND	PART NUMBER	NOMENCLATURE	USA		UNIT
DEX NO.	I ANI ITOMOLK		FROM	TO	ASSEM
DEX 1101		1 2 3 4 5 6			
		UNDERFLOOR HYDRAULIC COMPARTMENT RH			ļ
		ELECTRICAL HARNESSES SEE 22-62002			1
-649	22-62509	. HARNESS ASSEMBLY, FEED THRU PANEL FRONT	1 1		
	1	SPAR TO AFT PRESSURE BULKHEAD			
	CT00E22-2S	CONNECTOR, CONVAIR 92-50293-002 -V71468-	1		1963
-650	22-62561	. HARNESS ASSEMBLY: PERMANENT SPLICE TO AFT	1 1 1		
030	22 0230.	BULKHEAD PRESSURE PANEL T			
-652	22-62547	. HARNESS ASSEMBLY, REAR SPAR SPLICE AREA TO	1 1 1		
-032	22-02341		'		1
		HYDRAULIC COMPARTMENT	1 1		
	PT06E8-4S	- CONNECTOR CONVAIR 92-40325-006 -V06840-	1 ' 1		
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		
-653	22-62552	. HARNESS ASSEMBLY, REAR SPAR PERMANENT	1		
	g 101	SPLICE TO HYDRAULIC PUMP MOTOR	11		i
	PT06E8-4S	CONNECTOR, CONVAIR 92-40325-006 -V06840-	1		ł
	CT06E24-22S	CONNECTOR, CONVAIR 92-40384-009 -V71468-	1 1		
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	i		
		. TERMINAL, CONVAIR 98-90805-016 -V00779-	_   i		
	36161		i		
	EX06-10SL45	CONNECTOR, CONVAIR 92-40332-002 -V71468-	1 ' 1		
-654	22-62567-1	- HARNESS ASSEMBLY, WING FLAP POSITION	1		
		SWITCHES TO REAR SPAR PERMANENT SPLICE			
-655	22-62591	- HARNESS ASSEMBLY. FEED THRU PANEL T TO REAR	1		
		SPAR PERMANENT SPLICE			
-656	22-62611	- HARNESS ASSEMBLY. HYDRAULIC COMPARTMENT	[ 1 ]		
	/ •	LIGHT TO DOOR SWITCH			
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		
	PT06E12-10S	. PLUG. WING FLAP	i		
	P100E12-103		'		
		CONVAIR 92-40325-002 -V06840-			
-657	22-62531	. HARNESS ASSEMBLY, REAR SPAR PERMANENT	1		
		SPLICE TO HYDRAULIC TEMPERATURE BULB			
	EX06-1253S	- CONNECTOR, CONVAIR 92-40332-003 -V71468-	1		
	PT06E8-45	CONNECTOR, CONVAIR 92-40325-006 -V77820-	1		1
	024048-0000	CONTACT, CONVAIR 92-63901-012 -V71468-	1 1		1
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	i		1
-658	1	. HARNESS ASSEMBLY, ELECTRIC TAIL CONE	i		
-038	22-62630		'		
		FEED THRU PANEL Z TO PERMANENT SPLICE	[		
			- {		1
			1 1		
			(		
					1
	1				
		}			1
		1			1
	1				
	1		)		
			i		
	1				
					1
	1				
	1		1	1	
					1
			1	i	1
			1	l	1
	1			l	1
					1
					1
				l	1
					1
					1
					1
					1
					1
					1
	1			I	1
	1				

ELECTRICAL HARNESSES
TAIL CONE AND
STABILIZER



SECTION V


Chapter 94 ELECTRICAL HARNESSES

TAIL CONE AND STABILIZER ELECTRICAL HARNESSES

## CONVAIR 880

ELECTRICAL HARNESSES
TAIL CONE AND
STABILIZER

### ILLUSTRATED PARTS CATALOG

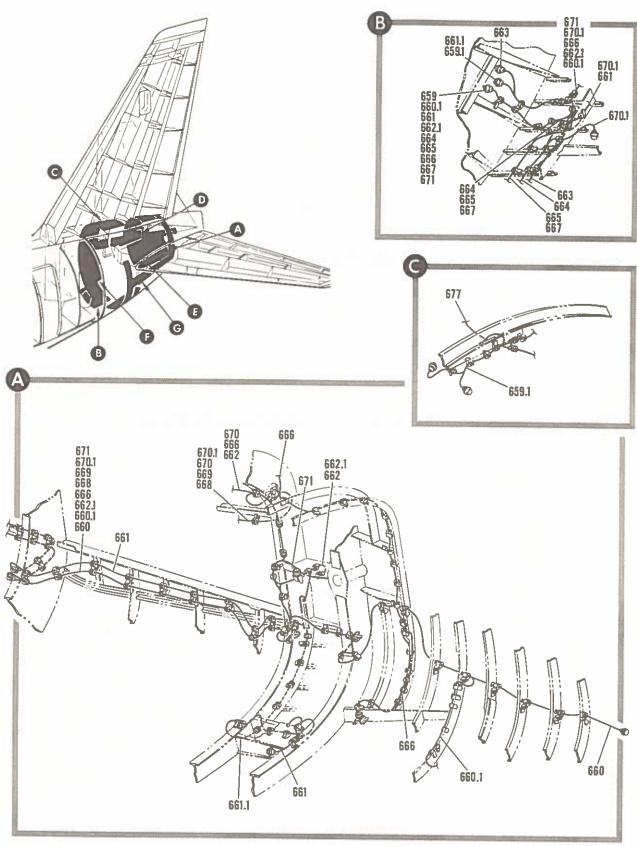

22.04.94.09.002-1


94-9 Page 2 TAIL CONE ELECTRICAL HARNESSES FIGURE 1 (SHEET 1 OF 3)


Apr. 28/61


TAIL CONE AND STABILIZER



#### ILLUSTRATED PARTS CATALOG

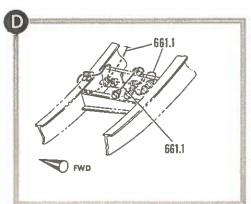

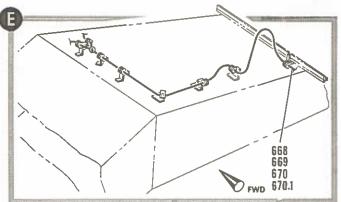

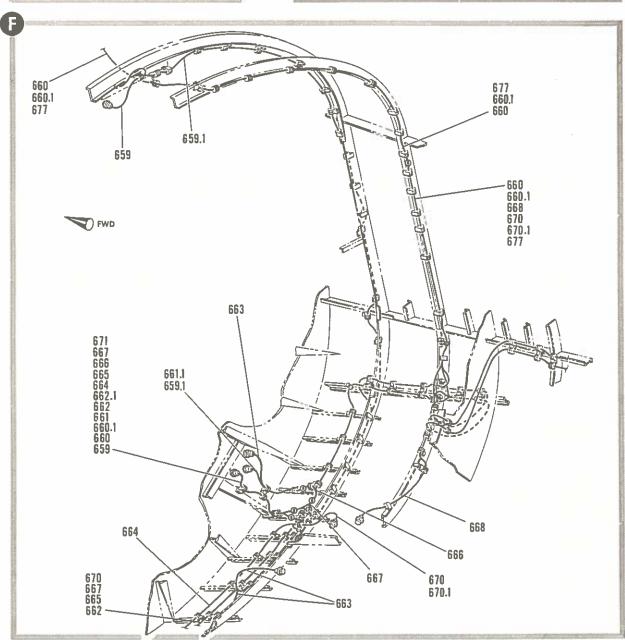

22.04.94.09.003-2

Apr. 28/61


TAIL CONE ELECTRICAL HARNESSES FIGURE 1 (SHEET 2 OF 3)

94-9 Page 3



ELECTRICAL HARNESSES
TAIL CONE AND
STABILIZER

### ILLUSTRATED PARTS CATALOG

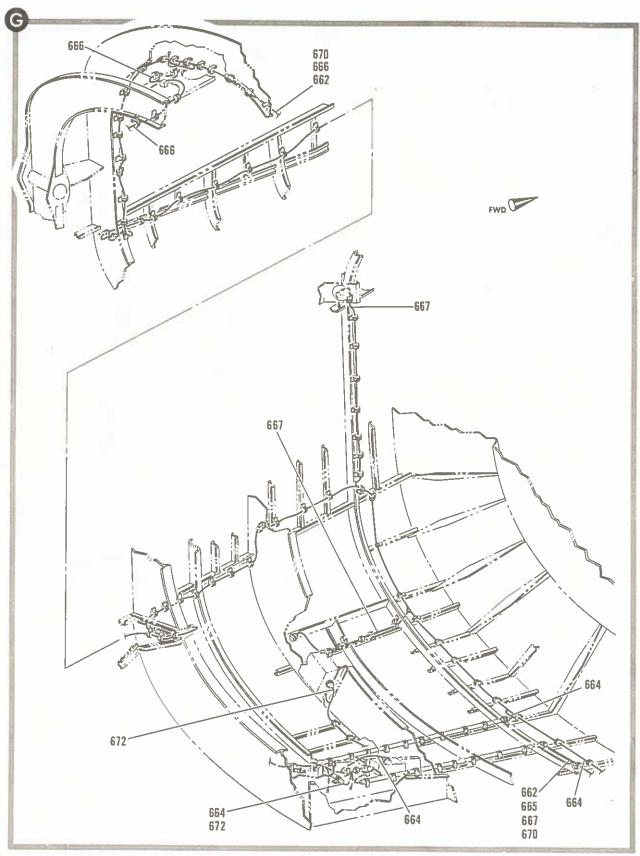

22.04.94 09.002-3

94-9 Page 4

TAIL CONE ELECTRICAL HARNESSES FIGURE 1 (SHEET 3 OF 3)

Apr. 28/61 A

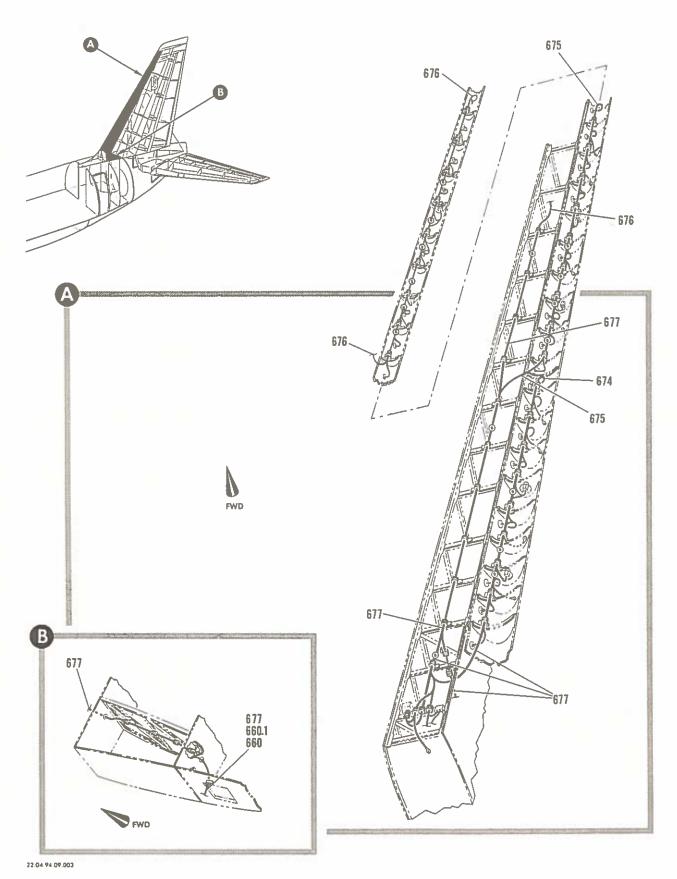


FIGURE AND	PART NUMBER	NOMENCLATURE		GE DE	UNI.
IDEX NO.	/ ARI HOMBER	1 2 3 4 5 6	FROM	то	ASSEM
_650 1	22-44515	TAIL CONE ELECTRICAL HARNESSES SEE 22-66000	1.		
-024-1	22-66515	- HARNESS ASSEMBLY, PRESSURIZED FEED THRU	1		
	EX06-10SL3S	PANEL Z TO RUDDER SERVO - CONNECTOR. CONVAIR 92-40320-001 -V71468-	1 1		
	CT00E24-28S	. CONNECTOR, CONVAIR 92-50293-015 -V71468-		Į	
	024049-0000	. CONTACT, CONVAIR 92-63901-011 -V71468-	li	-	
	024048-0000	- CONTACT, CONVAIR 92-63901-012 -V71468-		ĺ	
	225-0017-000	. PLUG. CONVAIR 92-91200-007 -V71468-	i		1
	36153	. TERMINAL CONVAIR 98-90805-003 -V00779-			
	320559	- CONDUCTOR, CONVAIR 98-34001-003 -V00779-	i		
-660	22-66501	- HARNESS ASSEMBLY, PRESSURIZED FEED THRU	l i		
		PANEL T TO FLARE RELEASE	'		1
	320574	- TERMINAL CONVAIR 98-90805-010 -V00779-	1		
	36161	- TERMINAL, CONVAIR 98-90805-016 -V00779-	l i		
-661.1	22-66514	- HARNESS ASSEMBLY, PRESSURIZED FEED THRU	l i		
		PANEL Z TO ELEVATOR SERVO			
	EX06-10535	- CONNECTOR, CONVAIR 92-40320-001 -V71468-	1 1 .		
	CT00E24-28S	- CONNECTOR, CONVAIR 92-50293-015 -V71468-	1 1		
	024049-0000	CONTACT, CONVAIR 92-63901-011 -V71468-	1		
	024048-0000	- CONTACT, CONVAIR 92-63901-012 -V71468-	[ ]		
	225-0017-000	PLUG, CONVAIR 92-91200-007 -V71468-	1		
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		
440	320559	- CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1 1	_	
-662	22-66506	- HARNESS ASSEMBLY, PRESSURIZED FEED THRU	1	2	
		PANEL T TO STABILIZER POSITION			
-662.1	22-66506	TRANSMITTER - HARNESS ASSEMBLY, PRESSURIZED FEED THRU	3		
002.1	22-00300	PANEL T TO STABILIZER POSITION	3		
		TRANSMITTER			
	PT06E8-45	- CONNECTOR, CONVAIR 92-40325-006 -V77820-	1 1		
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	i		
-663	22-66507	- HARNESS ASSEMBLY PRESSURIZED FEED THRU	1 1		
		PANEL T TO TAIL DE-ICE CONTROL BOX	'		
	MS3106E36-145	- CONNECTOR	1 1		
	CT06E22-2P	CONNECTOR: CONVAIR 92-40334-007 -V71468-	i		
-664	22-66511	- HARNESS ASSEMBLY, PRESSURIZED FEED THRU	1 1		
		PANEL T TO SERVO POWER AMPLIFIER			
	PT06E14-19S	CONNECTUR, CONVAIR 92-40325-011 -V77820-	1 1		
-665	22-66512	- HARNESS ASSEMBLY, PRESSURIZED FEED THRU	1 1		
		PANEL T TO PERMANENT SPLICE			
-666	22-66502	- HARNESS ASSEMBLY, PRESSURIZED FEED THRU	1		
	7/350	PANEL T TO AFT DOOR LIGHT AND SWITCH			
	36151	- TERMINAL, CONVAIR 98-90805-001 -V00779-			
_447	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1 1		
-667	22-66503	- HARNESS ASSEMBLY, PRESSURIZED FEED THRU	1		
	36153	PANEL T TO FWD SIDE DOOR LIGHT SWITCH	,		
	36151	- TERMINAL, CONVAIR 98-90805-003 -V00779- - TERMINAL, CONVAIR 98-90805-001 -V00779-			
	320559	- CONDUCTOR, CONVAIR 98-34001-003 -V00779-	;		
-668	22-66508	- HARNESS ASSEMBLY: TAIL DE-ICE CONTROL			
		BOX TO FWD AND AFT PERMANENT SPLICE	'		
	CT06E32-8P	CONNECTOR, CONVAIR 92-40334-014 -V71468-	1 1		
	AN3420	BUSHING	;		
-669	22-66509	- HARNESS ASSEMBLY, FWD PERMANENT SPLICE	i		
		TO AFT PERMANENT SPLICE TAIL CONE	'		
-670	22-66510	- HARNESS ASSEMBLY. TAIL DE-ICE CONTROL	1 1	2	
		BOX TO FWD AND AFT PERMANENT SPLICE			
-670.1	22-66510	- HARNESS ASSEMBLY. TAIL DE-ICE CONTROL	3		
		BOX TO FWD AND AFT PERMANENT SPLICE			
	CT06E1658P	CONNECTOR, CONVAIR 92-40334-013 -V71468-	1 1		
-671	22-66516	- HARNESS ASSEMBLY, PRESSURIZED FEED THRU	1 1		
		PANEL T TO STABILIZER TRIM POSITION			
		SWITCH			
-672	22-66518-801	- HARNESS ASSEMBLY, SPEED STABILITY	1 1		
	EVOL_10CAC	MONITOR TO PERMANENT SPLICE	.		
	EX06-14565	- CONNECTOR, CONVAIR 92-40332-020 -V71468-	1		
- 1			1 I		1

# CONVAIR 88

ELECTRICAL HARNESSES TAIL CONE AND STABILIZER

### ILLUSTRATED PARTS CATALOG



94-9 Page 6 VERTICAL STABILIZER ELECTRICAL HARNESSES Apr. 28/61 FIGURE 2

FIGURE	PART NUMBER	NOMENCLATURE		GE DE	UNITS
NDEX NO.	FAKI NOMBER	1 2 3 4 5 6	FROM	то	ASSEMBI
		VERTICAL STABILIZER ELECTRICAL HARNESSES			
-674	22-66600	SEE 22-66001 - HARNESS ASSEMBLY, LWR LEADING EDGE	1		١,
		SECTION VERTICAL FIN			'
-675	22-66601	• HARNESS ASSEMBLY. INTERMEDIATE LEADING EDGE SECTION VERTICAL FIN	1		1
-676	22-66602	- HARNESS ASSEMBLY. UPPER LEADING EDGE	1		1
	36153	SECTION VERTICAL FIN . TERMINAL, GONVAIR 98-90805-003 -V00779-	1		1
	320574	- TERMINAL, CONVAIR 98-90805-010 -V00779-	i		2
	36161 YAEV8C-L	- TERMINAL, CONVAIR 98-90805-016 -V00779- - TERMINAL, CONVAIR 98-90806-001 -V09922-			1
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	i		- 3
	320562 320570	CONDUCTOR, CONVAIR 98-34001-001 -V00779- CONDUCTOR, CONVAIR 98-34001-002 -V00779-			
-677	22-66609	. HARNESS ASSEMBLY, NOSE SPAR VERTICAL FIN	i '		1
	320559 320562	CONDUCTOR, CONVAIR 98-34001-003 -V00779- CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		10
	320570	CONDUCTOR, CONVAIR 98-90805-002 -V00779-	i		
	_				
		(F)			
	i				



ELECTRICAL HARNESSES TAIL CONE AND STABILIZER

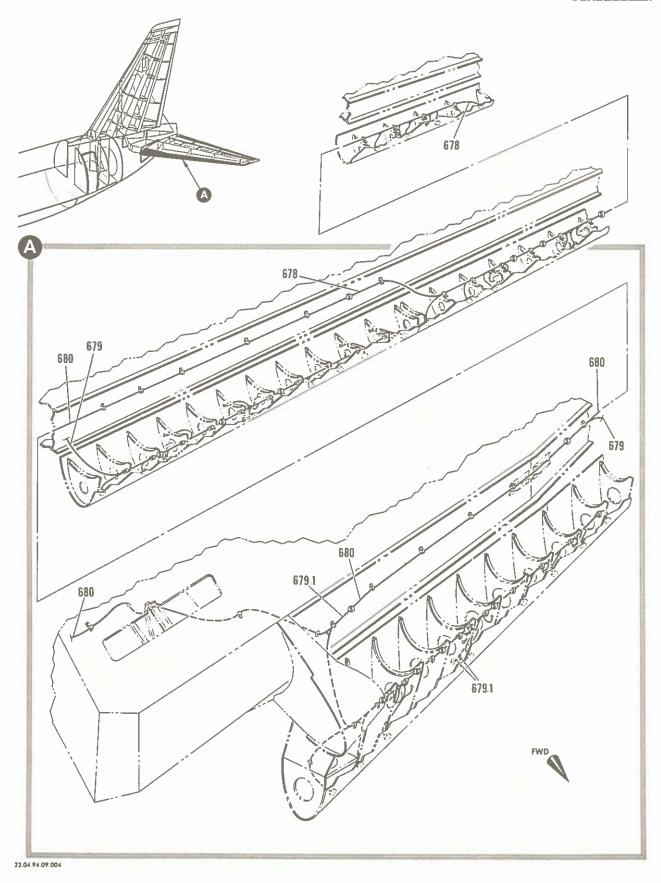


FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNITS
NDEX NO.		1 2 3 4 5 6	FROM	то	ASSEME
3		1 2 3 4 5 6	-		+
		SEE 22-66002			
-678	22-66605	- HARNESS ASSEMBLY, OUTBD LEADING EDGE	1		1
		SECTION HORIZONTAL STABILIZER LH			
	22-66608	- HARNESS ASSEMBLY. OUTBD LEADING EDGE SECTION HORIZONTAL STABILIZER RH	1		
-679	22-66604	- HARNESS ASSEMBLY. INTERMEDIATE LEADING EDGE	1 1		
0,,,	22 00004	SECTION HORIZONTAL STABILIZER LH			
	22-66607	. HARNESS ASSEMBLY, INTERMEDIATE LEADING EDGE	1 1		200
		SECTION HURIZONTAL STABILIZER RH			1
-679.1	22-66603	. HARNESS ASSEMBLY, INBU LEADING EDGE	1		
	22-66606	SECTION HORIZONTAL STABILIZER LH  HARNESS ASSEMBLY. INBD LEADING EDGE	1 1		
	22-00000	SECTION HORIZONTAL STABILIZER RH	'		
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		
	320574	TERMINAL, CONVAIR 98-90805-010 -V00779-	1 1		
	36161	TERMINAL, CONVAIR 98-90805-016 -V00779-			
	YAEV8C-L	- TERMINAL, CONVAIR 98-90806-001 -V09922-	!		
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-			
	320562  320570	CONDUCTOR, CONVAIR 98-34001-001 -V00779- CONDUCTOR, CONVAIR 98-34001-002 -V00779-			
066-	22-66610	. HARNESS ASSEMBLY, FRONT SPAR HORIZONTAL	i		
0.70	22 00010	STABILIZER LH			
	22-66611	. HARNESS ASSEMBLY, FRONT SPAR HORIZONTAL	1		
		STABILIZER RH			
	320570	CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		
	320562  320559	- CONDUCTOR, CONVAIR 98-34001-001 -V00779-			
	320337	-v00779-	'		'
	320559	CONDUCTOR, RH CONVAIR 98-34001-003	1 1		
		-v00779-			
	n				
			85		
		'A'			
					1
					1
					1
					1
					1
					1
					1
				[	
					1
					1





SECTION V


Chapter 94 ELECTRICAL HARNESSES


MWW ELECTRICAL HARNESSES



MWW

### ILLUSTRATED PARTS CATALOG

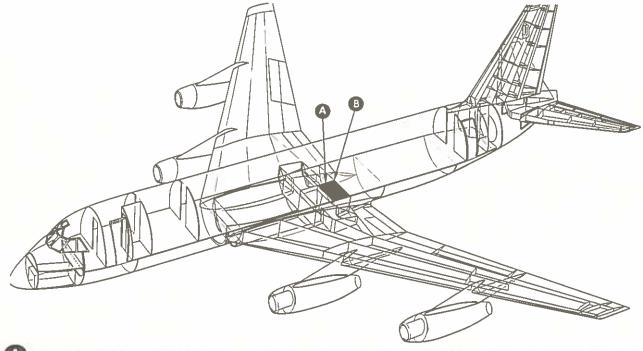

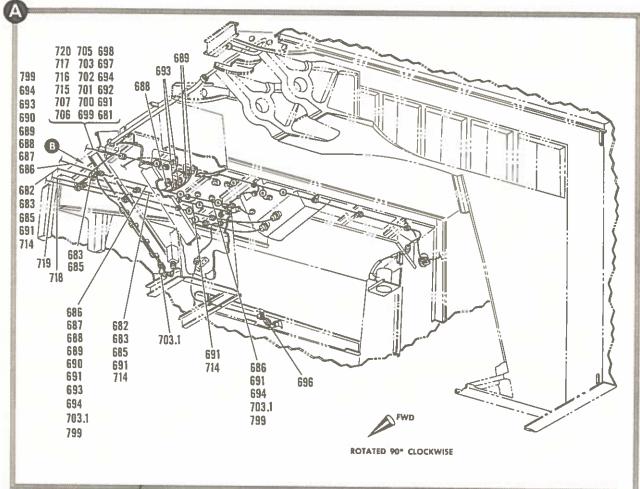


22.04.94,10.002-1

94-10 Page 2

MWW FWD LH ELECTRICAL HARNESSES FIGURE 1 (SHEET 1 OF 2)

Apr. 28/61



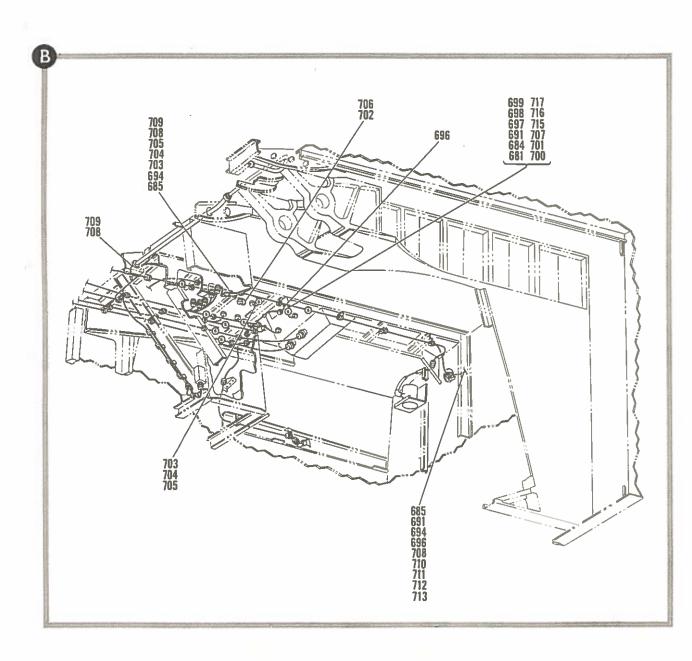

22.04.94.10.002-2



FIGURE AND	PART NUMBER	NOMENCLATURE	[	GE DE	UNIT
NDEX NO.			FROM	то	ASSEME
	+	1 2 3 4 5 6			- 100
		MWW FWD LH ELECTRICAL HARNESSES			1
		SEE 22-64001			
-681	22-64531-1	- HARNESS ASSEMBLY, REAR SPAR FEED THRU	1 1		
		PANEL E TO FUEL TANK PANEL C			
-682	22-64532	. HARNESS ASSEMBLY, FEED THRU PANEL K TO	1 1		
		ENGINE 2 REAR SPAR PERMANENT SPLICE	'		
-683	22-64581	. HARNESS ASSEMBLY, FEED THRU PANEL K TO	1 1		
000	EE 04301	ENGINE 2 REAR SPAR PERMANENT SPLICE	'		
-684	22 44435				
-004	22-64635	- HARNESS ASSEMBLY, FEED THRU PANEL E TO	1		
		OUTBD BOOST PRESSURE SWITCH 2			
	EX06-14575	- CONNECTOR, CONVAIR 92-40332-006 -V71468-	1 1		
	024048-0000	- CONTACT: CONVAIR 92-63901-012 -V71468-	1 1		
	024049-0000	CONTACT: CONVAIR 92-63901-011 -V71468-	l i		
	225-0017-000	- PLUG, CONVAIR 96-91200-007 - V71468-	i		
	36153				
405		- TERMINAL, CONVAIR 98-90805-003 -V00779-	_		
-685	22-64578	- HARNESS ASSEMBLY, FEED THRU PANEL R TO	-   1		1
		ENGINE 3 REAR SPAR PERMANENT SPLICE	- 1 - 1		
-686	22-64541	. HARNESS ASSEMBLY, FEED THRU PANEL W TO	1 1		1
	1	LH LANDING LIGHT PERMANENT SPLICE	_   '		
-687	22-64549	. HARNESS ASSEMBLY, FEED THRU PANEL J TO	1 1		
001	122 94347		_   '		
/	00 45535	ENGINE I REAR SPAR PERMANENT SPLICE			1
-688	22-64575	. HARNESS ASSEMBLY, ENGINE 2 THERMOCOUPLE	1		
		WING FUSELAGE DISCONNECT TO PYLON SPLICE			
	AN3057-6B	<ul> <li>ADAPTER, CONVAIR 90-04200-015</li> </ul>	1 1		
	CS3106C14S57P	- CONNECTOR, CONVAIR 92-40333-002 -V06840-	i		
	AN5548-1	- TERMINAL. CONVAIR 98-90819-001	-		
	AN5548-2		1 1		
		- TERMINAL, CONVAIR 98-90819-002	1		
-689	22-64577	<ul> <li>HARNESS ASSEMBLY, ENGINE 1 OIL QUANTITY</li> </ul>	1		
		WING FUSELAGE DISCONNECT TO PYLON SPLICE			l
	1-817-1	CONNECTOR, CONVAIR 92-47000-020 -V95712-	1 1		
	1-873-1	<ul> <li>ADAPTER, CONVAIR 90-04322-003 -V95712-</li> </ul>	- i i		
-690	22-64579	. HARNESS ASSEMBLY, FEED THRU PANEL J TO	- i i		
**		ENGINE 1 REAR SPAR PERMANENT SPLICE	'		
-691	22-64601		,		
-041	22-04001	- HARNESS ASSEMBLY, LANDING GEAR	1		
	7	DISCONNECT A TO FEED THRU PANELS LH			
	71-179866-325	CONNECTOR, CONVAIR 92-50288-029 -V06840-	1		i '
	23-1000	ELBOW: CONVAIR 93-39501-006 -V08484-	1 1 1		
	590001-147-0242	CONDUIT, CONVAIR 92-30000-028 -V00624-	-1 identified		
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	lil		
	AN3066-16	. NUT	1 11		
-692	22-64629				
-042	22-04029	- HARNESS ASSEMBLY, FEED THRU PANEL E TO	1 1		
	1	OUTBD BOOST PRESSURE SWITCH 1			
	EX06-16S1S	CONNECTOR, CONVAIR 92-40332-006 -V71468-	1 1		
	225-0017-000	PLUG, CONVAIR 96-91200-007 -V71468-	-  i		
	024049-0000	CONTACT, CONVAIR 92-63901-011 -V71468-	$\dashv i \mid$		
	024048-0000	CONTACT, CONVAIR 92-63901-012 -V71468-	1 1		
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		
			1 1		
	1				
			]		
			}		
				i	
			1 1		
	,				
			} I		




AND	PART NUMBER	NOMENCLATURE	<u> </u>	DE	UNITS
NDEX NO.	· · · · · · · · · · · · · · · · · · ·		FROM	то	ASSEMBL
-694	22-64621	1 2 3 4 5 6  - HARNESS ASSEMBLY, SPOILER POSITION TRANSMITTER PERMANENT SPLICE TO PANEL X	1		1
-695	36153 22-64621-3	. TERMINAL, CONVAIR 98-90805-003 -V00779 HARNESS ASSEMBLY, PERMANENT SPLICE TO AILERON AND SPOILER DISCONNECT INBD	1		1
-696	PT00E10-6S 22-64615	. CONNECTOR, CONVAIR 92-50288-011 -V06840 HARNESS ASSEMBLY, LANDING GEAR DOOR FWD UP AND LOCK SWITCH TO PERMANENT SPLICE LH	1		1
	590001-29-0310 1EN74-6	CONDUIT, CONVAIR 92-30000-013 -V00624- SWITCH, LIMIT MLG DOOR MFR TO SPEC CONT 22-06479-3 -V74059-	1		d
	AN3066-6 3416-15-1	. NUT . ELBOW, CONVAIR 93-39501-003 -V08484-	1		1 1
-697 -698	22-64527-1	- HARNESS ASSEMBLY, REAR SPAR FEED THRU PANEL E TO FUEL TANK PANEL B - HARNESS ASSEMBLY, REAR SPAR FEED THRU	1		i
-699	22-64526-1	PANEL E TO FUEL TANK PANEL D  HARNESS ASSEMBLY, REAR SPAR FEED THRU  PANEL E TO FUEL TANK PANEL L	1		1
-700	22-64529-1	- HARNESS ASSEMBLY, REAR SPAR FEED THRU PANEL E TO FUEL TANK PANEL M	1		1
	EX06-14S7S 024048-0000 024049-0000	. CONNECTOR, CONVAIR 92-40332-006 -V71468- . CONTACT, CONVAIR 92-63901-012 -V71468- . CONTACT, CONVAIR 92-63901-011 -V71468-	1 1		1 2
-701	225-0017-000 22-64530-1	. PLUG, CONVAIR 96-91200-007 -V71468- HARNESS ASSEMBLY, REAR SPAR FEED THRU PANEL E TO FUEL TANK PANEL A	1 1		
-702	22-64533	. HARNESS ASSEMBLY, FEED THRU PANEL H TO ENGINE 2 REAR SPAR PERMANENT SPLICE	1		
-703 -703 1	22-64550	. HARNESS ASSEMBLY, FEED THRU PANEL G TO ENGINE 1 REAR SPAR PERMANENT SPLICE . HARNESS ASSEMBLY, FEED THRU PANEL W TO	1		- N
-1020	22-04303-1	WHEEL WELL INTERCOM LH			
		×			
	111				
			No.		
			ļ		1




FIGURE			USA		UNITS
AND INDEX NO.	PART NUMBER	NOMENCLATURE	FROM	το	PER ASSEMBLY
1 -705	22-64551-1	- HARNESS ASSEMBLY, FEED THRU PANEL G TO	1		1
-706	22-64534-1	ENGINE 2 OUTBD PYLON - HARNESS ASSEMBLY, FEED THRU PANEL H TO	1		1
-707	22-64573-1	ENGINE 2 INBD PYLON PERMANENT SPLICE  HARNESS ASSEMBLY, FEED THRU PANEL E TO	,		, ,
-101	22-043/3-1	LH WING REFUEL AND DEFUEL VALVES	'		
	36153 PT06E8-4S	. TERMINAL, CONVAIR 98-90805-003 -V00779- . CONNECTOR, CONVAIR 92-40325-006 -V06840-	-}		2 2
-708	22-64597-1	. HARNESS ASSEMBLY, LH LANDING GEAR PERMANENT	i		ī
-709	22-64599-1	SPLICE BOX TO FEED THRU PANELS - HARNESS ASSEMBLY, LH LANDING GEAR PERMANENT	A		1
	22-64599	SPLICE BOX TO FEED THRU PANELS - HARNESS ASSEMBLY. LH LANDING GEAR PERMANENT	2	8	1
		SPLICE BOX TO FEED THRU PANELS		_	
-710	22-64603	- HARNESS ASSEMBLY. LH WHEEL WELL PERMANENT SPLICE TO RH WHEEL WELL PERMANENT SPLICE	`		1 1
-711	320559 22-64622-1	CONDUCTOR, CONVAIR 98-34001-003 -V00779- . HARNESS ASSEMBLY, PANEL M TO AILERON	;		5
		AND SPOILER DISGONNECT INBD	1 1		
	PT00E10-6S	- CONNECTOR, OUTBD CONVAIR 92-50288-011	1		1
	EX06-16515	- CONNECTOR, INBD CONVAIR 92-40332-007	1		1
	225-0017-000	PLUG. INBD CONVAIR 96-91200-007 -V71468-			3
	024049-0000	- CONTACT, INBD CONVAIR 92-63901-011	1		3
9	024048-0000	CONTACT, INBD CONVAIR 96-63901-012	וין		4:
-712	22-64622-3	- HARNESS ASSEMBLY, GROUND TO AILERON AND SPOILER DISCONNECT OUTBD	1		1
	PT00E10-65	CONNECTOR, CONVAIR 92-50288-011 -V77820-	;		;
-713	22-64544	- HARNESS ASSEMBLY, FEED THRU PANEL X TO LH REAR SPAR PERMANENT SPLICE	'		'
-714	22-64569	- HARNESS ASSEMBLY, FEED THRU PANEL F TO LH FLAP ASSYMMETRY CONTROL UNIT	1		1
	EX06-1651S	CONNECTOR; CONVAIR 92-40332-007 -V71468-	!		1
1	225-0017-000	- PLUG, CONVAIR 96-91200-007 -V71468- - CONTACT, CONVAIR 96-63901-011 -V71468-			2 2
1	024048-0000	CONTACT, CONVAIR 96-63901-012 -V71468-	i		5
-715	36153 22-64547	. TERMINAL, CONVAIR 98-90805-003 -V00779- - HARNESS ASSEMBLY, FEED THRU PANEL E TO 1			2
		INBD BOOST PRESSURE SWITCH	`		'
-716	22-64631	. HARNESS ASSEMBLY, FEED THRU PANEL E TO 2 INBD BOOST PRESSURE SWITCH	1		1
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	!		1 1
	EX06-1457S 225-0017-000	. CONNECTOR, CONVAIR 92-40332-006 -V71468- . PLUG, CONVAIR 92-91200-007 -V71468-			1 1
ĺ	024049-0000	. CONTACT, CONVAIR 96-63901-011 -V71468-	i		i
	024048-0000	CONTACT, CONVAIR 96-63901-012 -V71468-	i		2
-717	22-64571	. HARNESS ASSEMBLY: FEED THRU PANEL E TO 2 JETTISON HYDRAULIC PUMP SHUT OFF VALVE	1		1
	PT06E8-4S	CONNECTOR, CONVAIR 92-40325-006 -V77820-	1 1		2
-718	36153 22-64511	. TERMINAL, CONVAIR 98-90805-003 -V00779- L. HARNESS ASSEMBLY, GENERATOR 1 FEED THRU TO			2
		STATIC EXCITER	`		
-719	22-64513	- HARNESS ASSEMBLY, GENERATOR 2 FEED THRU TO STATIC EXCITER	1		1 1
	YAEV6CL4	. TERMINAL, CONVAIR 98-90806-007 -V09922-	1		3
		A AIRPLANES 1. 9 AND ON			
		W WILL CHIECO IN A WIND CIA			
					] [





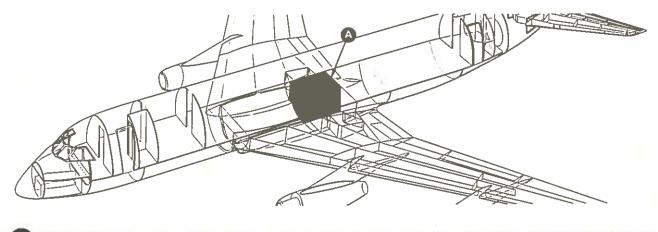

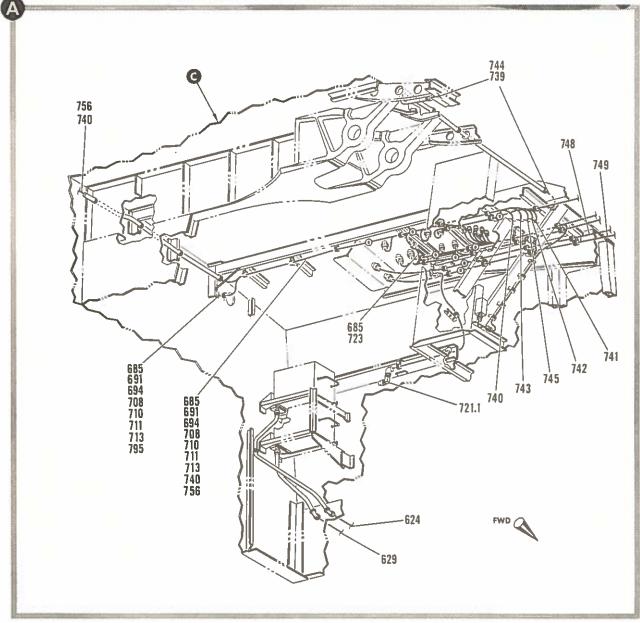


22.04.94.10.003-1


94-10 Page 8 MWW FWD RH ELECTRICAL HARNESSES FIGURE 2 (SHEET 1 OF 2)

Apr. 28/61 A



### ILLUSTRATED PARTS CATALOG

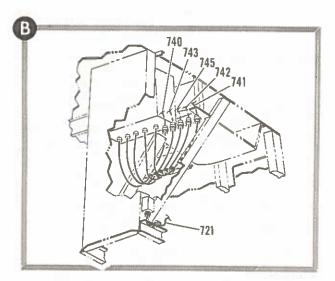

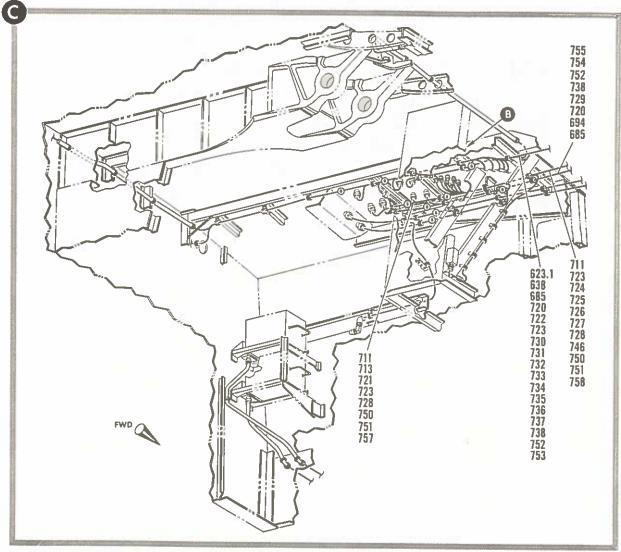

22.04.94.10.003-2



FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNITS
INDEX NO.	FARI NUMBEK		FROM	то	ASSEMBI
2		1 2 3 4 5 6 MWW FWD RH ELECTRICAL HARNESSES			
_		SEE 22-64001			
-720	22-64535	<ul> <li>HARNESS ASSEMBLY, FEED THRU PANEL R TO ENGINE 3 REAR SPAR PERMANENT SPLICE</li> </ul>	1		1
-721	22-64582-1	. HARNESS ASSEMBLY. FEED THRU PANEL X TO	1 1		1
		WHEEL WELL INTERCOM RH			
_721 1	WK6-21C1-2 22-64615	- CONNECTOR, CONVAIR 92-40117-001 -V71468- - HARNESS ASSEMBLY, LANDING GEAR DOOR FWD	1 1		1
-12101	22-04013	UP AND LOCK SWITCH TO PERMANENT SPLICE RH			
	AN3066-6	• • NUT	!		1
	3416-15-1 1EN74-6	- ELBOW, CONVAIR 93-39501-003 -V08484- - SWITCH, LIMIT MLG DOOR MFR TO SPEC			1
		CONT 22-06479-3 -V74059-			
700		CONDUIT, CONVAIR 92-30000-013 -V00624-			1 1
-722	22-64521-1	<ul> <li>HARNESS ASSEMBLY. REAR SPAR FEED THRU</li> <li>PANEL L TO FUEL TANK PANEL G</li> </ul>	_   '		'
-723	22-64600	- HARNESS ASSEMBLY. RH LANDING GEAR	1 1		1
	71-179866-325	DISCONNECT A TO FEED THRU PANELS  CONNECTOR. CONVAIR 92-50288-029 -V77820-	1		1
		- CONNECTOR, CONVAIR 92-30200-029 -V17820-	i		li
	23-1000	ELBOW, CONVAIR 93-39501-006 -V08484-	1 1		1
-724	AN3066-16 22-64503	. NUT . HARNESS ASSEMBLY. COPILOT FLUX GATE			1
-124	22-04303	DISCONNECT TO BOX SECTION PERMANENT	'		'
		SPLICE			
	EX06-14565 024049-0000	CONNECTOR, CONVAIR 92-40332-020 -V71468-			1
-725	22-64574	. HARNESS ASSEMBLY, ENGINE 3 AND 4	i		i
		THERMOCOUPLE WING FUSELAGE DISCONNECT			
	AN3057-68	TO PYLON SPLICE  - ADAPTER, CONVAIR 90-04200-015	_   1		
	CS3106C14S57P	CONNECTOR, CONVAIR 92-40333-002 -V77820-	- i i		2
	AN5548-1	TERMINAL, CONVAIR 98-90819-001			2
-726	AN5548-2 22-64576	. TERMINAL, CONVAIR 98-90819-002  - HARNESS ASSEMBLY, ENGINE 3 AND 4 OIL			í
		QUANTITY WING FUSELAGE DISCONNECT TO			
	1-873-1	PYLON SPLICE . ADAPTER, CONVAIR 90-04322-003 -V95712-			1
	1-817-1	. CONNECTOR, CONVAIR 92-47000-020 -V95712-	i		1
			ļ		




FIGURE AND	PART NUMBER	NOMENCLATURE	USA		UNITS
INDEX NO.	I AKI HOMBEK	1 2 3 4 5 6	FROM	TO	ASSEMBL
2 -728	22-64542	. HARNESS ASSEMBLY. FEED THRU PANEL X TO	1		1
-729	22-64580	RH LANDING LIGHT PERMANENT SPLICE - HARNESS ASSEMBLY, FEED THRU PANEL Q TO	1		1
-730	22-64520-1	ENGINE 4 REAR SPAR PERMANENT SPLICE  HARNESS ASSEMBLY, REAR SPAR FEED THRU	1		1
-731	22-64522-1	PANEL L TO FUEL TANK PANEL F . HARNESS ASSEMBLY. REAR SPAR FEED THRU	1 1		1
		PANEL L TO FUEL TANK PANEL H . HARNESS ASSEMBLY, REAR SPAR FEED THRU	1		1
-732	22-64523-1	PANEL L TO FUEL TANK PANEL S			'
-733	22-64524-1	■ HARNESS ASSEMBLY, REAR SPAR FEED THRU PANEL L TO FUEL TANK PANEL T	1		1
	EX06-14575	CONNECTOR, USED ON 22-64523-1 AND 22-64524-1 CONVAIR 92-40332-006 -V71468	1		1
	024048-0000	. CONTACT, USED ON 22-64523-1 AND 22-64524-1 CONVAIR 92-63901-012 -V71468	1		2
	024049-0000	CONTACT, USED ON 22-64523-1 AND	1		1
	225-0017-000	22-64524-1 CONVAIR 92-63901-011 -V71468 . PLUG, USED ON 22-64523-1 AND	1		1
	36153	22-64524-1 CONVAIR 96-91200-007 -V71468 . TERMINAL, USED ON 22-64523-1	1		1
-734	22-64525-1	CONVAIR 98-90805-003 -V00779- - HARNESS ASSEMBLY: REAK SPAR FEED THRU	1		1
-735	22-64537-1	PANEL L TO FUEL TANK PANEL J . HARNESS ASSEMBLY, FEED THRU PANEL P TO	1		١,
		ENGINE 3 INBD PYLON  HARNESS ASSEMBLY, FEED THRU PANEL N TO			
-736	22-64539	ENGINE 4 REAR SPAR PERMANENT SPLICE			
-737	36153 22-64540-1	. TERMINAL, CONVAIR 98-90805-003 -V00779- . HARNESS ASSEMBLY. FEED THRU PANEL N TO	1	100	1
-738	22-64548	ENGINE 4 OUTBD PYLON - HARNESS ASSEMBLY: FEED THRU PANEL M TO	1		1
120	EX06-14575	INBD BOOST PRESSURE SWITCH 4 . CONNECTOR, CONVAIR 92-40332-006 -V71468-	1		,
	024048-0000	CONTACT. CONVAIR 92-63901-012 -V71468-	i		1 2
	024049-0000	CONTACT, CONVAIR 92-63901-011 -V71468-	1 1		]
	225-0017-000 36153	PLUG, CONVAIR 96-91200-007 -V71468- TERMINAL, CONVAIR 98-90805-003 -V00779-			
-739	22-64596-1	HARNESS ASSEMBLY, RH LANDING GEAR PERMANENT SPLICE BOX TO FEED THRU PANELS	i		1
-740	22-64555	. HARNESS ASSEMBLY, LH ANTISKID CONTROL BOX	1		
	71-184779-14-50	TO PERMANENT SPLICE . CONNECTOR, CONVAIR 92-40325-069 -V06840-	li		
	590001-33-0234	CONDUIT, CONVAIR 92-30000-017 -V00624-	- i		1
-741	22-64564	- HARNESS ASSEMBLY, RH ANTISKID CONTROL BOX TO PERMANENT SPLICE	1		
	71-184779-14-	CONNECTOR, 5PY CONVAIR 92-40325-070	1		1
71.0	590001-33-0233	CONDUIT, CONVAIR 92-30000-016 -V00624-	1		
-742	22-64592	- HARNESS ASSEMBLY, RH ANTISKID CONTROL BOX TO PERMANENT SPLICE			
	71-184779-14-	CONNECTOR, 15P CONVAIR 92-40325-071 -V06840-			
-743	590001-133-0234 22-64593	CONDUIT, CONVAIR 92-30000-021 -V00624- - HARNESS ASSEMBLY, LH ANTISKID CONTROL BOX	1		
	590001-133-0230	TO PERMANENT SPLICE	1		177
	71-184779-14-	CONNECTOR, 15PX CONVAIR 92-40325-072	i		
-744	22-64598	. HARNESS ASSEMBLY. RH LANDING GEAR PERMANENT	1		
-745	22-64612	SPLICE BOX TO FEED THRU PANELS  . HARNESS ASSEMBLY, MLG ANTISKID CONTROL BOX	1		
	590001-33-0240	to FEED THRU PANEL M . CONDUIT, CONVAIR 92-30000-018 -V00624-	1		
	71-184779-14-58	CONNECTOR, CONVAIR 92-40325-068 -V06840-	١ ا		




FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO	GE DE	UNITS PER
INDEX NO.		1 2 3 4 5 6	FROM	то	ASSEMBLY
2 -746	22-64502	- HARNESS ASSEMBLY, PILOT FLUX GATE REAR SPAR DISCONNECT TO BOX SECTION PERMANENT	1		1
ď	EX06-1456S 024048-0000 22-64512	SPLICE - CONNECTOR, CONVAIR 92-40332-020 -V71468 CONTACT, CONVAIR 92-63901-012 -V71468 HARNESS ASSEMBLY, GENERATOR 4 FEED THRU TO	1 1 1		1 6
1	22-64514	STATIC EXCITER - HARNESS ASSEMBLY, GENERATOR 3 FEED THRU TO	1		1
	YAEV6CL4 22-64543	STATIC EXCITER  TERMINAL, CONVAIR 98-90806-007 -V09922- HARNESS ASSEMBLY, FEED THRU PANEL X TO REAR	1	59	3 1
-751	22-64552	SPAR PERMANENT SPLICE RH  HARNESS ASSEMBLY: FEED THRU PANEL X TO LINE CROSS FEED VALVES RH	1		1
	EX06-10SL3S 024048-0000 024049-0000 225-0017-000 36153	. CONNECTOR, CONVAIR 92-40332-007 -V71468 CONTACT, CONVAIR 92-63901-012 -V71468 CONTACT, CONVAIR 92-63901-011 -V71468 PLUG, CONVAIR 96-91200-007 -V71468 TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1 1 1 1 1		14 20 8 8 10
E 2	22-64554 EX06-16515 225-0017-000 024049-0000 024048-0000	- HARNESS ASSEMBLY, FEED THRU PANEL M TO EMERGENCY CROSS FEED VALVE RH - CONNECTOR, CONVAIR 92-40332-007 -V71468 PLUG, CONVAIR 96-91200-007 -V71468 CONTACT, CONVAIR 92-63901-011 -V71468 CONTACT, CONVAIR 92-63901-012 -V71468-	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		1 2 2 5
3	36153 22-64570	TERMINAL, CONVAIR 98-90805-003 -V00779- HARNESS ASSEMBLY, FEED THRU PANEL L TO JETTISON 3 HYDRAULIC SHUT OFF VALVE	1		2
	PT06E8-4S 36153	CONNECTOR, CONVAIR 92-40332-006 -V71468- TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		2 2



FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO	GE DE	UNIT
INDEX NO.	T. T. T. T. T. T. T. T. T. T. T. T. T. T		FROM	то	ASSEME
-755 -756	22-64630 EX06-14575 024049-0000 024048-0000 225-0017-000 22-64636 EX06-14575 024048-0000 024049-0000 024049-0000 225-0017-000 36153 22-64606-1 22-64606 320562 320559 22-64602 320562	1 2 3 4 5 6  - HARNESS ASSEMBLY, FEED THRU PANEL L TO 4 OUTBD BOOST PRESSURE SWITCH  - CONNECTOR, CONVAIR 92-40352-006 -V71468 CONTACT, CONVAIR 92-63901-011 -V71468 CONTACT, CONVAIR 92-63901-012 -V71468 PLUG, CONVAIR 96-91200-007 -V71468 HARNESS ASSEMBLY, FEED THRU PANEL L TO 3 OUTBD BOOST PRESSURE SWITCH - CONNECTOR, CONVAIR 92-63901-012 -V71468 CONTACT, CONVAIR 92-63901-012 -V71468 CONTACT, CONVAIR 92-63901-011 -V71468 PLUG, CONVAIR 96-91200-007 -V71468 PLUG, CONVAIR 96-91200-007 -V71468 IERMINAL, CONVAIR 98-90805-003 -V00779- HARNESS ASSEMBLY, RH WHEEL WELL SHROUD PERMANENT SPLICE TO JUNCTION BOX - HARNESS ASSEMBLY, RH WHEEL WELL SHROUD PERMANENT SPLICE TO JUNCTION BOX - CONDUCTOR, CONVAIR 98-34001-001 -V00779 CONDUCTOR, CONVAIR 98-34001-003 -V00779- HARNESS ASSEMBLY, LANDING GEAR DOOR SWITCH PERMANENT SPLICE TO FEED THRU FWD RH - CONDUCTOR, CONVAIR 98-34001-001 -V00779-	FROM  1 1 1 1 1 1 A 8	8	
-758	320559 22-64538-1	- CONDUCTOR, CONVAIR 98-34001-003 -V00779-  - HARNESS ASSEMBLY, FEED THRU PANEL Q TO  ENGINE 4 REAR SPAR PERMANENT SPLICE	1		
		A AIRPLANES 1, 9 AND ON			

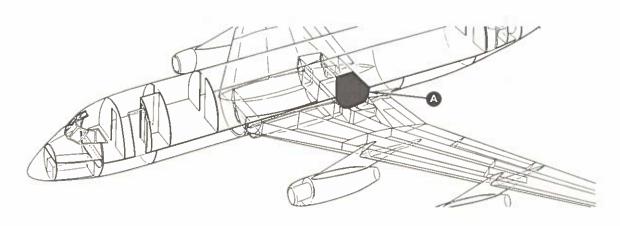

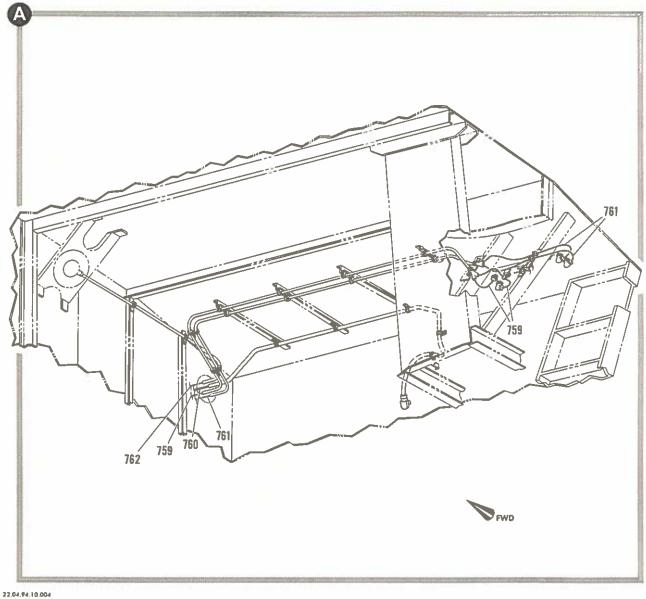

22.04.94,10.004

94-10 Page 14

MWW AFT LH ELECTRICAL HARNESSES FIGURE 3

Apr. 28/61

A


MWW


FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO	DE	UNITS
NDEX NO.		1 2 3 4 5 6	FROM	то	ASSEMB
		MWW AFT LH ELECTRICAL HARNESSES			
		SEE 22-64001			
-759	22-64595	- HARNESS ASSEMBLY, AFT CONTROL VALVES TO	1 1		1
		MAN JUNCTION BOX PERMANENT SPLICE INBD LH			
	71-184776-8-45	CONNECTOR, CONVAIR 92-40325-065 -V06840-	1 1		1
	71-184776-8-4SW	CONNECTOR, CONVAIR 92-40325-066 -V06840-	1 1		1
	590001-11-0100	CONDUIT, CONVAIR 92-30000-005 -V00624-	1 1		1
	590001-11-0090	CONDUIT, CONVAIR 92-30000-004 -V00624-	1 1		[ ]
	3416-14-1	ELBOW, CONVAIR 93-39501-002 -V08484-	1 1		] ]
	AN3066-4	- NUT	1		
-760	148-15-1	- CONDUIT, CONVAIR 99-75000-003 -V08484-	1		
-100	22-64616	<ul> <li>HARNESS ASSEMBLY, LH LANDING GEAR DOOR AFT</li> <li>UP AND LOCK SWITCH TO WHEEL WELL JUNCTION</li> </ul>	'		
		BOX PERMANENT SPLICE			
	1EN74-6	. SWITCH, MER TO SPEC CONT 22-06479-3	1 1		1
	15414-0	-V74059-	'		
	590001-31-0120	CONDUIT, CONVAIR 92-30000-034 -V00624-	1 1		,
-761	22-64611	. HARNESS ASSEMBLY. AFT ANTISKID CONTROL	i		1
		VALVES TO MWW JUNCTION BOX PERMANENT			1
		SPLICE OUTBO LH			
	71-184776-8-45	CONNECTOR: CONVAIR 92-40325-065 -V06840-	1 1		
		CONNECTOR, CONVAIR 92-40325-066 -V06840-	1 1		
	3416-14-1	ELBOW, CONVAIR 93-39501-002 -V08484-	!		
	590001-11-0176	CONDUIT, CONVAIR 92-30000-011 -V00624-			
	590001-11-0154	- CONDUIT, CONVAIR 92-30000-009 -V00624-			4
-762	148-15-1 22-64613	CONDUIT, CONVAIR 99-75000-003 -V08464- . HARNESS ASSEMBLY, LH WHEEL WELL LIGHT TO			
-102	22-04013	WHEEL WELL JUNCTION BOX SPLICE	'		
	590001-7-0274	. CONDUIT. CONVAIR 92-30000-030 -V00624-	1 1		
	370001 1 0214	2 2 DONDOLLA CONTAIN 12 30000 030 400024	'		
	1				
					1
			1		1
	1				



MWW

### ILLUSTRATED PARTS CATALOG

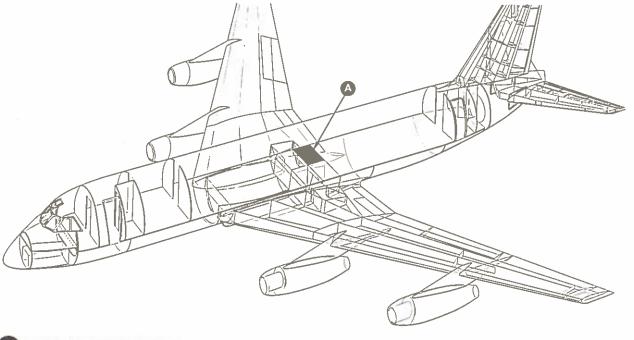

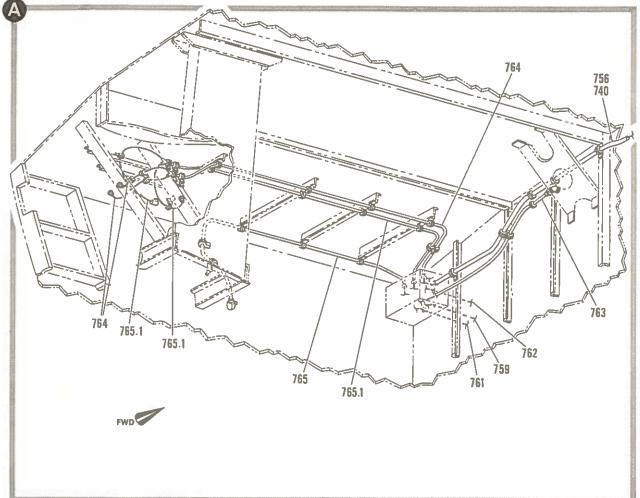

22.04.94.10.005

94-10 Page 16

MWW AFT RH ELECTRICAL HARNESSES FIGURE 4 Apr. 28/61 A




#### USAGE FIGURE UNIT5 CODE AND **PART NUMBER NOMENCLATURE** PER INDEX NO. FROM ASSEMBLY MWW AFT RH ELECTRICAL HARNESSES SEE 22-64001 . HARNESS ASSEMBLY, RH WHEEL WELL LIGHT TO WHEEL WELL JUNCTION BOX SPLICE -763 22-64614 1 1 590001-7-0234 CONDUIT, CONVAIR 92-30000-001 -V00624-. HARNESS ASSEMBLY, AFT CONTROL VALVES TO MWW -764 22-64594 1 1 JUNCTION BOX PERMANENT SPLICE OUTBO RH - CONNECTOR, CONVAIR 92-40325-065 -V06840-- CONNECTOR, CONVAIR 92-40325-066 -V06840-71-184776-8-45 71-184776-8-4SW . CONDUIT, CONVAIR 92-30000-007 -V00624-. CONDUIT, CONVAIR 92-30000-006 -V00624-. CONDUIT, CONVAIR 99-75000-003 -V08484-590001-11-0117 1 590001-11-0114 148-15-1 -76522-64616 - HARNESS ASSEMBLY. RH LANDING GEAR DOOR AFT 1 UP AND LOCK SWITCH TO WHEEL WELL JUNCTION **BOX PERMANENT SPLICE** 1EN74-6 . . SWITCH, MFR TO SPEC CONT 22-06479-3 1 1 -V74059-590001-31-0120 CONDUIT, CONVAIR 92-30000-034 -V00624--765-1 22-64508 . HARNESS ASSEMBLY, AFT ANTISKID CONTROL 1 VALVES TO MWW JUNGTION BOX PERMANENT SPLICE INBD RH . . CONDUIT, CONVAIR 92-30000-010 -V00624-. . CONDUIT, CONVAIR 92-30000-008 -V00624-590001-11-0162 590001-11-0151 AN3060-4 ELBOW, CONVAIR 93-39500-002 - CONNECTOR, CONVAIR 92-40335-065 -V77820-- CONNECTOR, CONVAIR 92-40335-066 -V77820-71-184776-45 71-184776-4SW 148-15-1 - - CONDUIT, CONVAIR 99-75000-003 -V08484-



MWW

### ILLUSTRATED PARTS CATALOG

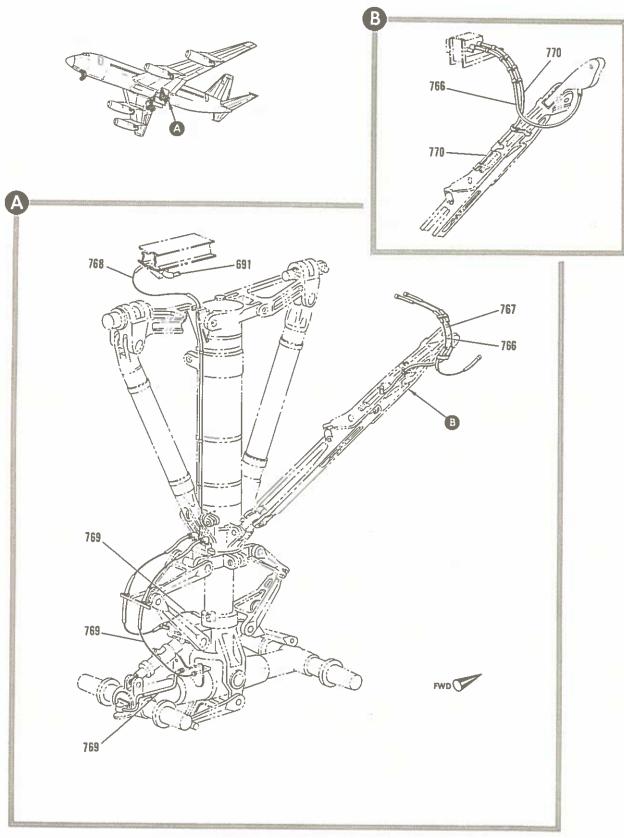

22.04.94 10.007

94-10 Page 18 MLG ELECTRICAL HARNESSES FIGURE 5

Apr. 28/61 A

FIGURE		NOMENC! ATURE	USA		UNITS
AND NDEX NO.	PART NUMBER	NOMENCLATURE	FROM	то	ASSEMBI
-766	22-64504 1EN65-6	MLG ELECTRICAL HARNESSES SEE 22-64001  - HARNESS ASSEMBLY. MLG PERMANENT SPLICE BOX TO UP-LOCK SWITCH  - SWITCH. MFR TO SPEC CONT 22-06480-1	1		1
-768	590001-117-0287 22-64506 93702-0360 71-184781-32P	-V74059 CONDUIT, CONVAIR 92-30000-025 -V00624 HARNESS ASSEMBLY, DISCONNECT PLUG A TO MLG . CONDUIT, CONVAIR 92-30000-042 -V95955 CONNECTOR. CONVAIR 92-40325-074 -V06840-	1 1 1		1 1 1 1
-769	22-64507-811	<ul> <li>HARNESS ASSEMBLY, PERMANENT SPLICE BOX</li> <li>TO MLG ANTI-SKID DETECTORS</li> </ul>	A 2	7	'
	22-64507 H10-35	<ul> <li>HARNESS ASSEMBLY, PERMANENT SPLICE BOX</li> <li>TO MLG TRUCK POSITION SWITCH</li> <li>SWITCH, TRUCK POSITION MFR TO SPEC</li> </ul>	1	'	
	TEMP22068433	CONT 22-06483-1 -V97198- . SHITCH, MFR TO SPEC CONT 22-06843-3	ı		1
	25EN13-6		1		1
	PT06E8-4S 590001-135-0364 590001-31-0403 218-2-1 218-1-1	. CONNECTOR, CONVAIR 92-40325-006 -V06840 CONDUIT, CONVAIR 92-30000-046 -V00624 CONDUIT, CONVAIR 92-30000-024 -V00624 ELBOW, CONVAIR 93-39503-002 -V08484 ELBOW, CONVAIR 93-39503-001 -V08484-	1 1		1
	AN3066-10 AN3066-8	. NUT			
-770	22-64641 5EN13-6B	HARNESS ASSEMBLY, PERMANENT SPLICE BOX TO MLG SWITCHES SWITCH, MFR TO SPEC CONT 22-06478-1			
	21EN65-6	-V74059- SWITCH, MFR TO SPEC CONT 22-06480-3	1		
	590001-49-0272 590001-117-0056	-V74059 CONDUIT, CONVAIR 92-30000-038 -V00624 CONDUIT, CONVAIR 92-30000-039 -V00624-	1		
		A AIRPLANES 1. B AND ON			
	25	EI EI	331		
			41		
		CK:			



ELECTRICAL HARNESSES WING



SECTION V


Chapter 94 ELECTRICAL HARNESSES

WING ELECTRICAL HARNESSES



WING

### ILLUSTRATED PARTS CATALOG

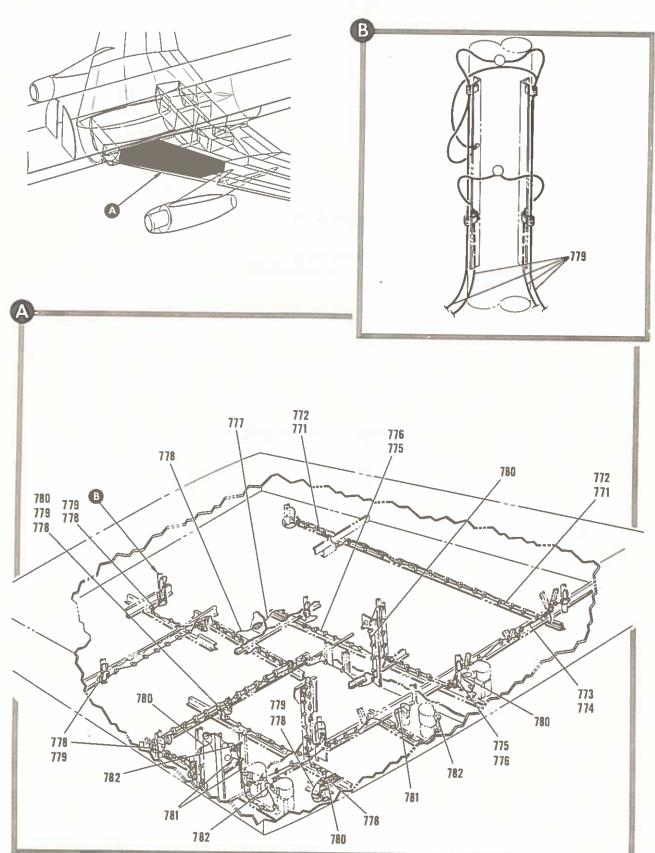

94-11 Page 2

22.04.94.11.002


MAIN FUEL TANK 2 AND 3 WING ELECTRICAL HARNESSES Apr. 28/61 FIGURE 1



FIGURE AND	PART NUMBER	NOMENCLATURE	USA		UNITS
NDEX NO.	I AKI HOMBEK		FROM	ТО	ASSEMB
TDEX TO		1 2 3 4 5 6	_		
		MAIN FUEL TANKS 2 AND 3 WING ELECTRICAL			
	1	HARNESSES SEE 22-64002	1 . !		Ι.
-771	22-64625-805	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 2	1 1		
		PROBES TO DISCONNECT TR 26 TO			
		FUEL TANK FEED THRU LH	1 1		
	22-64626-805	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 3			
		PROBES TO DISCONNECT TR 26 TO			
	7/153	FUEL TANK FEED THRU RH . TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		
	36153 GSB109	. FERRULE, CONVAIR 93-71301-002 -V59730-	i		
	GSC 175	. FERRULE, CONVAIR 93-71300-004 -V59730-	_   i		1
-772	22-64625-5	HARNESS ASSEMBLY, REPLENISHING FUEL TANK 2	i		
-112	22-04023-3	PROBES TO DISCONNECT TR 16 TO TR 27 LH			
	22-64626-5	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 3	1 1		
	22 04020 3	PROBES TO DISCONNECT TR 16 TO TR 27 RH			
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		
-773	22-64625-803	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 2	1 1		
113	22 04023 003	PROBES TO DISCONNECT TR 15 TO TR 16 LH			
	22-64626-803	- HARNESS ASSEMBLY, REPLENISHING FUEL TANK 3	1		
		PROBES TO DISCONNECT TR 15 TO TR 16 RH			1
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1	İ	1
	GSC 175	FERRULE, CONVAIR 93-71300-004 -V59730-	1		
	GS8109	. FERRULE, CONVAIR 93-71301-002 -V59730-	1		1
-774	22-64625-3	- HARNESS ASSEMBLY, REPLENISHING FUEL TANK 2	1		
		PROBES TO DISCONNECT TR 15 TO TR 16 LH			1
	22-54626-3	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 3	1		
		PROBES TO DISCONNECT IR 15 TO TR 16 RH			
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		l
-775	22-64625-1	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 2	1		
		PROBES TO DISCONNECT TR 26 TO TR 15 LH			1
	22-64626-1	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 3	1		
		PROBES TO DISCONNECT TR 26 TO TR 15 RH			
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1	1	
-776	22-64625-801	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 2	1		
		PROBES TO DISCONNECT TR 26 TO TR 15 LH	1 .		
	22-64626-801	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 3	1		
		PROBES TO DISCONNECT TR 26 TO TR 15 RH			
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		
	GSC 175	- FERRULE, CONVAIR 93-71300-004 -V59730-	1 1		
	GSB109	- FERRULE, CONVAIR 93-71301-002 -V59730-	1		
-777	22-64625	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 2	1		
		TR 26 TO TANK FEED THRU LH			
	22-64626	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 3	1	ļ	
		TR 26 TO TANK FEED THRU RH			
	1-817-1	CONNECTOR, CONVAIR 92-47000-020 -V95712-	1 !		
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		
	GSB109	. FERRULE, CONVAIR 93-71301-002 -V59730-			
	GSC175	- FERRULE, CONVAIR 93-71300-004 -V59730-			1
-778	22-64627-1	. HARNESS ASSEMBLY, MAIN FUEL TANK 2 PROBES	'		1
	100 41 100 -	TO WING DISCONNECT FEED THRU TO TR 29 LH	1		
	22-64628-1	. HARNESS ASSEMBLY, MAIN FUEL TANK 3 PROBES	'		
	2 027 2	TO WING DISCONNECT FEED THRU TO TR 30 RH	1		1
	1-817-1	CONNECTOR, CONVAIR 92-47000-020 -V95712-	;		
	GSC175	. FERRULE, CONVAIR 93-71300-004 -V59730-	i		1
	GSB109	. FERRULE, CONVAIR 93-71301-002 -V59730- . TERMINAL, CONVAIR 98-90805-003 -V00779-			1 :
	36153	. TERMINAL, CONVAIR 98-90805-003 - V00779-	1 1		Ι.
770	320553	- HARNESS ASSEMBLY, MAIN FUEL TANK 2 PROBES	i		
-779	22-64627		'	1	
	20 41400	TO WING DISCONNECT TR 30 TO TR 29 LH	1		
	22-64628	• HARNESS ASSEMBLY, MAIN FUEL TANK 3 PROBES TO WING DISCONNECT TK 32 TO TR 30 RH	'		
	74157		1		
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	i		
	320553	IEKWINAT'S POWANTY AGAAGGAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA	'		




AND INDEX NO.	PART NUMBER			DE	PER
		NOMENCLATURE	FROM	то	ASSEMBLY
1 -780	22-64302-23	- HARNESS ASSEMBLY, FUEL TANK TRANSFER	1	14	1
	22-64302-43	BOOSTER PUMP LH - HARNESS ASSEMBLY, FUEL TANK TRANSFER	5		1
	22-64302-25	BOOSTER PUMP LH  - HARNESS ASSEMBLY, FUEL TANK TRANSFER BOOSTER PUMP RH	3	14	1
	22-64302-45	BOUSTER PUMP RA  HARNESS ASSEMBLY, FUEL TANK TRANSFER BOUSTER PUMP RH	5		1
	14043 MWP718-1P1	CONNECTOR, CONVAIR 92-50305-001 -v17419- . TERMINAL BOARD, CONVAIR 98-91724-002 -v09922-	1 1		1
	36153 AN3058-12	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	AN3066-12 AN960-2016L	. NUT	1		1
-781	22-64302-1 22-64302-27 22-64302-15 22-64302-37 14043	- HARNESS ASSEMBLY, SWITCH FLOAT FUEL PUMP LH - HARNESS ASSEMBLY, SWITCH FLOAT FUEL PUMP LH - HARNESS ASSEMBLY, SWITCH FLOAT FUEL PUMP RH - HARNESS ASSEMBLY, SWITCH FLOAT FUEL PUMP RH - CONNECTOR, CONVAIR 92-50305-001 -V17419-	1 5 1 5	14	1 1 1
	CA3100ER 10SL3P HWP718-1P1	CONNECTOR, CONVAIR 92-50272-002 -V71468- - TERMINAL BOARD, CONVAIR 98-91724-002 -V009922-	i		i
-782	36153 22-64302-5	. TERMINAL, LH CONVAIR 98-90805-003 -V00779  HARNESS ASSEMBLY, FUEL BOOSTER PUMP LH	1	la.	1 1
	22-64302-31 22-64302-17	- HARNESS ASSEMBLY, FUEL BOOSTER PUMP LH - HARNESS ASSEMBLY, FUEL BOOSTER PUMP RH	5	h	1
	22-64302-39	- HARNESS ASSEMBLY, FUEL BOOSTER PUMP RH	5	4	1
	14043 MWP718-1P1	CONNECTOR, CONVAIR 92-50305-001 -V17419- TERMINAL BOARD, CONVAIR 98-91724-002			2
		~V09922-			
		€			





WING

### ILLUSTRATED PARTS CATALOG

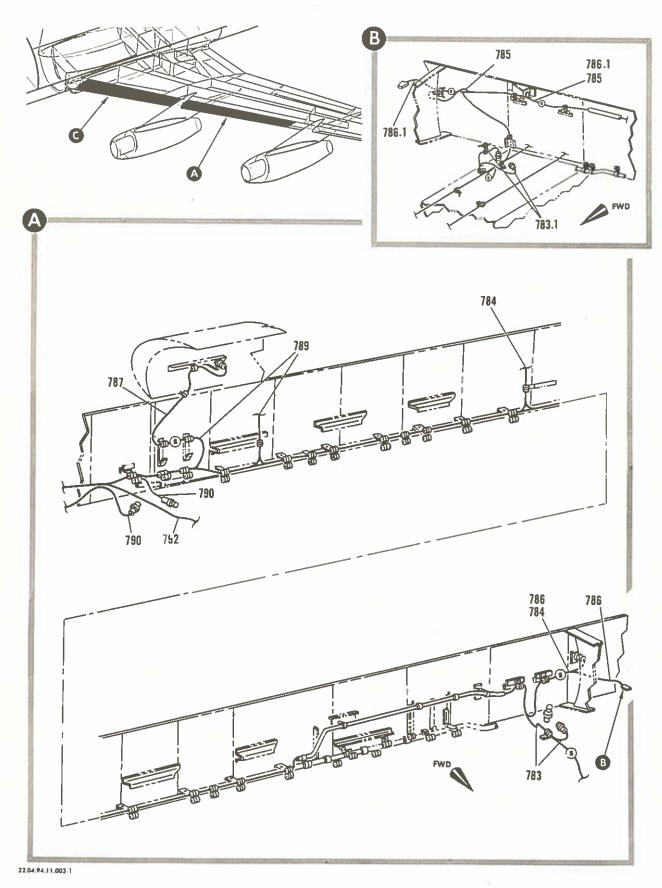


94-11 Page 6 WING LEADING EDGE ELECTRICAL HARNESSES FIGURE 2 (SHEET 1 OF 2)


Apr. 28/61




### ILLUSTRATED PARTS CATALOG

WING

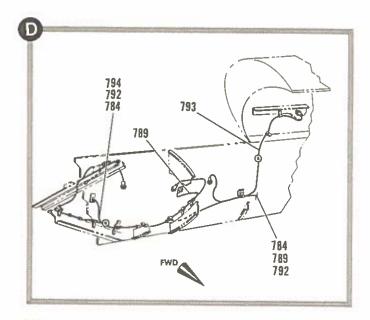

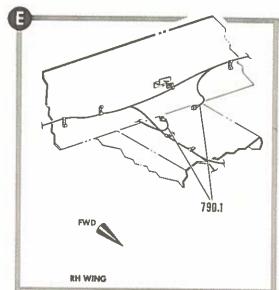

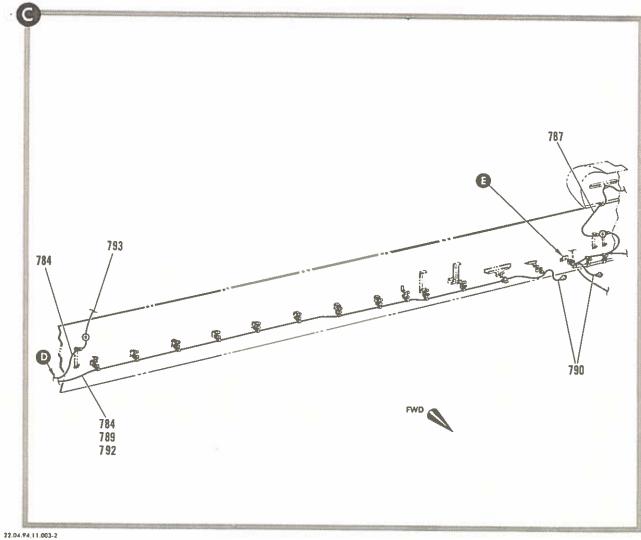

77.D4.V4,11.003-2


Apr. 28/61

WING LEADING EDGE ELECTRICAL HARNESSES FIGURE 2 (SHEET 2 OF 2)

94-11 Page 7




-64509 -64608 06-12535 06-105L45 4049-0000 0570 0562 -64619 -64620	NOMENCLATURE  1 2 3 4 5 6  WING LEADING EDGE ELECTRICAL HARNESSES SEE 22-64002  HARNESS ASSEMBLY, OUTBD LH BLEED AIR VALVE TO PERMANENT SPLICE  HARNESS ASSEMBLY, OUTBD RH BLEED AIR VALVE TO PERMANENT SPLICE  CONNECTOR, CONVAIR 92-40332-003 -V71468-  CONNECTOR, CONVAIR 92-40332-002 -V71468-  CONTACT, CONVAIR 92-63901-011 -V71468-  CONTACT, CONVAIR 92-63901-012 -V71468-  CONDUCTOR, CONVAIR 98-34001-002 -V00779-  CONDUCTOR, CONVAIR 98-34001-001 -V00779-  HARNESS ASSEMBLY, FEED THRU PANEL A TO  LH WING TEMPERATURE SENSOR  HARNESS ASSEMBLY, FEED THRU PANEL A TO	FROM	то	PER ASSEMBL
-64608 06-12535 06-105L45 4049-0000 4048-0000 0570 0562 -64619 -64620	WING LEADING EDGE ELECTRICAL HARNESSES SEE 22-64002  HARNESS ASSEMBLY, OUTBD LH BLEED AIR VALVE TO PERMANENT SPLICE  HARNESS ASSEMBLY, OUTBD RH BLEED AIR VALVE TO PERMANENT SPLICE  CONNECTOR, CONVAIR 92-40332-003 - V71468-  CONNECTOR, CONVAIR 92-40332-002 - V71468-  CONTACT, CONVAIR 92-63901-011 - V71468-  CONTACT, CONVAIR 92-63901-012 - V71468-  CONDUCTOR, CONVAIR 98-34001-002 - V00779-  HARNESS ASSEMBLY, FEED THRU PANEL A TO  HARNESS ASSEMBLY, FEED THRU PANEL A TO	1 1 1 1 1 1 1 1 1		1 1 1 3 3 1
-64608 06-12535 06-105L45 4049-0000 4048-0000 0570 0562 -64619 -64620	. HARNESS ASSEMBLY, OUTBD LH BLEED AIR VALVE TO PERMANENT SPLICE  HARNESS ASSEMBLY, OUTBD RH BLEED AIR VALVE TO PERMANENT SPLICE  CONNECTOR, CONVAIR 92-40332-003 -V71468-  CONNECTOR, CONVAIR 92-40332-002 -V71468-  CONTACT, CONVAIR 92-63901-011 -V71468-  CONTACT, CONVAIR 92-63901-012 -V71468-  CONDUCTOR, CONVAIR 98-34001-002 -V00779-  CONDUCTOR, CONVAIR 98-34001-001 -V00779-  HARNESS ASSEMBLY, FEED THRU PANEL A TO  LH WING TEMPERATURE SENSOR  HARNESS ASSEMBLY, FEED THRU PANEL A TO	1 1 1 1 1 1 1 1 1		1 1 3 3 1
-64608 06-12535 06-105L45 4049-0000 4048-0000 0570 0562 -64619 -64620	TO PERMANENT SPLICE  HARNESS ASSEMBLY, OUTBD RH BLEED AIR VALVE TO PERMANENT SPLICE  CONNECTOR, CONVAIR 92-40332-003 -V71468- CONNECTOR, CONVAIR 92-40332-002 -V71468- CONTACT, CONVAIR 92-63901-011 -V71468- CONTACT, CONVAIR 92-63901-012 -V71468- CONDUCTOR, CONVAIR 98-34001-002 -V00779- CONDUCTOR, CONVAIR 98-34001-001 -V00779- HARNESS ASSEMBLY, FEED THRU PANEL A TO LH WING TEMPERATURE SENSOR HARNESS ASSEMBLY, FEED THRU PANEL A TO	1 1 1 1 1 1 1 1 1		1 1 3 3 1
06-12535 06-105L45 4049-0000 4048-0000 0570 0562 -64619	. HARNESS ASSEMBLY, OUTBD RH BLEED AIR VALVE TO PERMANENT SPLICE . CONNECTOR, CONVAIR 92-40332-003 -V71468 CONNECTOR, CONVAIR 92-40332-002 -V71468 CONTACT, CONVAIR 92-63901-011 -V71468 CONTACT, CONVAIR 92-63901-012 -V71468 CONDUCTOR, CONVAIR 98-34001-002 -V00779 CONDUCTOR, CONVAIR 98-34001-001 -V00779- HARNESS ASSEMBLY, FEED THRU PANEL A TO LH WING TEMPERATURE SENSOR HARNESS ASSEMBLY, FEED THRU PANEL A TO	1 1 1 1 1 1		3
06-12535 06-105L45 4049-0000 4048-0000 0570 0562 -64619	TO PERMANENT SPLICE . CONNECTOR, CONVAIR 92-40332-003 -V71468 CONNECTOR, CONVAIR 92-40332-002 -V71468 CONTACT, CONVAIR 92-63901-011 -V71468 CONTACT, CONVAIR 92-63901-012 -V71468 CONDUCTOR, CONVAIR 98-34001-002 -V00779 CONDUCTOR, CONVAIR 98-34001-001 -V00779 HARNESS ASSEMBLY, FEED THRU PANEL A TO LH WING TEMPERATURE SENSOR . HARNESS ASSEMBLY, FEED THRU PANEL A TO	1 1 1 1 1 1		1 3
06-105L4S 4049-0000 4048-0000 0570 0562 -64619 -64620	. CONNECTOR, CONVAIR 92-40332-003 -V71468 CONNECTOR, CONVAIR 92-40332-002 -V71468 CONTACT, CONVAIR 92-63901-011 -V71468 CONTACT, CONVAIR 92-63901-012 -V71468 CONDUCTOR, CONVAIR 98-34001-002 -V00779 CONDUCTOR, CONVAIR 98-34001-001 -V00779 HARNESS ASSEMBLY, FEED THRU PANEL A TO LH WING TEMPERATURE SENSOR . HARNESS ASSEMBLY, FEED THRU PANEL A TO	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		3
06-105L4S 4049-0000 4048-0000 0570 0562 -64619 -64620	. CONNECTOR, CONVAIR 92-40332-002 -V71468 CONTACT, CONVAIR 92-63901-011 -V71468 CONTACT, CONVAIR 92-63901-012 -V71468 CONDUCTOR, CONVAIR 98-34001-002 -V00779 CONDUCTOR, CONVAIR 98-34001-001 -V00779 HARNESS ASSEMBLY, FEED THRU PANEL A TO LH WING TEMPERATURE SENSOR . HARNESS ASSEMBLY, FEED THRU PANEL A TO	1 1		3
4048-0000 0570 0562 -64619 -64620	CONTACT, CONVAIR 92-63901-012 -V71468 CONDUCTOR, CONVAIR 98-34001-002 -V00779 CONDUCTOR, CONVAIR 98-34001-001 -V00779 HARNESS ASSEMBLY, FEED THRU PANEL A TO LH WING TEMPERATURE SENSOR HARNESS ASSEMBLY, FEED THRU PANEL A TO	1 1		1
0570 0562 -64619 -64620	. CONDUCTOR, CONVAIR 98-34001-002 -V00779 CONDUCTOR, CONVAIR 98-34001-001 -V00779 HARNESS ASSEMBLY, FEED THRU PANEL A TO LH WING TEMPERATURE SENSOR . HARNESS ASSEMBLY, FEED THRU PANEL A TO	1 1		
0562 -64619 -64620 151	. CONDUCTOR, CONVAIR 98-34001-001 -V00779- HARNESS ASSEMBLY, FEED THRU PANEL A TO LH WING TEMPERATURE SENSOR HARNESS ASSEMBLY, FEED THRU PANEL A TO	_   i		
-64619 -64620 151	<ul> <li>HARNESS ASSEMBLY, FEED THRU PANEL A TO LH WING TEMPERATURE SENSOR</li> <li>HARNESS ASSEMBLY, FEED THRU PANEL A TO</li> </ul>			i
151	- HARNESS ASSEMBLY, FEED THRU PANEL A TO			
151				
		1		1
	RH WING TEMPERATURE SENSOR	1	!	17
	. TERMINAL, CONVAIR 98-90805-001 -V00779-			1 3
0570	CONDUCTOR CONVAIR 98-34001-002 -V00779-	i		1
0562	CONDUCTOR, CONVAIR 98-34001-001 -V00779-	i		12
-64988	- HARNESS ASSEMBLY, TEMPERATURE SENSOR	1 1		1 '
44.003				
-64991		'		
-64989		1 1		
	WING LEADING EDGE CENTER LH			
-64992	. HARNESS ASSEMBLY, TEMPERATURE SENSOR	1		
0550				
		1 1		'
2723 -64519	. HARNESS ASSEMBLY, BLEED AIR VALVE TO			
•	PERMANENT SPLICE INBD LH			
06-12535	- CONNECTOR, CONVAIR 92-40332-003 -V71468-			
· · · · · · · · · · · · · · · · · · ·		_   i		
	CENTER PERMANENT SPLICE LH			
-64546	. HARNESS ASSEMBLY, BLEED AIR VALVE TO	1		
0/ 10576				
		, ,		
1-0614-000	_ CONTACT, CONVAIR 92-63901-011 -V71468-	i		,
-64585-1	- HARNESS ASSEMBLY, FEED THRU PANEL A TO	1		
	VENT SCOOP LH			Ι
-04770	MING LEADING EDGE INBO LH	'		
-64993	. HARNESS ASSEMBLY, TEMPERATURE SENSOR	1		
	WING LEADING EDGE INBD RH			
0559	- CONDUCTOR, CONVAIR 98-34001-003 -V00779-	!		'
		1 *		
04207	LANDING LIGHT TRANSFORMER INBD LH	'		
153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		
	-64992  0559  2P2S -64519  06-12S3S 06-10SL4S +048-0000 -64545  -64546  06-12S3S 06-10SL4S -0667-000 1-0614-000 -64585-1  153 -64990 -64993	WING LEADING EDGE OUTBD NH  HARNESS ASSEMBLY, TEMPERATURE SENSOR WING LEADING EDGE CENTER LH  HARNESS ASSEMBLY, TEMPERATURE SENSOR WING LEADING EDGE CENTER RH  COSSO CONVECTOR, CONVAIR 98-34001-003 -V00779- CONNECTOR, CONVAIR 92-50224-007 -V81312- CONNECTOR, CONVAIR 92-50224-007 -V81312- CONNECTOR, CONVAIR 92-40332-003 -V71468- CONNECTOR, CONVAIR 92-40332-003 -V71468- CONNECTOR, CONVAIR 92-63901-011 -V71468- CONTACT, CONVAIR 92-63901-011 -V71468- CONTECTOR, CONVAIR 92-63901-011 -V71468- CONTECTOR, CONVAIR 92-63901-011 -V71468- CONTECTOR, CONVAIR 92-40332-003 -V71468- CONTECTOR, CONVAIR 92-40332-003 -V71468- CONTECTOR, CONVAIR 92-40332-003 -V71468- CONNECTOR, CONVAIR 92-40332-003 -V71468- CONNECTOR, CONVAIR 92-40332-001 -V71468- CONTECTOR, CONVAIR 92-40332-001 -V71468- CONTECTOR, CONVAIR 92-63901-011 -V71468- CONTECTOR, CONVAIR 92-63901-011 -V71468- CONTECTOR, CONVAIR 92-63901-011 -V71468- CONTECTOR, CONVAIR 92-63901-011 -V71468- CONTECTOR, CONVAIR 92-63901-011 -V71468- CONTECTOR, CONVAIR 92-63901-012 -V71468- CONTECTOR, CONVAIR 92-63901-012 -V71468- CONTECTOR, CONVAIR 92-63901-012 -V71468- CONTECTOR, CONVAIR 92-63901-012 -V71468- CONTECTOR, CONVAIR 92-63901-012 -V71468- CONTECTOR, CONVAIR 92-63901-012 -V71468- CONTECTOR, CONVAIR 92-63901-012 -V71468- CONTECTOR, CONVAIR 92-63901-012 -V71468- CONTECTOR, CONVAIR 92-63901-012 -V71468- CONTECTOR, CONVAIR 92-63901-012 -V71468- CONTECTOR, CONVAIR 92-63901-012 -V71468- CONTECTOR, CONVAIR 92-63901-012 -V71468- CONTECTOR, CONVAIR 92-63901-012 -V71468- CONDUCTOR, CONVAIR 92-63901-012 -V71468- CONDUCTOR, CONVAIR 92-63901-012 -V71468- CONDUCTOR, CONVAIR 92-63901-012 -V71468- CONDUCTOR, CONVAIR 92-63901-013 -V00779- CONNECTOR, CONVAIR 92-63901-013 -V00779- CONNECTOR, CONVAIR 92-63901-014 -V71468- CONDUCTOR, CONVAIR 92-63901-014 -V71468- CONDUCTOR, CONVAIR 92-63901-014 -V71468- CONDUCTOR, CONVAIR 92-63901-014 -V71468- CONDUCTOR, CONVAIR 92-63901-015 -V71468- CONDUCTOR, CONVAIR 92-63901-015 -V71468- CONDUCTOR, CONVAIR 92-63901-015 -V71468- CONDUCTOR, CONVAIR 92-63901-015 -V714	-64991  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64992  -64992  -64992  -64980  -64992  -64992  -64989  -64992  -64988  -64992  -64993  -64992  -64989  -64992  -64989  -64992  -64993  -64998  -64993  -64993  -64993  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64999  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64989  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988  -64988	-64991






WING


### ILLUSTRATED PARTS CATALOG

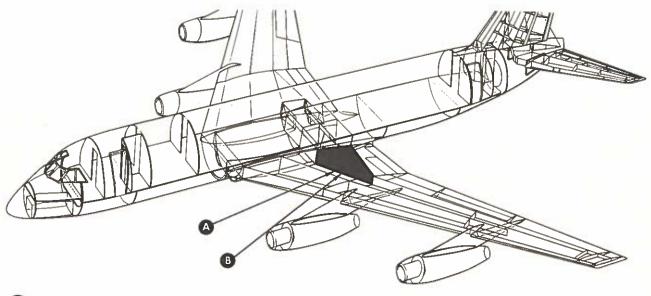


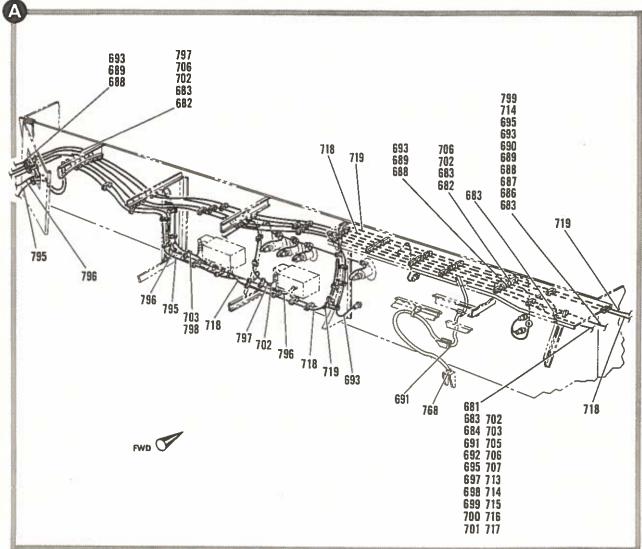

22.04.94.11.004-1



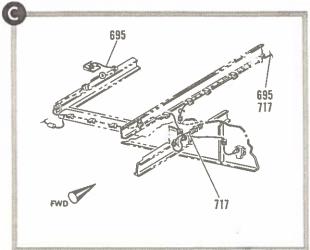

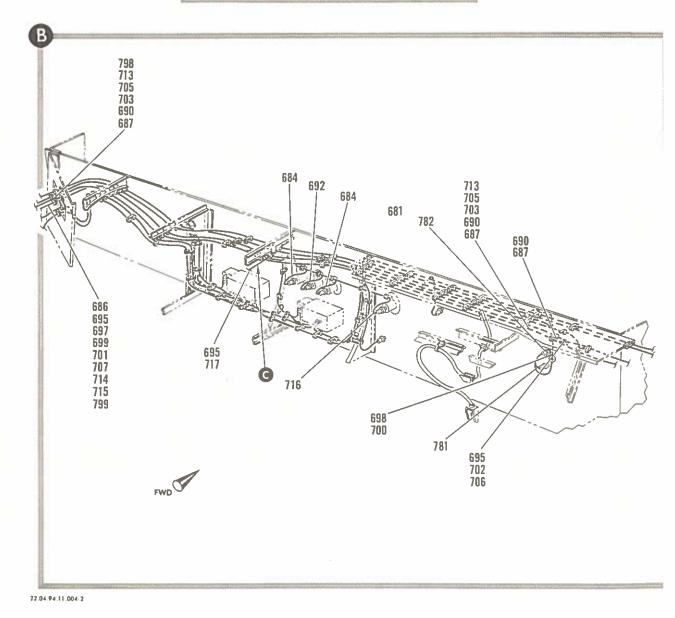



Apr. 28/61


WING TRAILING EDGE ELECTRICAL HARNESSES FIGURE 3 (SHEET 2 OF 2)



AND NDEX NO. -795 -796 -797	PART NUMBER  22-64515  22-64516  22-64518  YAEV6C-L4  22-64638-1  22-64639-1  320563  22-64637-1  22-64640-1  36153 36153 36153	NOMENCLATURE  1 2 3 4 5 6  WING TRAILING EDGE ELECTRICAL HARNESSES SEE 22-64002  HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 1 REAR SPAR PERMANENT SPLICE LH  HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 4 REAR SPAR PERMANENT SPLICE RH  HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 2 REAR SPAR PERMANENT SPLICE LH  HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 3 REAR SPAR PERMANENT SPLICE RH  TERMINAL, CONVAIR 98-90806-007 -V02198- HARNESS ASSEMBLY, STATIC EXCITER 2 TO PERMANENT SPLICE LH  HARNESS ASSEMBLY, STATIC EXCITER 3 TO PERMANENT SPLICE RH  TERMINAL, CONVAIR 98-90805-012 -V00779- HARNESS ASSEMBLY, STATIC EXCITER 1 TO PERMANENT SPLICE LH  HARNESS ASSEMBLY, STATIC EXCITER 4 TO PERMANENT SPLICE LH  HARNESS ASSEMBLY, STATIC EXCITER 4 TO PERMANENT SPLICE RH  TERMINAL, LH CONVAIR 98-90805-003 -V00779  TERMINAL, RH CONVAIR 98-90805-003 -V00779	FROM  1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	то	PER ASSEMBL 1 1 1 1 3 1
-795 -796 -797	22-64516 22-64517 22-64518 YAEV6C-L4 22-64638-1 22-64639-1 320563 22-64637-1 22-64640-1 36153 36153 22-64553	WING TRAILING EDGE ELECTRICAL HARNESSES SEE 22-64002 HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 1 REAR SPAR PERMANENT SPLICE LH HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 4 REAR SPAR PERMANENT SPLICE RH HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 2 REAR SPAR PERMANENT SPLICE L H HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 3 REAR SPAR PERMANENT SPLICE RH TERMINAL, CONVAIR 98-90806-007 -V02198- HARNESS ASSEMBLY, STATIC EXCITER 2 TO PERMANENT SPLICE LH HARNESS ASSEMBLY, STATIC EXCITER 3 TO PERMANENT SPLICE RH TERMINAL, CONVAIR 98-90805-012 -V00779- HARNESS ASSEMBLY, STATIC EXCITER 1 TO PERMANENT SPLICE LH HARNESS ASSEMBLY, STATIC EXCITER 4 TO PERMANENT SPLICE RH TERMINAL, LH CONVAIR 98-90805-003 -V00779 TERMINAL, RH CONVAIR 98-90805-003 -V00779	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		1 1 3 1 1 2
-796 -797	22-64516 22-64517 22-64518 YAEV6C-L4 22-64638-1 22-64639-1 320563 22-64637-1 22-64640-1 36153 36153 22-64553	HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 1 REAR SPAR PERMANENT SPLICE LH HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 4 REAR SPAR PERMANENT SPLICE RH HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 2 REAR SPAR PERMANENT SPLICE L H HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 3 REAR SPAR PERMANENT SPLICE RH TERMINAL, CONVAIR 98-90806-007 -V02198- HARNESS ASSEMBLY, STATIC EXCITER 2 TO PERMANENT SPLICE LH HARNESS ASSEMBLY, STATIC EXCITER 3 TO PERMANENT SPLICE RH TERMINAL, CONVAIR 98-90805-012 -V00779- HARNESS ASSEMBLY, STATIC EXCITER 1 TO PERMANENT SPLICE LH HARNESS ASSEMBLY, STATIC EXCITER 4 TO PERMANENT SPLICE RH TERMINAL, LH CONVAIR 98-90805-003 -V00779 TERMINAL, RH CONVAIR 98-90805-003 -V00779	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		1 1 3 1 1 2
-796 -797	22-64516 22-64517 22-64518 YAEV6C-L4 22-64638-1 22-64639-1 320563 22-64637-1 22-64640-1 36153 36153 22-64553	ENGINE 1 REAR SPAR PERMANENT SPLICE LH  HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 4 REAR SPAR PERMANENT SPLICE RH  HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 2 REAR SPAR PERMANENT SPLICE L H  HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 3 REAR SPAR PERMANENT SPLICE RH  TERMINAL, CONVAIR 98-90806-007 -V02198-  HARNESS ASSEMBLY, STATIC EXCITER 2 TO PERMANENT SPLICE LH  HARNESS ASSEMBLY, STATIC EXCITER 3 TO PERMANENT SPLICE RH  TERMINAL, CONVAIR 98-90805-012 -V00779-  HARNESS ASSEMBLY, STATIC EXCITER 1 TO PERMANENT SPLICE LH  HARNESS ASSEMBLY, STATIC EXCITER 4 TO PERMANENT SPLICE RH  TERMINAL, LH CONVAIR 98-90805-003 -V00779  TERMINAL, RH CONVAIR 98-90805-003 -V00779	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		1 1 3 1 1 2
-797	22-64517 22-64518 YAEV6C-L4 22-64638-1 22-64639-1 320563 22-64637-1 22-64640-1 36153 36153 22-64553	- HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 4 REAR SPAR PERMANENT SPLICE RH HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 2 REAR SPAR PERMANENT SPLICE L H HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 3 REAR SPAR PERMANENT SPLICE RH TERMINAL, CONVAIR 98-90806-007 -V02198- HARNESS ASSEMBLY, STATIC EXCITER 2 TO PERMANENT SPLICE LH HARNESS ASSEMBLY, STATIC EXCITER 3 TO PERMANENT SPLICE RH TERMINAL, CONVAIR 98-90805-012 -V00779- HARNESS ASSEMBLY, STATIC EXCITER 1 TO PERMANENT SPLICE LH HARNESS ASSEMBLY, STATIC EXCITER 4 TO PERMANENT SPLICE RH TERMINAL, LH CONVAIR 98-90805-003 -V00779 TERMINAL, RH CONVAIR 98-90805-003 -V00779	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		1 3 1 1 2
-797	22-64518 YAEV6C-L4 22-64638-1 22-64639-1 320563 22-64637-1 22-64640-1 36153 36153 22-64553	. HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 2 REAR SPAR PERMANENT SPLICE L H HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 3 REAR SPAR PERMANENT SPLICE RH . TERMINAL, CONVAIR 98-90806-007 -V02198- HARNESS ASSEMBLY, STATIC EXCITER 2 TO PERMANENT SPLICE LH HARNESS ASSEMBLY, STATIC EXCITER 3 TO PERMANENT SPLICE RH . TERMINAL, CONVAIR 98-90805-012 -V00779- HARNESS ASSEMBLY, STATIC EXCITER 1 TO PERMANENT SPLICE LH HARNESS ASSEMBLY, STATIC EXCITER 4 TO PERMANENT SPLICE RH . TERMINAL, LH CONVAIR 98-90805-003 -V00779 . TERMINAL, RH CONVAIR 98-90805-003 -V00779	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		1 3 1 1 2
-797	22-64518 YAEV6C-L4 22-64638-1 22-64639-1 320563 22-64637-1 22-64640-1 36153 36153 22-64553	ENGINE 2 REAR SPAR PERMANENT SPLICE L H  HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 3 REAR SPAR PERMANENT SPLICE RH  TERMINAL, CONVAIR 98-90806-007 -V02198- HARNESS ASSEMBLY, STATIC EXCITER 2 TO PERMANENT SPLICE LH  HARNESS ASSEMBLY, STATIC EXCITER 3 TO PERMANENT SPLICE RH  TERMINAL, CONVAIR 98-90805-012 -V00779- HARNESS ASSEMBLY, STATIC EXCITER 1 TO PERMANENT SPLICE LH  HARNESS ASSEMBLY, STATIC EXCITER 4 TO PERMANENT SPLICE RH  TERMINAL, LH CONVAIR 98-90805-003 -V00779  TERMINAL, RH CONVAIR 98-90805-003 -V00779	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		1 3 1 1 2
	YAEV6C-L4 22-64638-1 22-64639-1 320563 22-64637-1 22-64640-1 36153 36153 22-64553	ENGINE 3 REAR SPAR PERMANENT SPLICE RH  . TERMINAL, CONVAIR 98-90806-007 -V02198-  HARNESS ASSEMBLY, STATIC EXCITER 2 TO PERMANENT SPLICE LH  HARNESS ASSEMBLY, STATIC EXCITER 3 TO PERMANENT SPLICE RH  . TERMINAL, CONVAIR 98-90805-012 -V00779-  HARNESS ASSEMBLY, STATIC EXCITER 1 TO PERMANENT SPLICE LH  HARNESS ASSEMBLY, STATIC EXCITER 4 TO PERMANENT SPLICE RH  TERMINAL, LH CONVAIR 98-90805-003 -V00779  TERMINAL, RH CONVAIR 98-90805-003 -V00779	1		3 1 1 2 1
	22-64638-1 22-64639-1 320563 22-64637-1 22-64640-1 36153 36153 22-64553	. TERMINAL, CONVAIR 98-90806-007 -V02198- HARNESS ASSEMBLY, STATIC EXCITER 2 TO PERMANENT SPLICE LH HARNESS ASSEMBLY, STATIC EXCITER 3 TO PERMANENT SPLICE RH TERMINAL, CONVAIR 98-90805-012 -V00779- HARNESS ASSEMBLY, STATIC EXCITER 1 TO PERMANENT SPLICE LH HARNESS ASSEMBLY, STATIC EXCITER 4 TO PERMANENT SPLICE RH TERMINAL, LH CONVAIR 98-90805-003 -V00779 TERMINAL, RH CONVAIR 98-90805-003 -V00779	1 1 1		1 1 2 1
	22-64638-1 22-64639-1 320563 22-64637-1 22-64640-1 36153 36153 22-64553	- HARNESS ASSEMBLY, STATIC EXCITER 2 TO PERMANENT SPLICE LH HARNESS ASSEMBLY, STATIC EXCITER 3 TO PERMANENT SPLICE RH - TERMINAL, CONVAIR 98-90805-012 -V00779- HARNESS ASSEMBLY, STATIC EXCITER 1 TO PERMANENT SPLICE LH HARNESS ASSEMBLY, STATIC EXCITER 4 TO PERMANENT SPLICE RH - TERMINAL, LH CONVAIR 98-90805-003 -V00779 - TERMINAL, RH CONVAIR 98-90805-003 -V00779	1 1 1		1 1 2 1
-798	320563 22-64637-1 22-64640-1 36153 36153 22-64553	- HARNESS ASSEMBLY, STATIC EXCITER 3 TO PERMANENT SPLICE RH - TERMINAL, CONVAIR 98-90805-012 -V00779- HARNESS ASSEMBLY, STATIC EXCITER 1 TO PERMANENT SPLICE LH HARNESS ASSEMBLY, STATIC EXCITER 4 TO PERMANENT SPLICE RH - TERMINAL, LH CONVAIR 98-90805-003 -V00779 - TERMINAL, RH CONVAIR 98-90805-003 -V00779	1 1		2
-798	320563 22-64637-1 22-64640-1 36153 36153 22-64553	PERMANENT SPLICE RH  TERMINAL, CONVAIR 98-90805-012 -V00779- HARNESS ASSEMBLY, STATIC EXCITER 1 TO PERMANENT SPLICE LH HARNESS ASSEMBLY, STATIC EXCITER 4 TO PERMANENT SPLICE RH TERMINAL, LH CONVAIR 98-90805-003 -V00779 TERMINAL, RH CONVAIR 98-90805-003 -V00779	1 1		2
-798	22-64637-1 22-64640-1 36153 36153 22-64553	. HARNESS ASSEMBLY, STATIC EXCITER 1 TO PERMANENT SPLICE LH . HARNESS ASSEMBLY, STATIC EXCITER 4 TO PERMANENT SPLICE RH . TERMINAL, LH CONVAIR 98-90805-003 -V00779 . TERMINAL, RH CONVAIR 98-90805-003 -V00779	1		1
-148	22-64640-1 36153 36153 22-64553	PERMANENT SPLICE LH  HARNESS ASSEMBLY, STATIC EXCITER 4 TO PERMANENT SPLICE RH  TERMINAL, LH CONVAIR 98-90805-003 -V00779  TERMINAL, RH CONVAIR 98-90805-003 -V00779	1		
	36153 36153 22-64553	HARNESS ASSEMBLY, STATIC EXCITER 4 TO     PERMANENT SPLICE RH     TERMINAL, LH CONVAIR 98-90805-003 -V00779     TERMINAL, RH CONVAIR 98-90805-003 -V00779			1
	36153 22-64553	• TERMINAL, LH CONVAIR 98-90805-003 -V00779 • TERMINAL, RH CONVAIR 98-90805-003 -V00779	Ι,		1
	36153 22-64553	TERMINAL, RH CONVAIR 98-90805-003 -V00779			3
	22-64553				2
-799	24157	- HARNESS ASSEMBLY, FEED THRU PANEL W TO LINE	1		1
	120122	AND CROSS FEED VALVES LH - TERMINAL, CONVAIR 98-90805-003 -V00779-	1, 1		10
	EX06-12535	CONNECTOR: CONVAIR 92-40332-003 -V71468-	i		1
	024048-0000	- CONTACT, CONVAIR 92-63901-012 -V71468-	1 1		22
	024049-0000	CONTACT, CONVAIR 92-63901-011 -V71468-			E
	EX06-16515	CONNECTUR, CONVAIR 92-40332-007 -V71468-	i		ų



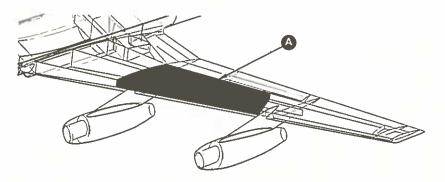

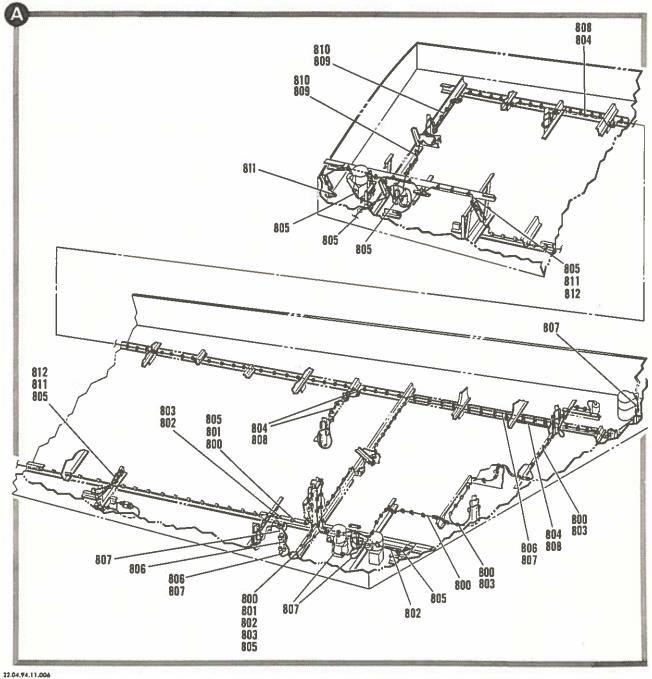


94-11 Page 14 MAIN FUEL TANK 1 AND 4 WING ELECTRICAL HARNESSES Apr. 28/61 FIGURE 4




FIGURE AND	PART NUMBER	NOMENCLATURE	USA		UNITS
NDEX NO.	I ART HOMBER		FROM	TO	ASSEME
		1 2 3 4 5 6 MAIN FUEL TANK 1 AND 4 WING ELECTRICAL	10000000	1	
٠.		HARNESSES SEE 22-64003	1 3		
-800	22-64623-1	. HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES	1 1 1		
-500	22-04023-1	TO TR 9 THRU TR 11 WING DISCONNECT			
	22-64624-1	. HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES	1		
		TO TR 9 THRU TR 11 WING DISCONNECT			
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1 1		li i
-801	22-64650	. HARNESS ASSEMBLY, HAIN FUEL TANK 1 PROBES	1 1 1		
	22-64649	. HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES			
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779- . HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES	i		
-802	22-64650-1	. HARNESS ASSEMBLY, MAIN FUEL TANK & PROBES	_   i		
	22-64649-1 GSC175	. FERRULE, CONVAIR 93-71300-004 -V59730-	- 1 i l		
	GSB109	. FERRULE, CONVAIR 93-71301-002 -V59730-	1 i l		
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		
	320553	- TERMINAL, CONVAIR 98-90805-020 -V00779-	1 1		l'
-803	22-64623-801	. HARNESS ASSEMBLY, MAIN FUEL TANK I PROBES	1.8		
		TO TR 9 THRU TR 11 WING DISCONNECT			1
	22-64624-801	. HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES	1		
	5CD 100	TO TR 9 THRU TR 11 WING DISCONNECT  • FERRULE, CONVAIR 93-71301-002 -V59730-	1		
	GSB109 GSC175	. FERRULE, CONVAIR 93-71300-004 -V59730-	- 1 i J		
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	-   i		1
-804	22-64651	. HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES	i	17	
504	22-64648	- HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES	1		1
	36153	_ TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		Į.
-805	22-64302-3	. HARNESS ASSEMBLY, FUEL COMPENSATOR	1 1	14	1
	22-64302-29	. HARNESS ASSEMBLY, FUEL COMPENSATOR	5	la la	1
-806	22-64302-7	HARNESS ASSEMBLY, BOOSTER AND FUEL PUMP HARNESS ASSEMBLY, BOOSTER AND FUEL PUMP	5	ै	
	22-64302-33	. TERMINAL, CONVAIR 98-90805-003 -V00779-	i		1
	36153 MWP718-1P1	. TERMINAL, CONVAIR 98-91724-002 -V09922-	1 i		
	CA3100ER10SL3P	CONNECTOR, CONVAIR 92-50272-002 -V71468-	1 1		
	14043	CONNECTOR, CONVAIR 92-50305-001 -V17419-	1 2	1 22	
-607	22-64302-9	- HARNESS ASSEMBLY. TRANSFER PUMP INBD LH	1 1	14	
	22-64302-35	. HARNESS ASSEMBLY, TRANSFER PUMP INBD LH	5	1s.	1
	22-64302-19	- HARNESS ASSEMBLY. TRANSFER PUMP INBD RH	1 5	-4	1
	22-64302-41	. HARNESS ASSEMBLY, TRANSFER PUMP INBD RH	1 7		
	MWP718-1P1	. TERMINAL, CONVAIR 98-91724-002 -V09922- . CONNECTOR, CONVAIR 92-50305-001 -V17419-	i		
-900	14043	. HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES	l i		
-808	22-64648-1	- HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES	i		1
	GSB109	. FERRULE, CONVAIR 93-71301-002 -V59730-	1		
	GSC 175	FERRULE, CONVAIR 93-71300-004 -V59730-	1		1
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1	1	
-809	22-64623-3	. HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES			1
	70 (1 ( 0 ) 2	TO TR 23 THRU TR 20 MING DISCONNECT  HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES	1		
	22-64624-3	TO TR 23 THRU TR 20 WING DISCONNECT	'		
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1		
	1				
	19			1	
					1
	4				
	il.				5
				1	
				1	8
	150				5
			1		




FIGURE AND	PART NUMBER	NOMENCLATURE	US/ CO	GE DE	UNITS
INDEX NO.		1 2 3 4 5 6	FROM	το	ASSEMBL
-811 -811	22-64623-803 22-64624-803 36153 GSC175 GSB109 22-64623-5 22-64624-5 1-817-1 36153 GSC175 GSB109 22-64623-805 22-64624-805 36153	- HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES TO TR 23 THRU TR 20 WING DISCONNECT  - HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES TO TR 23 THRU TR 20 WING DISCONNECT  - TERMINAL, CONVAIR 98-90805-003 -V00779-  - FERRULE, CONVAIR 93-71300-004 -V59730-  - FERRULE, CONVAIR 93-71301-002 -V59730-  - HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES TO TR 21 THRU TR 23 WING DISCONNECT  - HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES TO TR 21 THRU TR 23 WING DISCONNECT  - CONNECTOR, CONVAIR 92-47000-020 -V95712-  - TERMINAL, CONVAIR 98-90805-003 -V00779-  - FERRULE, CONVAIR 93-71301-002 -V59730-  - HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES TO TR 21 THRU TR 23 WING DISCONNECT  - HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES TO TR 21 THRU TR 23 WING DISCONNECT  - HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES TO TR 21 THRU TR 23 WING DISCONNECT  - TERMINAL, CONVAIR 98-90805-003 -V00779-	3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3		1 1 8 4 4 1 1 3 6 3 3 1 1
	21				
					f
	90				
			1 11		
					ļ
	11				
		2)			




ELECTRICAL HARNESSES
WING

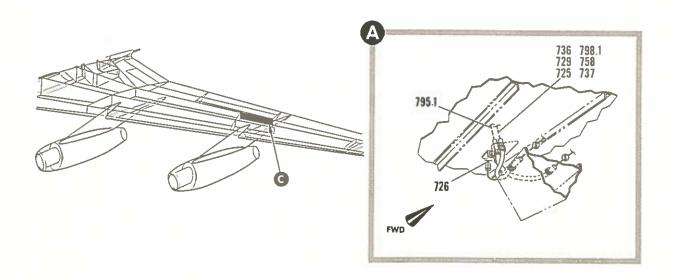

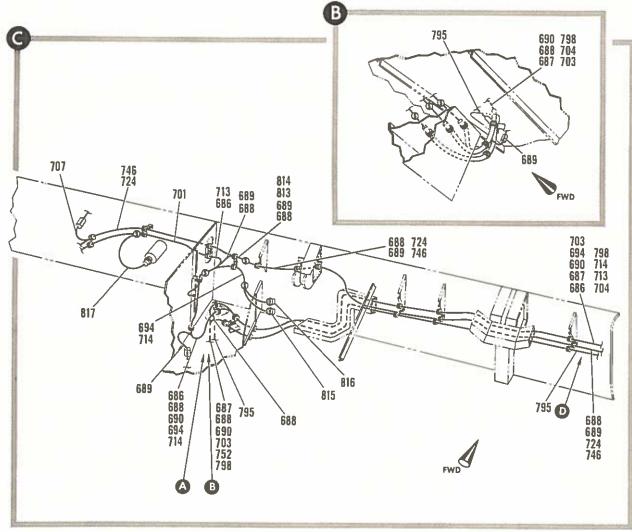

22.04.94.11.007-1

94-11 Page 18 WING REAR SPAR ELECTRICAL HARNESSES FIGURE 5 (SHEET 1 OF 3) Apr. 28/61 A

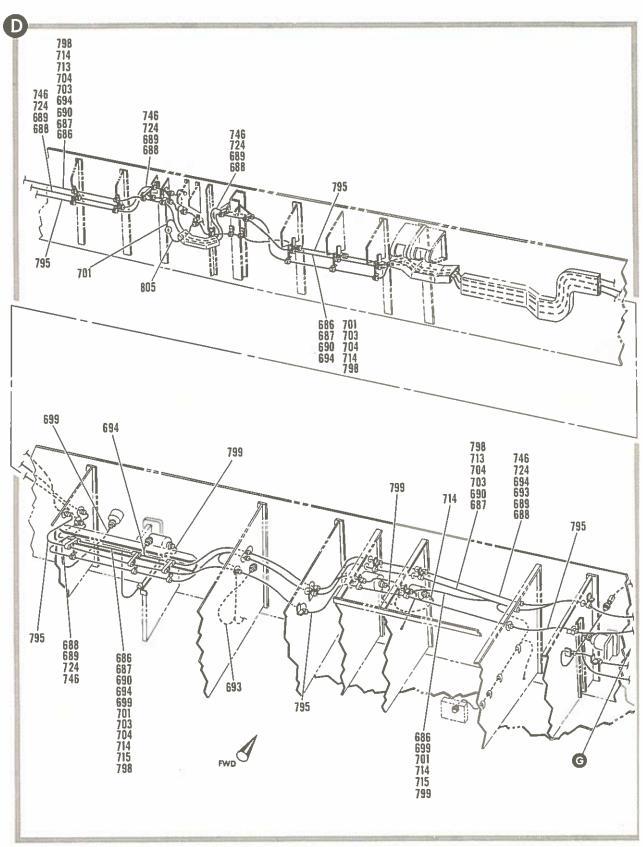

22.04.94.11.007.2

Apr. 28/61

WING REAR SPAR ELECTRICAL HARNESSES FIGURE 5 (SHEET 2 OF 3)


94-11 Page 19





ELECTRICAL HARNESSES

WING

### ILLUSTRATED PARTS CATALOG

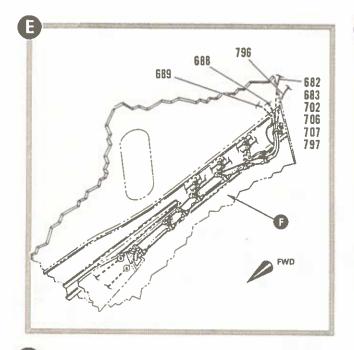

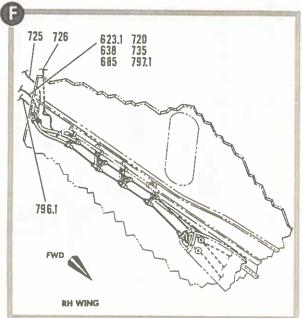

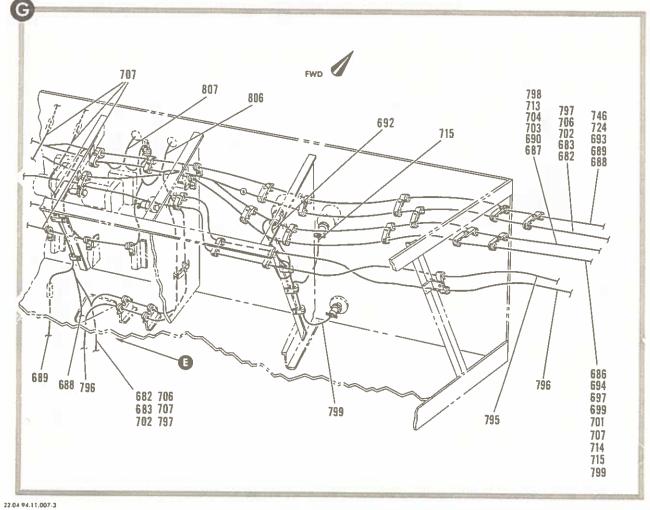

94-11 Page 20

WING REAR SPAR ELECTRICAL HARNESSES FIGURE 5 (SHEET 3 OF 3)

Apr. 28/61

ELECTRICAL HARNESSES WING


FIGURE AND	PART NUMBER	NOMENCLATURE	USA		UNIT
NDEX NO.		1 2 3 4 5 6	FROM	TO	ASSEME
		WING REAR SPAR ELECTRICAL HARNESSES			
	00 (1000	SEE 22-64003			
-813	22-64982	- HARNESS ASSEMBLY, COPILOT FLUX GATE WING TIP TO BOX SECTION TERMINAL STRIP	'		
-814	22-64984	. HARNESS ASSEMBLY, PILOT FLUX GATE WING	1 1		
-815	22-64645	TIP TO BOX SECTION TERMINAL STRIP  . HARNESS ASSEMBLY, FLAP ASSYMETRY SWITCH	1 1		
-013	22.04043	TO PERMANENT SPLICE LH			
	22-64644	. HARNESS ASSEMBLY. FLAP ASSYMMETRY SWITCH TO PERMANENT SPLICERH	1 1		
	PT06E8-45	CONNECTOR, CONVAIR 92-40325-006 -V06840-			100
0.17	320559	- CONDUCTOR, CONVAIR 98-34001-003 -V00779-			
-816	22-64643	- HARNESS ASSEMBLY, FLAP TRANSMITTER TO PERMANENT SPLICE LH	'		
	22-64642	- HARNESS ASSEMBLY, FLAP TRANSMITTER TO			6
	320562	PERMANENT SPLICE RH TERMINAL, CONVAIR 98-34001-001 -V00779-	1		
	DM9700-7S	CONNECTOR, CONVAIR 92-40317-001 -V17419-	1 1		
-817	22-64647	. HARNESS ASSEMBLY, MAIN TRANSMITTER PRESSURE SWITCH 1 TO PERMANENT SPLICE OUTBD	1		
	22-64646	HARNESS ASSEMBLY, MAIN TRANSMITTER PRESSURE SWITCH 4 TO PERMANENT SPLICE OUTBD	1		
	EX06-1253S	- CONVECTOR, CONVAIR 92-40332-003 -V71468-	1 1		
	320559	CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		
		4			
	7				
				1	
			1		
	ē				
				-	
				1	1



ELECTRICAL HARNESSES

ILLUSTRATED PARTS CATALOG

WING

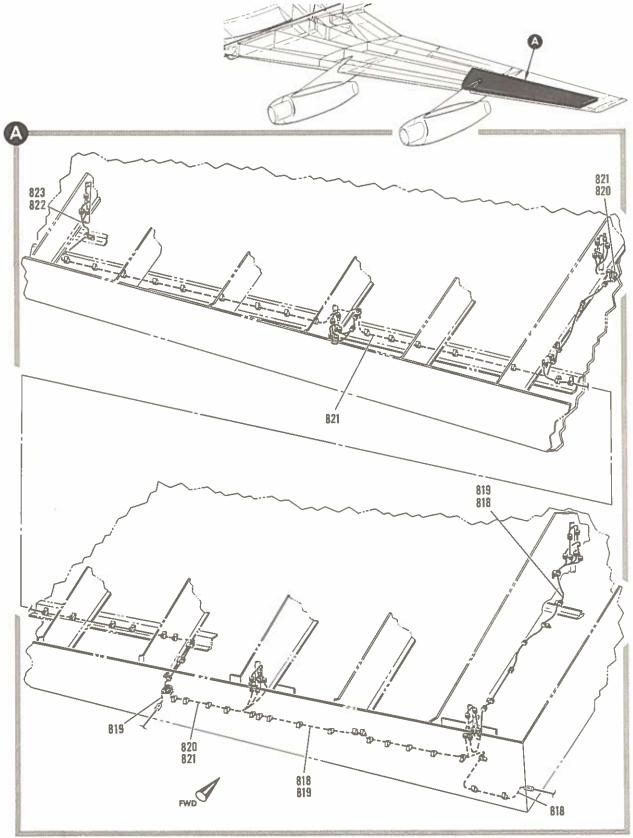

22.04,94.11.008

94-11 Page 22 REPLENISHING FUEL TANK 1 AND 4 WING ELECTRICAL HARNESSES FIGURE 6

Apr. 28/61




FIGURE AND	PART NUMBER	NOMENCLATURE		AGE IDE	UNITS
NDEX NO.	T T T T T T T T T T T T T T T T T T T		FROM	то	PER ASSEMB
		1 2 3 4 5 6	1 ROM		VASCWD
		REPLENISHING FUEL TANKS 1 AND 4 WING ELECTRICAL HARNESSES SEE 22-64004			
-818	22-64617-5	- HARNESS ASSEMBLY, REPLENISHING FUEL TANK I	1		
		PROBES TO TR 12 THRU TR 14 EH	1 '		1
	22-64618	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 4	1 1		l ı
	1-817-1	PROBES TO TR 12 THRU TR 14 KH	•		
	1-017-1	- CONNECTOR, TANK   CONVAIR 92-47000-020	1		- 1
	36153	- TERMINAL, CONVAIR 98-90305-003 -V00779-	1 1		
	GSC175	. FERRULE, CONVAIR 93-71300-004 -V59730-	1 1		10
	GS8109	FERRULE, CONVAIR 93-71301-002 -V59730-	l i		5
-819	22-64617	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK I	1		i
	22-64618-803	PROBES TO TR 12 THRU TR 14 LH	ì		
	22-04010-803	HARNESS ASSEMBLY, REPLENISHING FULL TANK 4     PROBES TO TR 12 THRU TR 14 RH	1		1
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		5
	1-916-1	CONNECTOR, CONVAIR 92-47000-024 -495712-			5
-820	22-64617-1	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK I	i		i
	22-64618-5	PROBES TO TR 14 THRU TR 18 LB			·
	22-04018-3	- HARNESS ASSEMBLY, REPLENISHING FUEL TANK 4	1 [		1
	36153	PROBES TO TR 14 THRU TR 19 AH - TERMINAL, CONVAIR 98-90805-003 -V00779-	,		
-821	22-64617-801	- HARNESS ASSEMBLY, REPLENISHING FUEL TANK 1			), 1
		PROBES TO TR 14 THRU TR 19 LH	'		'
	22-64618-1	- HARNESS ASSEMBLY, REPLENISHING FUEL FANK 4	1 1		1
	36153	PROBES TO TR 14 THRU TR 19 HH			
	GSC 175	- TERMINAL, CONVAIR 98-90805-003 -V00779- - FERRULE, CONVAIR 93-71300-004 -V59730-			- 8
	GSB109	- • FERRULE, CONVAIR 93-71301-002 -V59730-	;		ti II
-322	22-64617-803	- HARNESS ASSEMBLY, REPLEYISHING FUEL TANK 1	1 1		ï
	22-64410-3	PROBES TO TR 18 THRU TA 19 LH			·
	22-64618-3	- HARNESS ASSEMBLY, REPLENISHING FUEL TANK 4	1 1		1
	36153	PROBES TO TR 18 THRU TR 19 KH - TERMINAL, CONVAIR 98-90805-003 -v007/9-	,		
	GSC175	- FERRULE, CONVAIR 93-71300-004 -V59730-	1 1		ት 2
0.67	GSB109	- FERRULE, CONVAIR 93-71301-002 -V59730-	1 1		2
-823	22-64617-3	- HARNESS ASSEMBLY, REPLENISHING FUEL TANK 1	i		î
	22-64618-801	PROBES TO TR 18 THRU TR 19 LH - HARNESS ASSEMBLY, REPLEVISHING FUEL TANK 4			
	22-04010-001	PROBES TO TR 18 THRU TR 19 RH	1	- 1	1
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	11		2
			1 ' 1		2
				ŀ	
				Į	
				ļ	
i					
				ŀ	




ELECTRICAL HARNESSES

WING

### ILLUSTRATED PARTS CATALOG

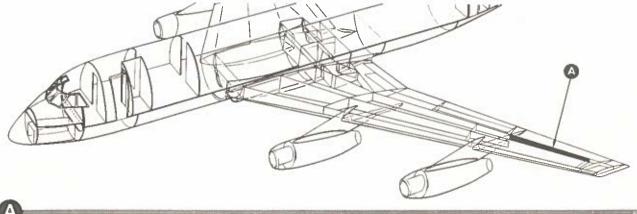


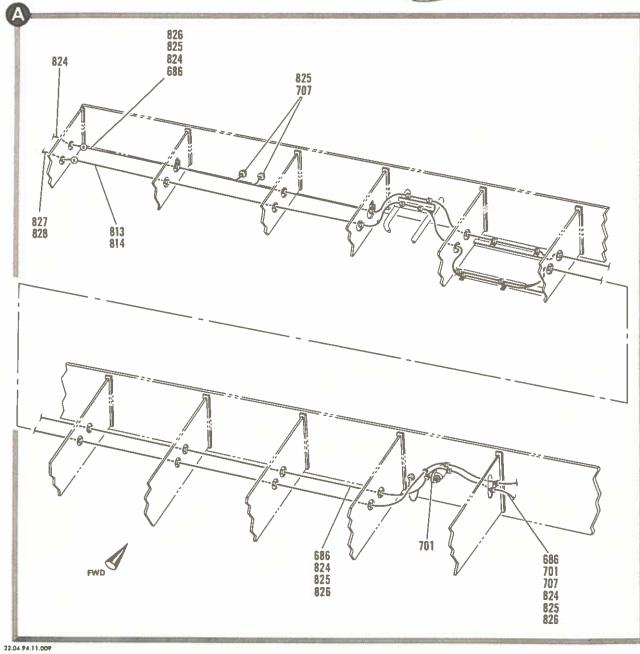

94-11 Page 24 WING TRAILING EDGE OUTBD ELECTRICAL HARNESSES FIGURE 7

Apr. 28/61 A

FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO	GE DE	UNITS PER
INDEX NO.	17KI HOMBER	1 2 3 4 5 6	FROM	то	ASSEMBL
-824 -825 -826 -827 -828	22-64975 22-64979 22-64985-1 22-64985 36153 PT06E14-5S 22-64977-1	WING TRAILING EDGE OUTBD ELECTRICAL HARNESSES SEE 22-64004 HARNESS ASSEMBLY, WING TIP LIGHT TO WING TIP TERMINAL STRIP LH HARNESS ASSEMBLY, REFUEL VALVES TO BOX SECTION PERMANENT SPLICE LH HARNESS ASSEMBLY, PERMANENT SPLICE TO LANDING LIGHT LH HARNESS ASSEMBLY, PERMANENT SPLICE TO LANDING LIGHT LH TERMINAL, CONVAIR 98-90805-003 -V00779- CONNECTOR, CONVAIR 92-40325-016 -V06840- HARNESS ASSEMBLY, COPILOT FLUX GATE RECEPTACLE TO TERMINAL STRIP HARNESS ASSEMBLY, PILOT FLUX GATE RECEPTACLE TO TERMINAL STRIP	1 1 A 2 1 1 1 1	8	1 1 1 AR 1 1 1 1
		A AIRPLANES 1, 9 AND ON			
					22





SECTION V

Chapter 94 ELECTRICAL HARNESSES

POD AND PYLON ELECTRICAL HARNESSES



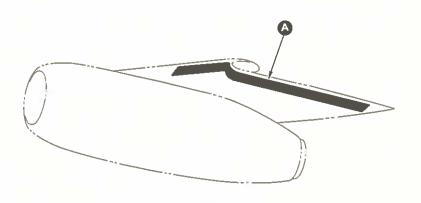

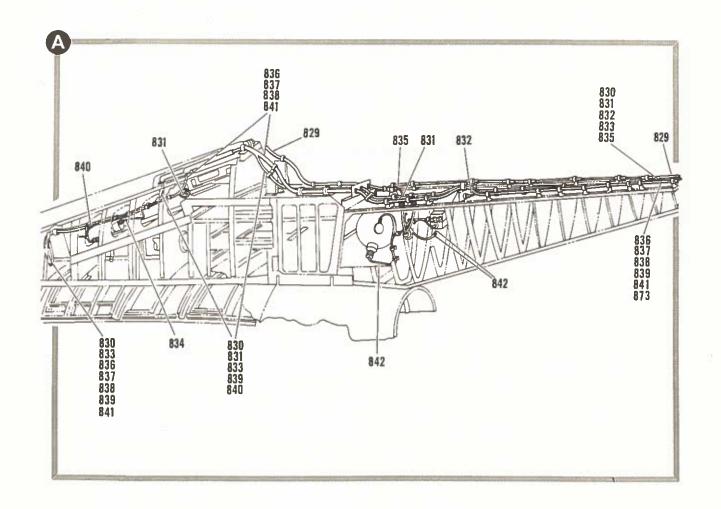


22.04.94.12.001

94-12 Page 2 POD AND PYLON 1 ELECTRICAL HARNESSES FIGURE 1 (SHEET 1 OF 2)

Feb. 10/62 A-2

# ELECTRICAL HARNESSES CONVAIR 88

### ILLUSTRATED PARTS CATALOG

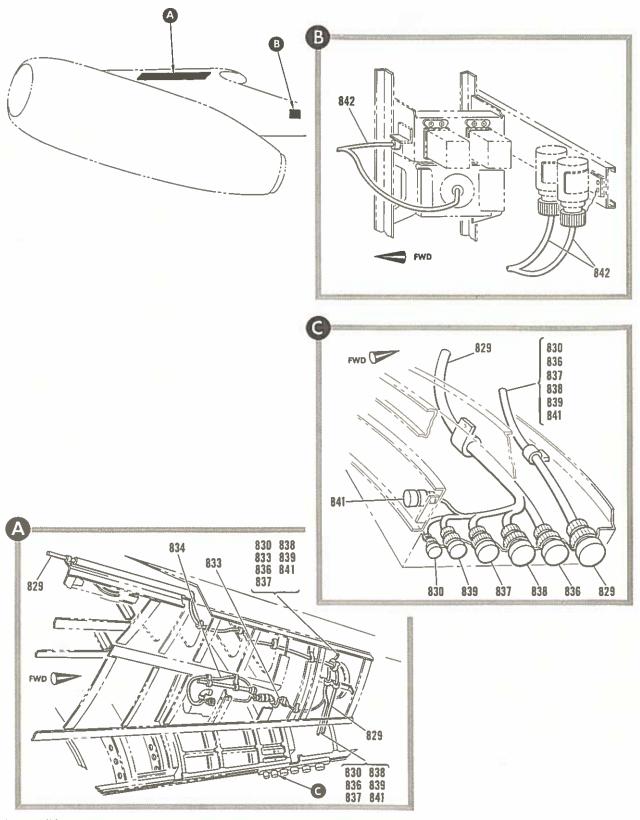

22.04.94.12.001-2

Feb. 10/62 A-2

POD AND PYLON 1 ELECTRICAL HARNESSES FIGURE 1 (SHEET 2 OF 2)



FIGURE AND	PART NUMBER	NOMENCLATURE	US/	GE DE	UNIT
IDEX NO.	TAKI NOMBER	1 2 3 4 5 6	FROM	то	ASSEME
<u> </u>		POD AND PYLON 1 ELECTRICAL HARNESSES	1	l	RE
-829	22-64900	. HARNESS ASSEMBLY, PYLON 1 A C GENERATOR	l i		
		FIREWALL DISCONNECT TO REAR SPAR			
	AN3057-20A	- ADAPTER	1		
	YAEV6C-L	TERMINAL, CONVAIR 98-90806-006 -V09922-	1		
	FW00-32-17P	CONNECTOR, CONVAIR 92-50292-004 -V71468-	1 !		
-830	22-64916	ARNESS ASSEMBLY, PYLON 1 OIL QUANTITY FIREWALL DISCONNECT TO REAR SPAR	1		
	1-817-1	. PLUG, CONVAIR 92-47000-020 -V95712-	l 1		
	CA00KE 1253S	. CONNECTOR, CONVAIR 92-50291-008 -V71468-	l i		
-831	22-64930	- HARNESS ASSEMBLY, PYLON 1 FIRE EXTINGUISHER	1		
		AND DETECTOR DISCONNECT TO REAK SPAK	l .		
	225-0017-000	. PLUG, CONVAIR 96-91200-007 -V71468-	!		
	320559 CA00KE22-19S	. SPLICE, CONVAIR 98-34001-003 -V00779- . CONNECTOR, CONVAIR 92-50291-005 -V71468-			
-832	22-64934-1	- CONNECTOR, CONVAIR 92-30291-003 -V11400-	l å		
-032	22-04734-1	TO REAR SPAR	^		
	22-64934	- HARNESS ASSEMBLY, PYLON 1 HYDRAULIC VALVE	2	6	1
		TO REAR SPAR			
	225-0017-000	- PLUG, CONVAIR 96-91200-007 -V71468-	1 1		
	320562 36153	- SPLICE, CONVAIR 98-34001-001 -V00779- - TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		
	PT06E10-65	CONNECTOR: CONVAIR 92-40325-008 -V06840-	l i		
-833	22-64939	. HARNESS ASSEMBLY. PYLON 1 BLEED AIR VALVE	l i		
		FIREWALL DISCONNECT TO REAR SPAR	'		
	225-0017-000	- PLUG, CONVAIR 96-91200-007 -V71468-	1		
	CAO6KE14S2S	CONNECTOR, CONVAIR 92-40327-004 -V71468-	1		
-834	22-64938-1	- HARNESS ASSEMBLY, PYLON 1 BLEED AIR VALVE	1		
	AN3057-4A	TO FIREWALL DISCONNECT	1		ŀ
	CA3108KE10SL4S	- PLUG, CONVAIR 92-40341-007 -V71468-	Li		
	225-0017-000	- PLUG, CONVAIR 96-91200-007 -V71468-	l i	-	
	320574	- TERMINAL, CONVAIR 98-90805-010 -V00779-	1	ŀ	
	36153	- TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		
-835	22-64947	- HARNESS ASSEMBLY, PYLON 1 FUEL SHUTOFF	1		
	225-0017-000	VALVE TO REAR SPAR - PLUG. CONVAIR 96-91200-007 -V71468-	1		
	CA06KE14S5S	. CONNECTOR, CONVAIR 92-40337-001 -471468-	l i		
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	i		133
		A AIRPLANES 1. 7 AND ON			
		01			
				2	
			1	1	



### ELECTRICAL HARNESSES POD AND PYTON


### POD AND PYLON ILLUSTRATED PARTS CATALOG


FIGURE	PART NUMBER	NOMENCLATURE	USA CO		UNITS
INDEX NO.	FART NOMBER	11 2 3 4 5 6	FROM	то	ASSEMBL
1 -836	22-64904-803	. HARNESS ASSEMBLY, PYLON 1 MISCELLANEOUS 1	В		1
	22-64904	FIREWALL DISCONNECT TO REAR SPAR  - HARNESS ASSEMBLY, PYLON 1 MISCELLANEOUS 1  FIREWALL DISCONNECT TO REAR SPAR	2	6	1
	22-64904-1	. HARNESS ASSEMBLY, PYLON 1 MISCELLANEOUS 1 FIREWALL DISCONNECT TO REAR SPAR	11		1
	AN3057-16A	- ADAPTER	1 1		1
	320570 FW00-28-21P	. SPLICE, CONVAIR 98-34001-002 -V00779- . CONNECTOR, CONVAIR 92-50292-002 -V71468-	]		1 1
-837	22-64952	- HARNESS ASSEMBLY, PYLON 1 MISCELLANEOUS 2 FIREWALL DISCONNECT TO REAR SPAR	1		i
	AN3057-16A	ADAPTER		32	1
-938	FW00-24-21P 22-64912	CONNECTOR, CONVAIR 92-50292-001 -V71468- . HARNESS ASSEMBLY, PYLON 1 MISCELLANEOUS 3 FIREWALL DISCONNECT TO REAR SPAR	i		i
	225-0017-000	. PLUG, CONVAIR 96-91200-007 -V71468-	1		8
	CA00KE28-12P	CONNECTOR, CONVAIR 92-50291-004 -V71468-	1 1		1
-839	22-64920	. HARNESS ASSEMBLY, PYLON 1 EXHAUST GAS TEMPERATURE DISCONNECT TO REAR SPAR	1		1
	CAOOKE1253P	CONNECTOR, CONVAIR 92-50291-007 -V71468-	1		1
	AN5548-8 AN5548-7	. TERMINAL, CONVAIR 98-90819-008			1 1
-840	22-64943	- HARNESS ASSEMBLY, PYLON 1 HYDRAULIC	i		i
		PRESSURE SWITCH TO REAR SPAR	Ι,		1
	225-0017-000 EX06-14575	. PLUG, CONVAIR 96-91200-007 -V71468- . CONNECTOR, CONVAIR 92-40332-006 -V71468-			l i
	36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	i		i
-841	031-0550-000 22-64961-1	CONTACT, CONVAIR 92-63901-009 -V71468- . HARNESS ASSEMBLY, PYLON 1 FIRE DETECTOR	1		3
	35303-2	FIREWALL TO SPLICE  . FITTING, END MFR TO SPEC CONT 22-02427-16 -V73168-	1		1
	225-0017-000 CAUOKE14S5S	PLUG, CONVAIR 96-91200-007 -V71468- CONNECTOR, CONVAIR 92-50291-006 -V71468-	1		1
		B AIRPLANES 1 AND 7 THRU 10			
					20
			:		
	1				



FIGURE	DADT MILLADES	NOMENCI ATURE	USA	GE DE	UNITS
AND NDEX NO.	PART NUMBER	NOMENCLATURE	FROM	τo	PER
-842	22-64929	1 2 3 4 5 6 • HARNESS ASSEMBLY• PYLON 1 FIRE	1 1	.,,	1
-843	225-0017-000 S0-1015-4309 CA06KE14S2S CA06KE2-19P CA06KE10SZS EX06-10SL4S 320551 320552 031-0550-000 320562 320559 22-61342-279 22-61342-281 22-65507-801 CT00E24-21P EX06-10SL3S EX06-12S3S EX06-10SL4S 031-0614-000 320562	** HARNESS ASSEMBLY, PYLON I FIRE  EXTINGUISHER AND DETECTOR CONTROL  UNIT TO PYLON DISCONNECT  ** PLUE, CONVAIR 96-9120-007 -V71468-  ** SOCKET, CONVAIR 92-40327-004 -V71468-  ** CONNECTOR, CONVAIR 92-40327-010 -V71468-  ** CONNECTOR, CONVAIR 92-40327-016 -V71468-  ** CONNECTOR, CONVAIR 92-90832-022 -V71468-  ** TERMINAL, CONVAIR 98-90805-028 -V00779-  ** TERMINAL, CONVAIR 98-90805-026 -V71468-  ** SPLICE, CONVAIR 98-34001-001 -V00779-  ** NAMEPLATE, OVERHEAT TEST REC  ** NAMEPLATE, FIRE TEST REC  ** HARNESS ASSEMBLY, POD 1 NOSE COML  ** EQUIPMENT TO ENGINE DISCONNECT  ** HARNESS ASSEMBLY, POD 1 NOSE COML  ** EQUIPMENT TO ENGINE DISCONNECT  ** HARNESS ASSEMBLY, POD 1 NOSE COML  ** EQUIPMENT TO ENGINE DISCONNECT  ** HARNESS ASSEMBLY, POD 1 NOSE COML  ** EQUIPMENT TO ENGINE DISCONNECT  ** CONNECTOR, CONVAIR 92-40332-001 -V71468-  ** CONNECTOR, CONVAIR 92-40332-001 -V71468-  ** CONNECTOR, CONVAIR 92-40332-002 -V71468-  ** CONNECTOR, CONVAIR 92-40332-002 -V71468-  ** CONNECTOR, CONVAIR 92-40332-002 -V71468-  ** CONVECTOR, CONVAIR 92-40332-002 -V71468-  ** CONVECTOR, CONVAIR 92-40332-002 -V71468-  ** CONVECTOR, CONVAIR 92-40332-002 -V71468-  ** CONVECTOR, CONVAIR 92-40332-002 -V71468-  ** CONVECTOR, CONVAIR 92-40332-002 -V71468-  ** CONVECTOR, CONVAIR 92-40332-002 -V71468-  ** CONVECTOR, CONVAIR 92-40332-002 -V71468-  ** CONVECTOR, CONVAIR 92-40332-002 -V71468-  ** CONTECTOR, CONVAIR 92-40332-002 -V71468-  ** CONTECTOR, CONVAIR 92-40332-001 -V70779-	1 1 1 1 1 1 1 1 C 2 11 1 1 1 1 1 1 1 1 1	7	2 2 2 2 1 2 1 2 2 2 3 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1



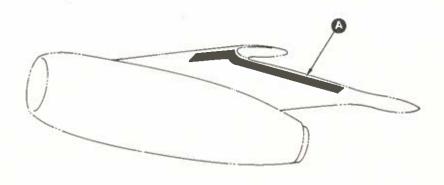

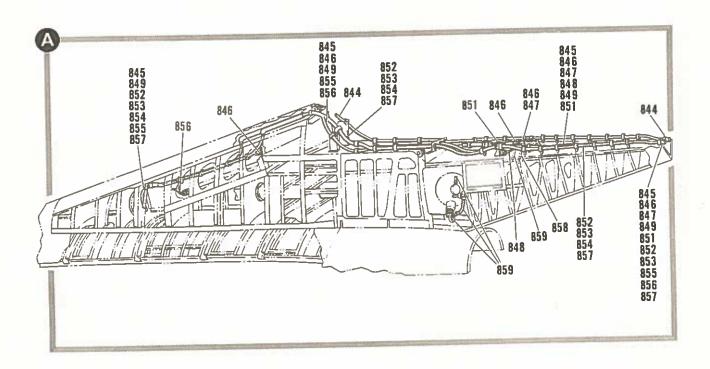

32,04,94.12.002-1



### ELECTRICAL HARNESSES POD AND PYLON

FIGURE	PART NUMBER	NOMENCLATURE	USA CO		UNITS
AND INDEX NO.	PARI NUMBER	1 2 3 4 5 6	FROM	то	ASSEMBLY
2 -852	22-64905-803	. HARNESS ASSEMBLY, PYLON 2 MISCELLANEOUS 1	В		1
	22-64905	FIREWALL DISCONNECT TO REAR SPAR  HARNESS ASSEMBLY, PYLON 2 MISCELLANEOUS 1	2	6	1
	22-64905-1	FIREWALL DISCONNECT TO REAR SPAK  HARNESS ASSEMBLY, PYLON 2 MISCELLANEOUS 1	11		1
		FIREWALL DISCONNECT TO REAR SPAR	1 1		1
	AN3057-16A 320562	. ADAPTER . SPLICE, CONVAIR 98-34001-001 -V71468-			i
	FW00-28-21P	CONNECTOR, CONVAIR 92-50292-002 -V71468-			1
-853	22-64953	HARNESS ASSEMBLY, PYLON 2 MISCELLANEOUS 2 FIREWALL DISCONNECT TO REAR SPAR	'		
	AN3057-16A	. ADAPTER . CONNECTOR, CONVAIR 92-50292-001 -V71468-	1		1
-854	FH00-24-21P 22-64913	. HARNESS ASSEMBLY, PYLON 2 MISCELLANEOUS 3	i		_ i
	225 0017 000	FIREWALL DISCONNECT TO REAR SPAR  . PLUG. CONVAIR 96-91200-007 -V71468-	1		8
	225-0017-000 CA00KE28-12P	. CONNECTOR, CONVAIR 92-50291-004 -V71468-	i i		0.1
-855	22-64921	- HARNESS ASSEMBLY, PYLON 2 EXHAUST GAS TEMPERATURE FIREWALL DISCONNECT	1 1		1
		TO REAR SPAR	- I = 1		,
	CA00KE12S3P AN5548-8	. CONNECTOR, CONVAIR 92-50291-007 -V71468- . TERMINAL, CONVAIR 98-90819-008	1 1		1
0.54	AN5548-7	. TERMINAL, CONVAIR 98-90819-007 . HARNESS ASSEMBLY, PYLON 2 HYDRAULIC	1		1
-856	22-64944	PRESSURE SWITCH TO REAR SPAR			
	225-0017-000	. PLUG, CONVAIR 96-91200-007 -V71468- . CONNECTOR, CONVAIR 92-40332-006 -V71468-	$=\frac{1}{1}$		1
	EX06-14575 36153	. TERMINAL, CONVAIR 98-90805-003 -V00779-	i '		i
-857	031-0550-000	CONTACT, CONVAIR 92-63901-009 -V71468- . HARNESS ASSEMBLY, PYLON 2 FIRE DETECTOR	1	i	3
-031		FIREWALL TO SPLICE			
	35303-2	- FITTING, END MFR TO SPEC CONT 22-02427-16 -V73168-	1		1
	225-0017-000	PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	CA00KE14S5S	CONNECTOR, CONVAIR 92-50291-006 -V71468-			١,
		B AIRPLANES 1 AND 7 THRU 10			
		a and control time to			
			1		

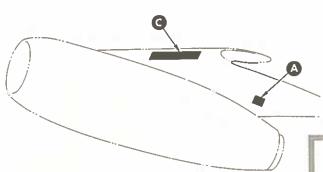



FIGURE	PART NUMBER	NOMENCI ATURE	USA CO	GE DE	UNIT
NDEX NO.	THE TOMBER		FROM	TO	ASSEM
	PART NUMBER  22-64951-1 22-64951 36157 36149 36153 165-10-1000 CT06E28-2S 22-64929-1  225-0017-000 S0-1014-4309 CA06KE1452S CA06KE22-19P CA06KE1052S EX06-10SL4S 320551 320552 031-0550-000 320562 320559 22-61342-261 22-65507-3 22-65507-801 CT00E24-21P EX06-10SL3S EX06-10SL3S EX06-10SL4S 031-0614-000 320562	NOMENCLATURE  1 2 3 4 5 6      HARNESS ASSEMBLY, PYLON 2 REFUEL     DEFUEL DISCONNECT TO PANEL  HARNESS ASSEMBLY, PYLON 2 REFUEL     DEFUEL DISCONNECT TO PANEL  TERMINAL, CONVAIR 98-90805-027 -V00779-  TERMINAL, CONVAIR 98-90805-027 -V00779-  TERMINAL, CONVAIR 98-90805-027 -V00779-  TERMINAL, CONVAIR 98-90805-027 -V00779-  CONNECTOR, CONVAIR 98-90805-027 -V00779-  CONNECTOR, CONVAIR 92-40334-010 -V71468-  HARNESS ASSEMBLY, PYLON 2 FIRL     EXTINGUISHER AND DETECTOR CONTROL     UNIT TO PYLON DISCONNECT  PLUC, CONVAIR 98-240327-004 -V71468-  SOCKET, CONVAIR 98-240327-010 -V71468-  CONNECTOR, CONVAIR 92-40337-010 -V71468-  CONNECTOR, CONVAIR 92-40337-010 -V71468-  CONNECTOR, CONVAIR 92-40337-010 -V71468-  TERMINAL, CONVAIR 98-90305-028 -V00779-  TERMINAL, CONVAIR 98-90805-026 -V00779-  CONTACT, CONVAIR 98-34001-001 -V00779-  CONTACT, CONVAIR 98-34001-001 -V00779-  NAMEPLATE, DVERHEAT TEST REC  HARNESS ASSEMBLY, POD 2 NOSE COME     EQUIPMENT TO ENGINE DISCONNECT  HARNESS ASSEMBLY, POD 2 NOSE COME     EQUIPMENT TO ENGINE DISCONNECT  HARNESS ASSEMBLY, POD 2 NOSE COME     EQUIPMENT TO ENGINE DISCONNECT  HARNESS ASSEMBLY, POD 2 NOSE COME     EQUIPMENT TO ENGINE DISCONNECT  HARNESS ASSEMBLY, POD 2 NOSE COME     EQUIPMENT TO ENGINE DISCONNECT  CONNECTOR, CONVAIR 92-40332-001 -V71468-  CONNECTOR, CONVAIR 92-40332-003 -V71468-  CONNECTOR, CONVAIR 92-40332-001 -V71468-  CONNECTOR, CONVAIR 92-40332-001 -V71468-  CONNECTOR, CONVAIR 92-40332-001 -V71468-  CONNECTOR, CONVAIR 92-40332-001 -V71468-  CONNECTOR, CONVAIR 92-40332-001 -V71468-  CONNECTOR, CONVAIR 98-34001-001 -V00779-  C AIRPLANES 1 AND 3 THRU 10			


POD AND PYLON




### ILLUSTRATED PARTS CATALOG



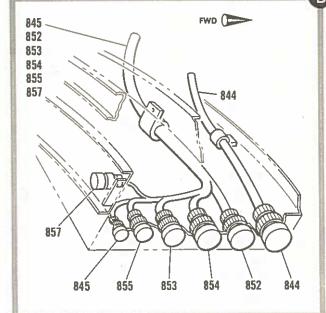

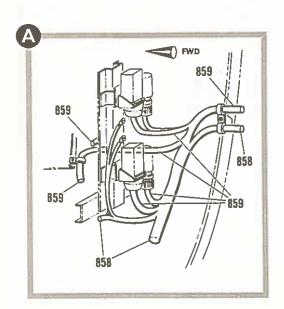

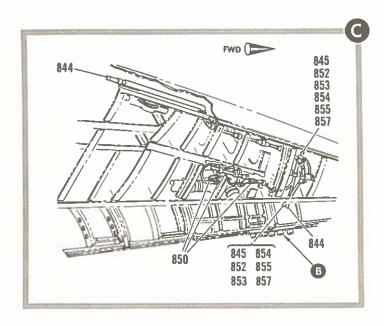

22.04.94.12.002.2



FIGURE	DART MILLIPED	NOMENCLATURE	USA		UNITS
AND NDEX NO.	PART NUMBER	1 2 3 4 5 6	FROM	то	ASSEMB
		PDD AND PYLON 2 ELECTRICAL HARNESSES	1		REF
-844	22-64901	. HARNESS ASSEMBLY, PYLON 2 A C GENERATOR FIREWALL DISCONNECT TO REAR SPAR	i		1
	AN3057-20A	• ADAPTER	1 1		1
	YAEV6C-6	. TERMINAL, CONVAIR 98-90806-006 -V09922-	l i l		l i
	FW00-32-17A	CONNECTOR, CONVAIR 92-50292-004 -V71468-	_   i		l i
-845	22-64917	. HARNESS ASSEMBLY. PYLON 2 OIL QUANTITY	i		
043	22 04711	FIREWALL DISCONNECT TO REAR SPAR			
	1-817-1	PLUG, CONVAIR 92-47000-020 -V95712-			1
	CAUOKE 1253S	CONNECTOR, CONVAIR 92-50291-008 -V71468-	1		'
-846	22-64931	. HARNESS ASSEMBLY, PYLON 2 FIRE EXTINGUISHER	1 1		
		AND DETECTOR DISCONNECT TO REAR SPAR			
	225-0017-000	PLUG. CONVAIR 96-91200-007 -V71468-	1 1		
	320559	SPLICE, CONVAIR 98-34001-003 -V00779-	1 1		1
	CA00KE22-19S	CONNECTOR, CONVAIR 92-50291-005 -V71468-	1		]
-847	22-64925	. HARNESS ASSEMBLY, PYLON 2 REFUEL DEFUEL	1		
		PANEL DISCONNECT TO REAR SPAR			
	CT00E-28-2P	CONNECTOR, CONVAIR 92-50293-004 -V71468-	1 1		
-848	22-64935-1	. HARNESS ASSEMBLY, PYLON 2 HYDRAULIC	A		
		VALVE TO REAR SPAR			
	22-64935	- HARNESS ASSEMBLY, PYLON 2 HYDRAULIC	2	6	
		VALVE TO REAR SPAR	1 1		
	225-0017-000	. PLUG, CONVAIR 96-91200-007 -V71468-			-
	320562	. SPLICE, CONVAIR 98-34001-003 -V00779- . TERMINAL, CONVAIR 98-90805-003 -V00779-			
	36153 PT06F10-6S	CONNECTOR, CONVAIR 92-40325-008 -V06840-	i		
-849	22-64940	. HARNESS ASSEMBLY, PYLON 2 BLEED AIR VALVE	i		
-549	22-84940	FIRENALL DISCONNECT TO REAR SPAR	1 '		
	225-0017-000	. PLUG, CONVAIR 96-91200-007 -V71468-	1 1		
	CA06KE14S2S	. CONNECTOR, CONVAIR 92-40327-004 -V71468-	i		1
-850	22-64938-1	. HARNESS ASSEMBLY, PYLON 2 BLEED AIR VALVE	i		
050		TO FIREWALL DISCONNECT			
	AN3057-4A	- ADAPTER	1		
	225-0017-000	. PLUG, CONVAIR 96-91200-007 -V71468-	1		
	CA3108KE10SL4S	PLUG, CONVAIR 92-40341-007 -V71468-	1 1		
	320574	TERMINAL, CONVAIR 98-90805-010 -V00779-	1		
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1 1		
	CAOUKE14S2P	CONNECTOR, CONVAIR 92-50291-001 -V71468-	1		
	EX06-12535	- CONNECTOR, CONVAIR 92-40332-003 -V71468-	1		
∷-851	22-64948	. HARNESS ASSEMBLY, PYLON 2 FUEL SHUTOFF	1		
		VALVE TO REAR SPAR			1
	225-0017-000	PLUG. CONVAIR 96-91200-007 -V71468-			
	CAU6KE14S5S	CONNECTOR, CONVAIR 92-40327-001 -V71468-			
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	' '		
		A AIRPLANES 1, 7 AND ON			
		A AIRPLANES IS I AND ON			
				1	
			i		
					1
		\$1 P			
			-3		
			107		
			11.5		
				-	
					1
					1



FIGURE AND	PART NUMBER	NOMENCLATURE	USA CO		UNITS
NDEX NO.		1 2 3 4 5 6	FROM	то	ASSEMBL
-869	22-64906-1	- HARNESS ASSEMBLY, PYLON 3 MISCELLANEOUS 1	В		1
	22-64906	FIREWALL DISCONNECT TO REAR SPAR - HARNESS ASSEMBLY, PYLON 3 MISCELLANEOUS 1	2	6	1
	22-64906-3	FIREWALL DISCONNECT TO REAK SPAR  HARNESS ASSEMBLY, PYLON 3 MISCELLANEOUS 1	11		1
	AN3057-16A	FIREWALL DISCONNECT TO REAR SPAR  . ADAPTER	1		9.1
	320567	SPLICE, CONVAIR 98-34001-001 -V71468-	i		i
070	FW00-29-21P	CONNECTOR, CONVAIR 92-50292-002 -V71468-	1		1
-870	22-64954	. HARNESS ASSEMBLY, PYLON 3 MISCELLANEOUS 2 FIREWALL DISCONNECT TO REAR SPAR			,
	AN3057-16A FW00-24-21P	- ADAPTER - CONNECTOR, CONVAIR 92-50292-001 -V71468-	i		l i
-871	22-64914	. HARNESS ASSEMBLY, PYLON 3 MISCELLANEOUS 3 FIREWALL DISCONNECT TO REAR SPAR	1		1
	225-0017-000	PLUG, CONVAIR 96-91200-007 -V71468-	1		8
-872	CADOKE28-12P 22-64922	CONNECTOR, CONVAIR 92-50291-004 -V71468- . HARNESS ASSEMBLY, PYLON 3 EXHAUST GAS	1 1		3 1
-012	22-04422	TEMPERATURE FIREWALL DISCONNECT TO			
	CAOOKE12S3P	. CONNECTOR, CONVAIR 92-50291-007 -V71468-	1 1		1
	AN5548-8 AN5548-7	. TERMINAL, CONVAIR 98-90819-008 . TERMINAL, CONVAIR 98-90819-007	;		1
-873	22-64945	. HARNESS ASSEMBLY, PYLON 3 HYDRAULIC	i		1
	225_0017-000	PRESSURE SWITCH TO REAR SPAR . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	225-0017-000 EX06-14575	CONNECTOR, CONVAIR 92-40332-006 -V71468-	ii		i
	36153	_ TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1 3
-874	031-0550-000	CONTACT, CONVAIR 92-63901-009 -V00779- . HARNESS ASSEMBLY, PYLON 3 FIRE DETECTOR	;		1 1
914	22 04703 1	FIREWALL TO SPLICE			
	35303-2	FITTING, END MFR TO SPEC CONT 22-02427-16 -V73168-	1		1
	225-0017-000	- PLUG. CONVAIR 92-50291-006 -V71468-	1		2
	CA00KE14S5S	CONNECTOR, CONVAIR 92-50291-006 -V71468-	1		1
		B AIRPLANES 1 AND 7 THRU 10		!	
		A A A A A A A A A A A A A A A A A A A			

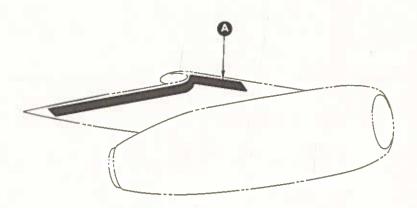



FIGURE	PART NUMBER	NOMENCLATURE	USA		UNITS PER
INDEX NO.	FARI NUMBER	1 2 3 4 5 6	FROM	то	ASSEMBL
3 -875	22-64951-1	- HARNESS ASSEMBLY, PYLON 3 REFUEL	C		1
		DEFUEL DISCONNECT TO PANEL			
	22-64951	- HARNESS ASSEMBLY, PYLON 3 REFUEL DEFUEL DISCONNECT TO PANEL	2	7	1
	36157	. TERMINAL, CONVAIR 98-90805-008 -V00779-	1		3
	36149	. TERMINAL, CONVAIR 98-90805-027 -V00779-	-   i		14
	36153	TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	165-10-1000	CONNECTOR, 92-40058-015 -V02660-	1 1		2
-876	CT06F28-2S 22-64929-811	. CONNECTOR, CONVAIR 92-40334-010 -V71468- HARNESS ASSEMBLY, PYLON 3 FIRE			i
-310	22-04727 511	EXTINGUISHER AND DETECTOR CONTROL UNIT TO PYLON DISCONNECT			
	225-0017-000	. PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	50-1014-4309	SOCKET, CONVAIR 98-24506-006 -V00614-	1		2
	CA06KE1452S	CONNECTOR, CONVAIR 92-40327-004 -V71468-	1 1		2
	CAD6KE22-19P	. CONNECTOR: CONVAIR 92-40327-010 -V71468- . CONNECTOR: CONVAIR 92-40327-016 -V71468-	1 1		1 2
	CA06KE10S2S EX06-10SL4S	. CONNECTOR, CONVAIR 92-40327-018 -971468-	l i		í
	320551	- TERMINAL CONVAIR 98-90805-028 -V00779-	i		2
	320552	TERMINAL, CONVAIR 98-90805-028 -V00779-	1		9
	031-0550-000	CONTACT, CONVAIR 92-63901-009 -V71468-			2
	320562 320559	. SPLICE, CONVAIR 98-34001-001 -V00779- . SPLICE, CONVAIR 98-34001-003 -V00779-			7 7
	22-61342-279	. NAMEPLATE OVERHEAT TEST REC			i
	22-61342-281	NAMEPLATE, FIRE TEST REC	i		i
-877	22-64966	- HARNESS ASSEMBLY, PYLON 3 FIRE	1		1
	041 0411 000	EXTINGUISHER GAGE TO DISCONNECT  CONTACT, CONVAIR 92-63901-011 -V71468-	1		L
	031-0614-000 EX06-10SL4S	. CONNECTOR, CONVAIR 92-40332-002 -V71468-			2
-878	22-65507-3	- HARNESS ASSEMBLY, POD 3 NOSE COWL	D		ï
510		EQUIPMENT TO ENGINE DISCONNECT			
	22-65507	. HARNESS ASSEMBLY, POD 3 NOSE COWL	2	7	1
	22-65507-801	EQUIPMENT TO ENGINE DISCONNECT  - HARNESS ASSEMBLY, PDD 3 NDSE COWL	11		1
	CEOOSTAL 210	EQUIPMENT TO ENGINE DISCONNECT  CONNECTOR, CONVAIR 92-50293-016 -V71468-			1
	CT00E24-21P EX06-105L3S	. CONNECTOR, CONVAIR 92-40332-001 -V71468-			1
	EX06-125L35	CONNECTOR, CONVAIR 92-40332-003 -V71468-	1		1
	EX06-105L45	CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		2
	031-0614-000	CONTACT, CONVAIR 92-63901-011 -V71468-	1		1
	320562	SPLICE, CONVAIR 98-34001-001 -V00779-			'
		C AIRPLANES 1, 8 AND ON D AIRPLANES 1 AND 8 THRU 10			
		D AIRPLANES I AND B THRO ID			





ELECTRICAL HARNESSES
POD AND PYLON



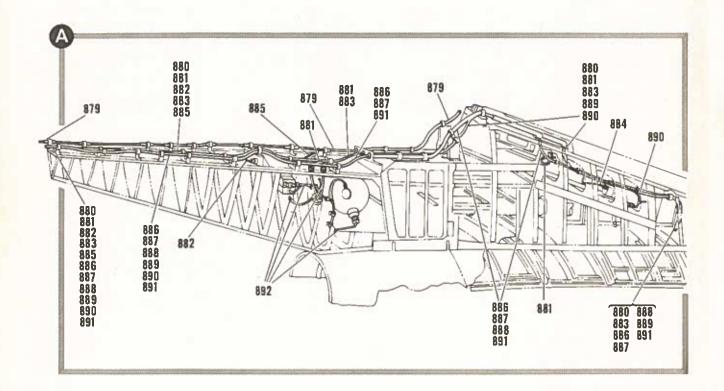



22,04,94,12,004-1


POD AND PYLON


## ELECTRICAL HARNESSES CONVAIR 88

### ILLUSTRATED PARTS CATALOG

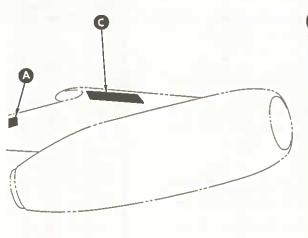

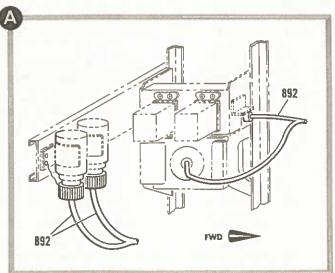

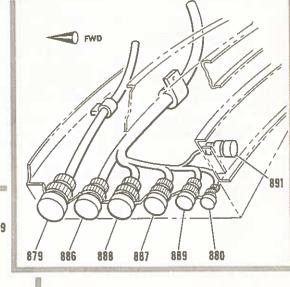

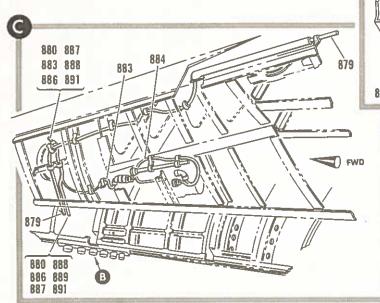

22.04.94.12.004-2

Feb. 10/62 POD AND PYLON 4 ELECTRICAL HARNESSES A-2 FIGURE 4 (SHEET 2 OF 2)



FIGURE	PART NUMBER	NOMENCLATURE	USA		UNITS
DEX NO.		1 2 3 4 5 6	FROM	то	ASSEMB
		POD AND PYLON & ELECTRICAL HARNESSES	1		REF
-879	22-64903	- HARNESS ASSEMBLY, PYLON 4 AC GENERATOR	1		1
		FIREWALL DISCONNECT TO REAR SPAR			
	AN3057-20A	- ADAPTER	1 1		1
	YAEV6CL FW00-32-17P	- TERMINAL, CONVAIR 98-90806-006 -V09722-	1		
-880	22-64919	. CONNECTOR, CONVAIR 92-50292-004 -V71648- HARNESS ASSEMBLY, PYLON 4 OIL QUANTITY			1 12
000	22 04717	FIREWALL DISCONNECT TO REAR SPAR			
	1-817-1	. PLUG. CONVAIR 92-47000-020 -V95712-	1		
	CAOOKE12S3S	- CUNNECTOR, CONVAIR 92-50291-008 -V71648-	1		
-881	22-64933	- HARNESS ASSEMBLY, PYLON 4 FIRE	1		
		EXTINGUISHER AND DETECTOR PYLON			4
	205 0017 000	DISCONNECT TO REAR SPAR	1		
	225-0017-000 CA00KE22-19S	- PLUG, CONVAIR 96-91200-007 -V71468- - CONNECTOR, CONVAIR 92-50291-005 -V71468-			
	320559	. SPLICE, CONVAIR 98-34001-003 -V00779-	l il		
-882	22-64937-1	. HARNESS ASSEMBLY. PYLON & HYDRAULIC VALVE	Ä		
		TO REAR SPAR			
	22-64937	- HARNESS ASSEMBLY, PYLON 4 HYDRAULIC VALVE	2	6	
		TO REAR SPAR			
	225-0017-000	- PLUG, CONVAIR 96-91200-007 -V71468-	1 1		
	PT06E10-6S 36153	CONNECTOR, CONVAIR 92-40325-008 -V06810-			1
	320562	- TERMINALS, CONVAIR 98-90805-003 -V00779-			
-883	22-64942	- HARNESS ASSEMBLY, PYLON & BLEED AIR VALVE			100
0.35	22 01712	FIREWALL DISCONNECT TO REAR SPAR			
	225-0017-000	- PLUG, CONVAIR 96-91200-007 -V71468-	1		
	CAOKE14525	CONNECTOR, CONVAIR 92-40327-004 -V71468-	1		
-884	22-64938-1	- HARNESS ASSEMBLY, PYLON 4 BLEED AIR VALVE	1		9 4
	WEZOCZ 4.4	TO FIREWALL DISCONNECT			
	MS3057-4A 225-0017-000	- ADAPTER			
	CA3108KE10SL4S	. PLUG, CONVAIR 96-91200-007 -V71468- . PLUG, CONVAIR 92-40341-007 -V71468-			
	320574	- TERMINAL, CONVAIR 98-90805-010 -V00779-	i		8
	36153	TERMINAL, CONVAIR 98-90905-003 -V00779-	l i l		
	CAOOKE14S2P	CONNECTOR, CONVAIR 92-50291-001 -V71468-	l i l		
	EX06-12535	- CONNECTOR, CONVAIR 92-40332-003	1 1		
-885	22-64950	. HARNESS ASSEMBLY, PYLON 4 FUEL SHUTOFF	1		100
	000 0017 000	VALVE TO REAR SPAR			
	225-0017-000 CA06KE14S5S	. PLUG, CONVAIR 96-91200-007 -V71468- . CONNECTOR. CONVAIR 92-40327-001 -V71468-	1		b R
	36153	. TERMINAL, CONVAIR 98-90805-003 -V71468-			7
		TEMPLE GRANTE 70 70003 003 THINGS			
		A AIRPLANES 1, 7 AND ON			
					33/
					20
	N II				



FIGURE	PART NUMBER	NOMENCLATURE	USAGE		UNITS
NDEX NO.	- MINITER		FROM	TO	PER ASSEMBL
-886	22-64907-1	1 2 3 4 5 6  - HARNESS ASSEMBLY, PYLON 4 MISCELLANEOUS 1	В		1
000	22 04101	FIREWALL DISCONNECT TO REAR SPAR	D		'
	22-64907	. HARNESS ASSEMBLY, PYLON 4 MISCELLANEOUS 1	2	6	1
	22 (1007 7	FIREWALL DISCONNECT TO REAR SPAR			
	22-64907-3	HARNESS ASSEMBLY, PYLON 4 MISCELLANEOUS 1 FIREWALL DISCONNECT TO REAR SPAR	11		1
	AN3057-16A	- ADAPTER	1		1
	FW00-28-21P	CONNECTOR, CONVAIR 92-50292-002 -V71468-	_ i i		i
0.07	320570	SPLICE, CONVAIR 98-34001-002 -V00779-	i		1
-887	22-64955	- HARNESS ASSEMBLY, PYLON 4 MISCELLANEOUS 2 FIREWALL DISCONNECT TO REAR SPAR	1 1		1
	AN3057-16A	. ADAPTER	1 1		1
	FW00-24-21P	- CONNECTOR, CONVAIR 98-50292-001 -V71468-	i		1
-888	22-64915	- HARNESS ASSEMBLY, PYLON 4 MISCELLANEOUS 3	i		i
		FIREWALL DISCONNECT TO REAR SPAR			
	225-0017-000 CA00KE28-12P	- PLUG, CONVAIR 96-91200-007 -V71468- - CONNECTOR, CONVAIR 92-50291-004 -V71468-			8
-889	22-64923	- HARNESS ASSEMBLY, PYLON 4 EXHAUST GAS			
//		TEMPERATURE FIREWALL DISCONNECT TO			'
		REAR SPAR			
	CAOOKE12S3P	CONNECTOR, CONVAIR 92-50291-007 -V71468-	1		1
	AN5548-8 AN5548-7	- TERMINAL, CONVAIR 98-90819-008 - TERMINAL, CONVAIR 98-90819-007			1 1
-890	22-64946	. HARNESS ASSEMBLY. PYLON 4 HYDRAULIC	22. 3		1 1
		PRESSURE SWITCH TO REAR SPAR			١,
	225-0017-000	PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	EX06-14S7S	- CONNECTOR, CONVAIR 92-40332-006 -V71468-	1 1		1
	031-0550-000	- TERMINAL, CONVAIR 98-90805-003 -V00729- - CONTACT, CONVAIR 92-63901-009 -V71468-			
-891	22-64964-1	- HARNESS ASSEMBLY, PYLON 4 FIRE DETECTOR			3
		FIREWALL TO SPLICE			'
	35303-2	FITTING, END MFR TO SPEC CONT 22-02427-16	1		1
	225-0017-000	-V73168-			
	CA00KE14S5S	- PLUG, CONVAIR 96-91200-007 -V71468- - CONNECTOR, CONVAIR 92-50291-006 -V71468-			2
		30271 000 111700			,
		B AIRPLANES 1 AND 7 THRU 10			
	1 1 1 1 1 1		73.18		
			4:		
	1/20				10
			*		
	Mary III - III				
	18 10				2
					-
	31 14 4				
					1.5
					- 54
	7 7 la Ta				
		La contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contraction of the contractio			
	1 2 1 20				



FIGURE	PART NUMBER	NOMENCLATURE	USA	GE DE	UNITS
INDEX NO.	PART NOMBER	A CONTRACTOR OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF THE PARTY OF TH	FROM	TO	ASSEMBLY
# -892 -893	MS3100R10SL4P 225-0017-000 S0-1015-4309 CA06KE14S2S CA06KE22-19P CA06KE10S2S 320551 320552 031-0550-000 320562 320559 22-61342-279 22-61342-181 22-64966	1 2 3 4 5 6  HARNESS ASSEMBLY, PYLUN & FIRE EXTINGUISHER AND DETECTOR CONTRUL UNIT TO PYLON DISCONNECT  RECEPTACLE  PLUG, CONVAIR 96-91200-007 -V71468-  SOCKET, CONVAIR 98-24506-006 -V00614-  CONNECTOR, CONVAIR 92-40327-004 -V71468-  CONNECTOR, CONVAIR 92-40327-010 -V71468-  CONNECTOR, CONVAIR 92-40327-016 -V71468-  TERMINAL, CONVAIR 92-40327-016 -V71468-  TERMINAL, CONVAIR 98-90805-020 -V00779-  TERMINAL, CONVAIR 98-90805-026 -V00779-  SPLICE, CONVAIR 98-34001-001 -V00779-  SPLICE, CONVAIR 98-34001-001 -V00779-  NAMEPLATE, OVERHEAT TEST REC  NAMEPLATE, FIRE TES REC  HARNESS ASSEMBLY, PYLON & FIRE EXTINGUISHER GAGE TO DISCONNECT	FROM	ТО	1 2 2 2 2 2 2 2 3 4 1 1 1 1
-894	EX06-105L4S 031-0550-000 22-65507-3 22-65507 22-65507-801 CT00E24-21P EX06-105L3S EX06-1253S EX06-105L4S 031-0614-000 320562	CONNECTOR, CONVAIR 92-40332-002 -V71468- CONTACT, CONVAIR 92-63901-011 -V71468- HARNESS ASSEMBLY, POD 4 NOSE COWL EQUIPMENT TO ENGINE DISCONNECT HARNESS ASSEMBLY, POD 4 NOSE COWL EQUIPMENT TO ENGINE DISCONNECT HARNESS ASSEMBLY, POD 4 NOSE COWL EQUIPMENT TO ENGINE DISCONNECT CONNECTOR, CONVAIR 92-50293-016 -V71468- CONNECTOR, CONVAIR 92-40332-001 -V71468- CONNECTOR, CONVAIR 92-40332-003 -V71468- CONNECTOR, CONVAIR 92-40332-002 -V71468- CONNECTOR, CONVAIR 92-40332-002 -V71468- SPLICE, CONVAIR 98-34001-001 -V00779-  C AIRPLANES 1 AND 8 THRU 10	1 1 C 2 11 3 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	7	2 4 1 1 1 1 1 1 2 9